

ABB GENERAL PURPOSE DRIVES

# ACS580-07

## Hardware manual







# ACS580-07

## Hardware manual

Table of contents



1. Safety instructions



4. Mechanical installation



5. Guidelines for planning the electrical installation



6. Electrical installation



9. Start-up





# Table of contents

---

## 1 Safety instructions

Contents of this chapter .....	17
Use of warnings and notes .....	17
General safety in installation, start-up and maintenance .....	18
Electrical safety in installation, start-up and maintenance .....	20
Electrical safety precautions .....	20
Additional instructions and notes .....	23
Optical components .....	24
Printed circuit boards .....	24
Grounding .....	25
General safety in operation .....	26
Additional instructions for permanent magnet motor drives .....	26
Safety in installation, start-up, maintenance .....	26
Safety in operation .....	27

## 2 Introduction to the manual

Contents of this chapter .....	29
Target audience .....	29
Purpose of the manual .....	29
Categorization by frame size and option code .....	29
Quick installation flowchart .....	30
Terms and abbreviations .....	31
Related documents .....	32

## 3 Operation principle and hardware description

Contents of this chapter .....	35
Product overview .....	36
Layout .....	37
General information on the cabinet layout .....	37
Cabinet layout – R6 and R7 (bottom entry and exit of cables) .....	38
Cabinet layout – R6 and R7 (top entry and exit of cables, options +H351 and +H53) .....	39
Cabinet layout – R8 and R9 (bottom entry and exit of cables) .....	40
Cabinet layout – R8 and R9 (top entry and exit of cables, options +H351 and +H53) .....	41
Mounting plate – R6 to R9 .....	42
Cabinet layout – R10 and R11 (bottom entry and exit of cables) .....	45

---

Cabinet layout – R10 and R11 (top entry and exit of cables, options +H351 and +H353) .....	47
Mounting plate – R10 and R11 .....	48
Cooling air flow .....	50
Door switches and lights .....	51
Main switch-disconnector Q1 .....	51
Control panel .....	51
Control by PC tools .....	52
Common mode filter .....	52
Overview of power and control connections .....	53
Descriptions of options .....	54
Degree of protection .....	54
Definitions .....	54
IP21 (UL Type 1) .....	54
IP42 (UL Type 1 Filtered) (option +B054) .....	54
IP54 (UL Type 12) (option +B055) .....	54
UL Listed (option +C129) .....	54
Plinth height (options +C164 and +C179) .....	55
Empty cubicles on right (options +C196...C198) .....	55
Empty cubicles on left (options +C199...C201) .....	55
du/dt filter (option +E205) .....	55
Common mode filter (option +E208) .....	55
Molded case circuit breaker (MCCB, option +F289) .....	55
Cabinet heater with external supply (option +G300) .....	56
Terminals for external control voltage (option +G307) .....	56
Ready/Run/Fault lights (options +G327...G329) .....	56
Top cable entry/exit (options +H351 and +H353) .....	56
Cable conduit entry (option +H358) .....	56
Additional terminal block X504 (option +L504) .....	57
Starter for auxiliary motor fan (options +M6xx) .....	57
What the option contains .....	57
Description .....	57
Cables accepted by the terminals of the additional I/O terminal block (option +L504) .....	57
Type designation label .....	58
Type designation key .....	58
Basic code .....	58
Option codes .....	59

#### 4 Mechanical installation

Contents of this chapter .....	63
Examining the installation site .....	63
Necessary tools .....	64
Moving and unpacking the drive .....	64
Unpacking the transport package .....	67

Examining the delivery .....	68
Lifting the cabinet .....	68
Lifting lugs .....	70
Moving the cabinet after unpacking .....	72
Moving the cabinet with rollers .....	73
Moving the cabinet to its final placement with a slate bar .....	73
Attaching the cabinet to the floor and wall or roof .....	73
General rules .....	73
Attaching the cabinet (non-marine units) .....	74
Alternative 1 – Clamping .....	74
Alternative 2 – Using the holes inside the cabinet .....	76
Alternative 3 – Cabinets with plinth options +C164 and +C179 .....	77
Miscellaneous .....	78
Cable duct in the floor below the cabinet .....	78
Arc welding .....	78

## 5 Guidelines for planning the electrical installation

Contents of this chapter .....	79
Limitation of liability .....	79
Selecting the supply disconnecting device .....	79
Selecting the main contactor or breaker .....	79
Examining the compatibility of the motor and drive .....	80
Protecting the motor insulation and bearings .....	80
Requirements table .....	80
Availability of $du/dt$ filter and common mode filter by drive type .....	83
Additional requirements for explosion-safe (EX) motors .....	83
Additional requirements for ABB motors of types other than M2_, M3_, M4_, HX_ and AM_ .....	83
Additional requirements for ABB high-output and IP23 motors .....	83
Additional requirements for non-ABB high-output and IP23 motors ..	84
Additional data for calculating the rise time and the peak line-to-line voltage .....	85
Selecting the power cables .....	87
General guidelines .....	87
Typical power cable sizes .....	88
Power cable types .....	88
Preferred power cable types .....	88
Alternate power cable types .....	89
Not allowed power cable types .....	90
Additional guidelines, North America .....	90
Metal conduit .....	91
Power cable shield .....	91
Selecting the control cables .....	92
Shielding .....	92
Signals in separate cables .....	92



Signals that can be run in the same cable .....	92
Relay cable .....	92
Control panel to drive cable .....	92
PC tool cable .....	92
Routing the cables .....	93
General guidelines – IEC .....	93
General guidelines – North America .....	94
Continuous motor cable shield/conduit or enclosure for equipment on the motor cable .....	95
Separate control cable ducts .....	95
Implementing short-circuit and thermal overload protection .....	95
Protecting the input cabling and drive in short-circuits .....	95
Protecting the motor and motor cable in short-circuits .....	96
Protecting the drive and the power cables against thermal overload .....	96
Protecting the motor against thermal overload .....	96
Protecting the drive against ground faults .....	97
Residual current device compatibility .....	97
Implementing the emergency stop function .....	97
Implementing the Safe torque off function .....	97
Implementing the power loss ride-through function .....	97
Using power factor compensation capacitors with the drive .....	98
Using a safety switch between the drive and the motor .....	99
Implementing an ATEX-certified motor thermal protection .....	99
Controlling a contactor between drive and motor .....	99
Implementing a bypass connection .....	100
Protecting the contacts of relay outputs .....	100
Implementing a motor temperature sensor connection .....	101
Connecting motor temperature sensor to the drive via an option module ....	102
Supplying power for the auxiliary circuits .....	104

## 6 **Electrical installation**

Contents of this chapter .....	105
Warning .....	105
Attaching the device stickers on the cabinet door .....	105
Layout of the cable entries (frames R6...R9) .....	106
Layout of the cable entries (frames R10 and R11) .....	107
Connecting the motor cable at the motor end .....	107
Measuring the insulation .....	108
Measuring the insulation of the drive .....	108
Measuring the insulation of the input power cable .....	108
Measuring the insulation of the motor and motor cable .....	108
Grounding system compatibility check .....	109
Connecting the power cables .....	109
Preparing the cable ends and making 360-degree grounding at the cable entry .....	109

Connection diagram .....	111
Connection procedure (frames R6...R9) .....	113
Connection procedure (frames R6 and R7 with options +H351 and +H353) .....	114
Connection procedure (frames R8 and R9 with options +H351 and +H353) .....	116
Connection procedure (frames R10 and R11) .....	119
Connection procedure (frames R10 and R11 with options +H351 and +H353) .....	120
Connecting the control cables .....	123
Overview of control cable connection procedure .....	124
Grounding the outer shields of the control cables at the cabinet entry .....	124
Routing the control cables inside the cabinet .....	128
Connecting external wiring to the control unit or optional I/O terminal block ..	131
Connecting the emergency stop push buttons (options +Q951 and +Q963) ..	132
Frames R6...R9 .....	132
Frames R10 and R11 .....	133
Connecting the Safe torque off circuit .....	133
Connecting external power supply wires for the cabinet heater (option +G300) .....	133
Setting the voltage range of the auxiliary control voltage transformer (T21) .....	134
Connecting a PC .....	135
Installing option modules .....	136
Option slot 2 (I/O extension modules) .....	136
Option slot 1 (fieldbus adapter modules) .....	137
Wiring the optional modules .....	137

## 7 Control unit

Contents of this chapter .....	139
Layout .....	140
Default I/O connection diagram .....	141
Switches .....	143
Additional information on I/O connections .....	143
Connection for obtaining 0...10 V from analog output 2 (AO2) .....	143
Connection examples of two-wire and three-wire sensors to analog input (AI2) .....	143
DI5 as frequency input .....	144
DI6 as PTC input .....	144
AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1) .....	144
Safe torque off (X4) .....	145
Technical data .....	146

## 8 Installation checklist

Contents of this chapter .....	151
Checklist .....	151

## 9 Start-up

Contents of this chapter .....	153
Start-up procedure .....	153

## 10 Fault tracing

Contents of this chapter .....	155
Warning and fault messages .....	155

## 11 Maintenance

Contents of this chapter .....	157
Maintenance intervals .....	157
Descriptions of symbols .....	157
Recommended annual maintenance actions by the user .....	158
Recommended maintenance intervals after start-up .....	158
Cleaning the interior of the cabinet .....	159
Cleaning the air inlet (door) meshes (IP42 / UL Type 1 Filtered) .....	159
Replacing the air filters (IP54 / UL Type 12) .....	160
Inlet (door) filters (IP54 / UL Type 12) .....	161
Outlet (roof) filters (IP54 / UL Type 12) .....	161
Heatsink (frames R6 to R9) .....	162
Fans .....	162
Replacing the door fan (frames R6...R9) .....	162
Replacing the cabinet fan (frames R6...R9) .....	163
Replacing the door fan (frames R10 and R11) .....	164
Replacing the cabinet fan (frames R10 and R11, IP54 / UL Type 12) .....	166
Replacing the drive module main fans (frames R6...R8) .....	167
Replacing the drive module main fans (frame R9) .....	168
Replacing the drive module main fans (frames R10 and R11) .....	169
Replacing the auxiliary cooling fan of the drive module (frames R6...R9) ...	170
Replacing the circuit board compartment cooling fans (frames R10 and R11) .....	172
Replacing the drive module (frames R6...R9) .....	172
Replacing the drive module (frames R10 and R11) .....	180
Replacing the drive module (frames R10 and R11, IP54 / UL Type 12) .....	186
Capacitors .....	192
Reforming the capacitors .....	192
Fuses .....	192
Replacing AC fuses (frames R6 and R7) .....	192
Replacing AC fuses .....	193





Control panel .....	194
Cleaning the control panel .....	194
Replacing the battery .....	194

## 12 Technical data

Contents of this chapter .....	195
Ratings .....	195
IEC ratings .....	195
UL (NEC) ratings .....	196
Definitions .....	197
Output derating .....	197
Ambient temperature derating .....	197
Drive types other than -0414A-4 and -0430A-4 .....	197
Drive types -0414A-4 and -0430A-4 .....	198
Altitude derating .....	198
Deratings for special settings in the drive control program .....	199
Fuses (IEC) .....	200
Fuses (UL) .....	202
Fuses for branch circuit protection .....	203
Dimensions and weights .....	203
Free space requirements .....	204
Maximum allowed plinth height for the extraction/installation ramp .....	205
Typical power cable sizes .....	205
Losses, cooling data and noise .....	206
Terminal and entry data for the power cables .....	207
IEC – Standard configuration .....	207
IEC – With option +E205 .....	208
US – Standard configuration .....	208
US – With option +E205 .....	209
Connection drawings .....	210
Terminal and connection data for auxiliary control circuits .....	236
Electrical power network specification .....	237
Motor connection data .....	237
Control unit connection data .....	238
Efficiency .....	238
Protection classes .....	238
Ambient conditions .....	239
Auxiliary circuit power consumption .....	240
Materials .....	240
Cabinet .....	240
Finish .....	240
Package .....	240
Vertical package .....	240
Horizontal package .....	241



Package dimensions and weights for drives without empty cubicles (without options +C196 ... +C201) .....	241
Package weights .....	242
Applicable standards .....	243
Markings .....	244
CE marking .....	244
Compliance with the European Low Voltage Directive .....	244
Compliance with the European EMC Directive .....	245
Compliance with the European Machinery Directive .....	245
Compliance with the EN 61800-3:2004 .....	246
Definitions .....	246
Category C2 .....	246
Category C3 .....	246
Category C4 .....	247
UL marking .....	248
UL and CSA checklist .....	248
Design lifetime expectancy .....	249
Disclaimers .....	250
Generic disclaimer .....	250
Cybersecurity disclaimer .....	250

### 13 *Dimension drawings*

Frames R6 and R7 (IP21, UL Type 1) .....	252
Frames R6 and R7 (+B054: IP42, UL Type 1 Filtered) .....	253
Frames R6 and R7 (+B055: IP54, UL Type 12) .....	254
Frames R6 and R7 (+H351 and +H353: top entry and exit) .....	255
Frames R6 and R7 (+F289) .....	256
Frames R6 and R7 (+F289, +H351, +H353) .....	257
Frames R8 and R9 (IP21, UL Type 1) .....	258
Frames R8 and R9 (+B054: IP42, UL Type 1 Filtered) .....	259
Frames R8 and R9 (+B055: IP54, UL Type 12) .....	260
Frames R8 and R9 (+H351 and +H353: top entry and exit) .....	261
Frames R8 and R9 (+F289) .....	262
Frames R8 and R9 (+F289, +H351, +H353) .....	263
Frames R10 and R11 (IP21, UL Type 1) .....	264
Frames R10 and R11 (+B054: IP42, UL Type 1 Filtered) .....	265
Frames R10 and R11 (+B055: IP54, UL Type 12) .....	266
Frames R10 and R11 (+F289) .....	267
Frames R10 and R11 (+H351, +H353) .....	268
Frames R10 and R11 (+B054: IP42, UL type 1 filtered, +H351, +H353) .....	269
Frames R10 and R11 (+B055: IP54, UL type 12, +H351, +H353) .....	270

### 14 *The Safe torque off function*

Contents of this chapter .....	271
--------------------------------	-----

Description .....	271
Compliance with the European Machinery Directive .....	272
Wiring .....	273
Connection principle .....	273
Single ACS580-07 drive, internal power supply .....	273
Single ACS580-07 drive, external power supply .....	274
Wiring examples .....	274
Single ACS580-07 drive, internal power supply .....	274
Single ACS580-07 drive, external power supply .....	275
Multiple ACS580-07 drives, internal power supply .....	276
Multiple ACS580-07 drives, external power supply .....	277
Activation switch .....	278
Cable types and lengths .....	278
Grounding of protective shields .....	278
Operation principle .....	279
Start-up including acceptance test .....	280
Competence .....	280
Acceptance test reports .....	280
Acceptance test procedure .....	280
Use .....	282
Maintenance .....	284
Competence .....	284
Fault tracing .....	285
Safety data .....	286
Abbreviations .....	287
TÜV certificate .....	288
Declaration of conformity .....	289

## **15 CBAI-01 bipolar analog IO adapter module**

Contents of this chapter .....	291
Product overview .....	291
Layout .....	292
Mechanical installation .....	292
Necessary tools .....	292
Unpacking and examining the delivery .....	292
Installing the module .....	293
Electrical installation .....	293
Necessary tools .....	293
Wiring .....	293
Start-up .....	294
Setting the parameters .....	294
Parameter setting example for AI1 .....	294
Diagnostics .....	294
LEDs .....	294
Technical data .....	294

Dimension drawing .....	295
-------------------------	-----

## 16 CHDI-01 115/230 V digital input extension module

Contents of this chapter .....	297
Product overview .....	297
Layout and connection examples .....	298
Mechanical installation .....	299
Necessary tools .....	299
Unpacking and examining the delivery .....	299
Installing the module .....	299
Electrical installation .....	299
Necessary tools .....	299
Wiring .....	299
Start-up .....	299
Setting the parameters .....	299
Parameter setting example for relay output .....	300
Fault and warning messages .....	300
Technical data .....	300
Dimension drawing .....	301

## 17 CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O)

Contents of this chapter .....	303
Product overview .....	303
Layout and example connections .....	304
Mechanical installation .....	305
Necessary tools .....	305
Unpacking and examining the delivery .....	305
Installing the module .....	305
Electrical installation .....	305
Necessary tools .....	305
Wiring .....	305
Start-up .....	306
Setting the parameters .....	306
Diagnostics .....	307
Faults and warning messages .....	307
LEDs .....	307
Technical data .....	307
Dimension drawing .....	308

## 18 CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)

Contents of this chapter .....	311
--------------------------------	-----

Product overview .....	311
Layout and example connections .....	312
Mechanical installation .....	313
Necessary tools .....	313
Unpacking and examining the delivery .....	313
Installing the module .....	313
Electrical installation .....	313
Necessary tools and instructions .....	313
Wiring .....	314
Start-up .....	314
Setting the parameters .....	314
Diagnostics .....	314
Faults and warning messages .....	314
LEDs .....	314
Technical data .....	314
Dimension drawing .....	315

## **19 Disconnecting EMC filter and ground-to-phase varistor**



When to disconnect the ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems .....	317
Guidelines for installing the drive to a TT system .....	319
Identifying the grounding system of the electrical power network .....	319
Disconnecting the EMC filter and ground-to-phase varistor (frames R6...R9) ....	321
Disconnecting the ground-to-phase varistor (frames R10 and R11) .....	321

### *Further information*



## 1

# Safety instructions

---

## Contents of this chapter

This chapter contains the safety instructions which you must obey when you install, start up, operate and do maintenance work on the drive. If you ignore the safety instructions, injury, death or damage can occur.



## Use of warnings and notes

Warnings tell you about conditions which can cause injury or death, or damage to the equipment. They also tell you how to prevent the danger. Notes draw attention to a particular condition or fact, or give information on a subject.

The manual uses these warning symbols:

**WARNING!**

Electricity warning tells about hazards from electricity which can cause injury or death, or damage to the equipment.

---

**WARNING!**

General warning tells about conditions, other than those caused by electricity, which can cause injury or death, or damage to the equipment.

---

**WARNING!**

Electrostatic sensitive devices warning tells you about the risk of electrostatic discharge which can cause damage to the equipment.

---

## General safety in installation, start-up and maintenance


These instructions are for all personnel who do work on the drive.



### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- Keep the drive in its package until you install it. After unpacking, protect the drive from dust, debris and moisture.
- Use the required personal protective equipment: safety shoes with metal toe cap, safety glasses, protective gloves and long sleeves, etc. Some parts have sharp edges.
- Lift a heavy drive with a lifting device. Use the designated lifting points. See the dimension drawings.
- Incorrect lifting can cause danger or damage. Obey the local laws and regulations applicable to lifting, such as requirements for planning the lift, for capacity and condition of lifting equipment, and for training of personnel.
- Attach the drive cabinet to the floor to prevent it from toppling over. The cabinet has a high center of gravity. When you pull out heavy components or power modules, there is a risk of overturning. Attach the cabinet also to the wall when necessary.

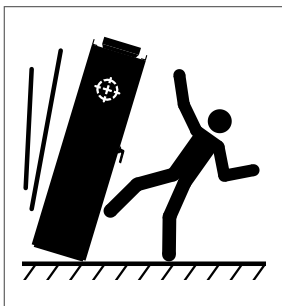


- Do not stand or walk on the cabinet roof. Make sure that nothing presses against the roof, side or back plates or door. Do not store anything on the roof while the drive is in operation.
- Do not use the module extraction/installation ramp with plinth heights which exceeds the maximum allowed height. See the technical data.
- Attach the module extraction/installation ramp carefully.
- Make sure that the module does not topple over when you move it on the floor: Open the support legs by pressing each leg a little down and turning it aside (1, 2). Whenever possible attach the module also with chains. Do not tilt the drive module.



It is heavy and its center of gravity is high. The module overturns from a sideways tilt of 5 degrees. Do not leave the module unattended on a sloping floor.

- To prevent the drive module from falling, attach its top lifting lugs with chains to the cabinet (1) before you push the module into the cabinet and pull it from the cabinet. Push the module into the cabinet and pull it from the cabinet carefully preferably with help from another person. Keep a constant pressure with one foot on the base of the module (2) to prevent the module from falling on its back.

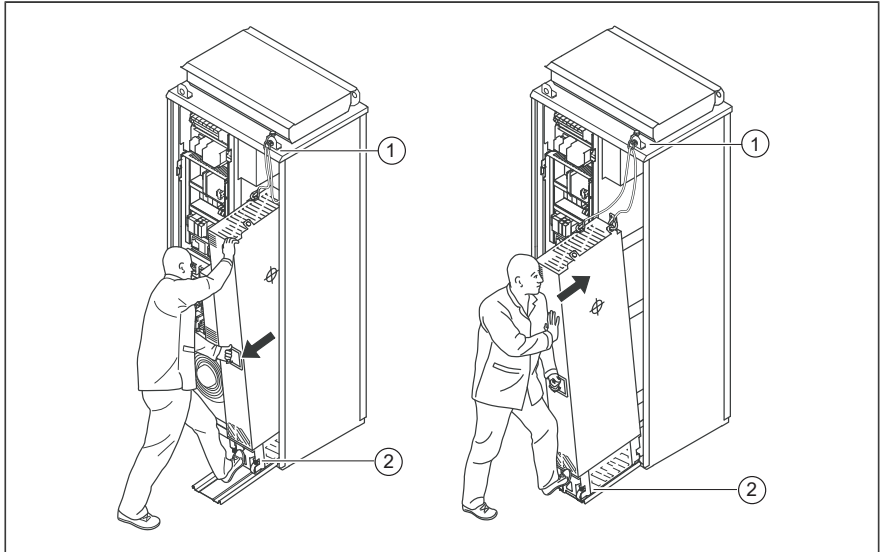

- Beware of hot surfaces. Some parts, such as heatsinks of power semiconductors, and brake resistors, remain hot for a while after disconnection of the electrical supply.
- Vacuum clean the area around the drive before the start-up to prevent the drive cooling fan from drawing the dust inside the drive.
- Make sure that debris from drilling, cutting and grinding does not enter the drive during the installation. Electrically conductive debris inside the drive may cause damage or malfunction.
- Make sure that there is sufficient cooling. See the technical data.
- Keep the cabinet doors closed when the drive is powered. With the doors open, a risk of a potentially fatal electric shock, arc flash or high-energy arc blast exists. If you cannot avoid working on a powered drive, obey the local laws and regulations on live working (including – but not limited to – electric shock and arc protection).
- Before you adjust the drive operation limits, make sure that the motor and all driven equipment can operate throughout the set operation limits.



- Before you activate the automatic fault reset or automatic restart functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault or supply break. If these functions are activated, the installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".
- The maximum drive power cycles is five times in ten minutes. Power cycling the drive too often can damage the charging circuit of the DC capacitors.
- If you have connected safety circuits to the drive (for example, Safe torque off or emergency stop), validate them at start-up. See separate instructions for the safety circuits.
- Beware of hot air exiting from the air outlets.
- Do not cover the air inlet or outlet when the drive is running.

### Note:

- If you select an external source for the start command and it is on, the drive will start immediately after fault reset unless you configure the drive for pulse start. See the firmware manual.
- If the drive is in remote control mode, you cannot stop or start the drive with the control panel.
- Only authorized persons are allowed to repair a malfunctioning drive.



## Electrical safety in installation, start-up and maintenance

### ■ Electrical safety precautions

These electrical safety precautions are for all personnel who do work on the drive, motor cable or motor.



#### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

If you are not a qualified electrical professional, do not do installation or maintenance work.


Go through these steps before you begin any installation or maintenance work.

1. Clearly identify the work location and equipment.
2. Disconnect all possible voltage sources. Make sure that re-connection is not possible. Lock out and tag out.
  - Open the main disconnecting device of the drive.


- Open the charging switch if present.
  - Open the disconnecter of the supply transformer. (The main disconnecting device in the drive cabinet does not disconnect the voltage from the AC input power busbars of the drive cabinet.)
  - Open the auxiliary voltage switch-disconnector (if present), and all other possible disconnecting devices that isolate the drive from dangerous voltage sources.
  - If you have a permanent magnet motor connected to the drive, disconnect the motor from the drive with a safety switch or by other means.
  - Disconnect all dangerous external voltages from the control circuits.
  - After you disconnect power from the drive, always wait 5 minutes to let the intermediate circuit capacitors discharge before you continue.
3. Protect any other energized parts in the work location against contact.
  4. Take special precautions when close to bare conductors.
  5. Measure that the installation is de-energized. If the measurement requires removal or disassembly of shrouding or other cabinet structures, obey the local laws and regulations applicable to live working (including – but not limited to – electric shock and arc protection).
    - Before and after measuring the installation, verify the operation of the voltage tester on a known voltage source.
    - Make sure that the voltage between the drive input power terminals (L1, L2, L3) and the grounding (PE) busbar is zero.



Measuring points of frames R6 to R9 are shown below.

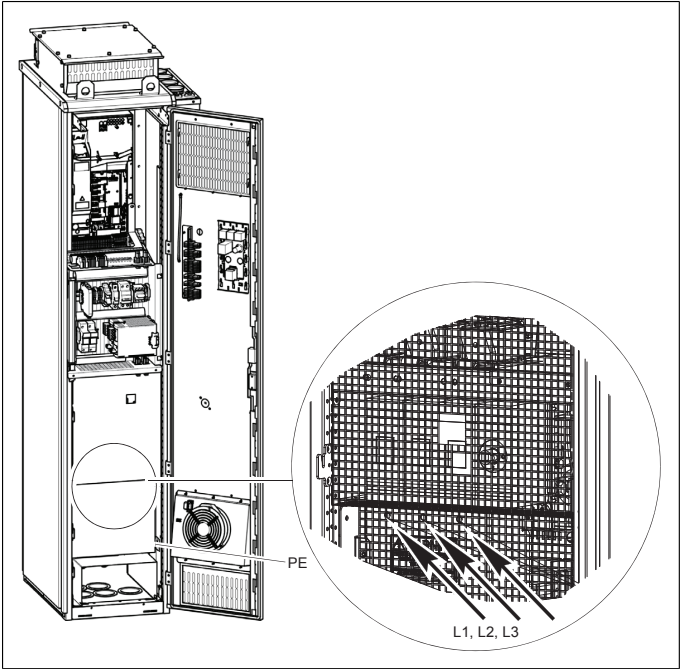

Measuring points of frames R10 and R11 are shown below. You can also remove the metallic shield and measure through the holes in the clear plastic shroud behind it.

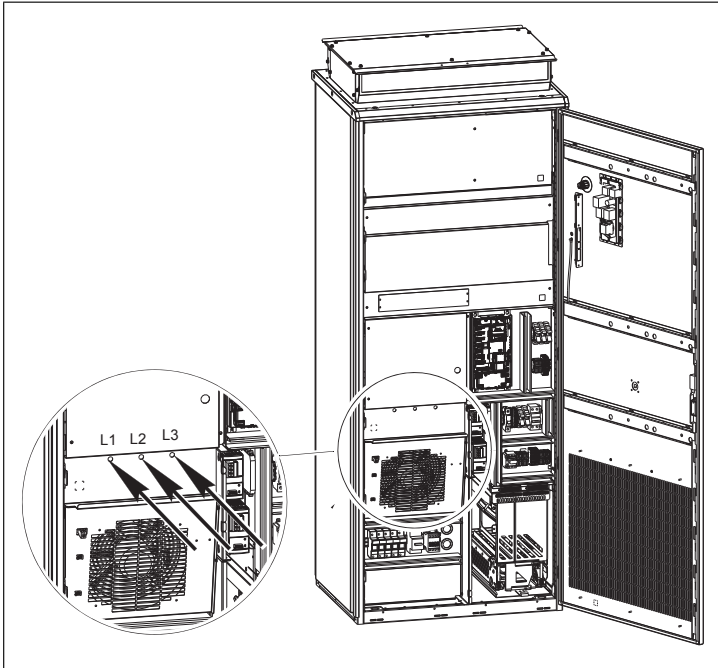

- Make sure that the voltage between the drive output terminals (T1/U, T2/V, T3/W) and the grounding (PE) busbar is zero.
- Make sure that the voltage between the drive DC terminals (UDC+ and UDC-) and the grounding (PE) terminal is zero.

6. Install temporary grounding as required by the local regulations.
7. Ask the person in control of the electrical installation work for a permit to work.

#### ■ Additional instructions and notes



#### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

If you are not a qualified electrical professional, do not do installation or maintenance work.

- Keep the cabinet doors closed when the drive is powered. With the doors open, a risk of a potentially fatal electric shock, arc flash or high-energy arc blast exists.
- Make sure that the electrical power network, motor/generator, and environmental conditions agree with the drive data.
- Do not do insulation or voltage withstand tests on the drive.
- If you have a cardiac pacemaker or other electronic medical device, keep away from the area near motor, drive, and the drive power cabling when the drive is in operation. There are electromagnetic fields present which can interfere with the function of such devices. This can cause a health hazard.
- ABB recommends against attaching the cabinet by arc welding. If you have to, obey the welding instructions in the drive manuals.

### Note:

- The motor cable terminals of the drive are at a dangerous voltage when the input power is on, regardless of whether the motor is running or not.
- When the input power is on, the drive DC bus is at a dangerous voltage.
- External wiring can supply dangerous voltages to the relay outputs of the control units of the drive.
- The Safe torque off function does not remove the voltage from the main and auxiliary circuits. The function is not effective against deliberate sabotage or misuse.



### Optical components

---



#### **WARNING!**

Obey these instructions. If you ignore them, damage to the equipment can occur.

---

- Handle the fiber optic cables with care.
- When you unplug the fiber optic cables, always hold the connector, not the cable itself.
- Do not touch the ends of the fibers with bare hands as the ends are extremely sensitive to dirt.
- Do not bend the fiber optic cables too tightly. The minimum allowed bend radius is 35 mm (1.4 in).

### Printed circuit boards

---



#### **WARNING!**

Use a grounding wrist band when you handle printed circuit boards. Do not touch the boards unnecessarily. The boards contain components sensitive to electrostatic discharge.

---

---

## ■ Grounding

These instructions are for all personnel who are responsible for the grounding of the drive.



### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or equipment malfunction can occur, and electromagnetic interference can increase.

If you are not a qualified electrical professional, do not do grounding work.

---

- Always ground the drive, the motor and adjoining equipment. This is necessary for the personnel safety. Proper grounding also reduces electromagnetic emission and interference.
- Make sure that the conductivity of the protective earth (PE) conductors is sufficient. See the electrical planning instructions of the drive. Obey the local regulations.
- Connect the power cable shields to protective earth (PE) terminals of the drive to make sure of personnel safety.
- Make a 360° grounding of the power and control cable shields at the cable entries to suppress electromagnetic disturbances.
- In a multiple-drive installation, connect each drive separately to the protective earth (PE) busbar of the power supply.

### **Note:**

- You can use power cable shields as grounding conductors only when their conductivity is sufficient.
  - As the normal touch current of the drive is higher than 3.5 mA AC or 10 mA DC, you must use a fixed protective earth (PE) connection. The minimum size of the protective earth conductor must comply with the local safety regulations for high protective earth conductor current equipment. See standard IEC/EN 61800-5-1 (UL 61800-5-1) and the electrical planning instructions of the drive.
- 



## General safety in operation

These instructions are for all personnel that operate the drive.

---



### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

---

- Keep the cabinet doors closed when the drive is powered. With the doors open, a risk of a potentially fatal electric shock, arc flash or high-energy arc blast exists.
- If you have a cardiac pacemaker or other electronic medical device, keep away from the area near motor, drive, and the drive power cabling when the drive is in operation. There are electromagnetic fields present which can interfere with the function of such devices. This can cause a health hazard.
- Give a stop command to the drive before you reset a fault. If you have an external source for the start command and the start is on, the drive will start immediately after the fault reset, unless you configure the drive for pulse start. See the firmware manual.
- Before you activate the automatic fault reset or automatic restart functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault or supply break. If these functions are activated, the installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".



### **Note:**

- The maximum drive power cycles is five times in ten minutes. Power cycling the drive too often can damage the charging circuit of the DC capacitors. If you need to start or stop the drive, use the control panel keys or commands through the I/O terminals of the drive.
- If the drive is in remote control mode, you cannot stop or start the drive with the control panel.

## Additional instructions for permanent magnet motor drives

### ■ Safety in installation, start-up, maintenance

These are additional warnings concerning permanent magnet motor drives. The other safety instructions in this chapter are also valid.

---



### **WARNING!**

Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

---



If you are not a qualified electrical professional, do not do installation or maintenance work.

---

- Do not do work on the drive when a rotating permanent magnet motor is connected to it. A rotating permanent magnet motor energizes the drive including its input and output power terminals.

Before installation, start-up and maintenance work on the drive:

- Stop the drive.
- Disconnect the motor from the drive with a safety switch or by other means.
- If you cannot disconnect the motor, make sure that the motor cannot rotate during work. Make sure that no other system, like hydraulic crawling drives, can rotate the motor directly or through any mechanical connection like belt, nip, rope, etc.
- Do the steps in section [Electrical safety precautions \(page 20\)](#).
- Install temporary grounding to the drive output terminals (T1/U, T2/V, T3/W). Connect the output terminals together as well as to the PE.

During the start up:

- Make sure that the motor cannot run overspeed, for example, driven by the load. Motor overspeed causes overvoltage that can damage or destroy the capacitors in the intermediate circuit of the drive.



## ■ Safety in operation

---



### **WARNING!**

Make sure that the motor cannot run overspeed, for example, driven by the load. Motor overspeed causes overvoltage that can damage or destroy the capacitors in the intermediate circuit of the drive.

---



# 2

## Introduction to the manual

---

### Contents of this chapter

This chapter describes the intended audience and contents of the manual. It contains a flowchart of steps in examining the delivery, installing and commissioning the drive. The flowchart refers to chapters/sections in this manual and other manuals.

### Target audience

This manual is intended for people who plan the installation, install, start up and do maintenance work on the drive, or create instructions for the end user of the drive concerning the installation and maintenance of the drive.

Read the manual before working on the drive. You are expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

### Purpose of the manual

This manual provides information needed for planning the installation, installing, and servicing the drive.








### Categorization by frame size and option code

The frame size identifies information which concerns only a certain frame size of the drive. The frame size is shown on the type designation label. All frame sizes are listed in the technical data.

The option code (+A123) identifies information which concerns only a certain optional selection. The options included in the drive are listed on the type designation label.

---

# Quick installation flowchart

Task	See
Plan the electrical installation and acquire the accessories needed (cables, fuses, etc.). Check the ratings, required cooling air flow, input power connection, compatibility of the motor, motor connection, and other technical data.	<a href="#">Guidelines for planning the electrical installation (page 79)</a> <a href="#">Technical data (page 195)</a>
	
Check the installation site.	<a href="#">Ambient conditions (page 239)</a>
	
Unpack and check the units (only intact units may be started up). Examine that all necessary option modules and equipment are present and correct. Mount the drive.	<a href="#">Mechanical installation (page 63)</a> If the drive has been non-operational for more than one year, the converter DC link capacitors need to be reformed ( <a href="#">Reforming the capacitors (page 192)</a> )
	
Route the cables.	<a href="#">Routing the cables (page 93)</a>
	
Check the insulation of the supply cable, the motor and the motor cable.	<a href="#">Measuring the insulation of the motor and motor cable (page 108)</a>
	
Connect the power cables. Connect the control cables.	<a href="#">Connecting the power cables (page 109)</a> , <a href="#">Connecting the control cables (page 123)</a>
	
Check the installation.	<a href="#">Installation check-list (page 151)</a>
	
Start the drive up.	<a href="#">Start-up (page 153)</a>

**Task****See**

Operate the drive: start, stop, speed control etc.

[Start-up \(page 153\)](#) and  
firmware manual

## Terms and abbreviations

Term/ Abbrevi- ation	Description
ACS-AP-S	Standard assistant control panel
ACS-AP-W	Industrial assistant control panel with Bluetooth interface
CBAI-01	Bipolar analog IO extension module
CCU-24	Type of control unit
CHDI-01	115/230 V digital input extension module
CMF	Common mode filtering
CMOD-01	Multifunction extension module (external 24 V AC/DC and digital I/O extension)
CMOD-02	Multifunction extension module (external 24 V AC/DC and isolated PTC interface)
CPTC-02	Multifunction extension module (external 24 V and ATEX-certified PTC interface)
EMC	Electromagnetic compatibility
EMI	Electromagnetic interference
FBIP-21	BACnet/IP adapter module
FCAN	Optional CANopen® adapter module
FCNA-01	Optional ControlNet™ adapter module
FDCO-01	DDCS communication module with two pairs of 10 Mbit/s DDCS channels
FDNA-01	Optional DeviceNet™ adapter module
FECA-01	Optional EtherCAT® adapter module
FENA-21	Optional Ethernet adapter module for EtherNet/IP™, Modbus TCP® and PROFINET IO® protocols, 2-port
FEPL-01	Optional Ethernet POWERLINK adapter module
FPBA-01	Optional PROFIBUS DP® adapter module
Frame, frame size	Physical size of the drive or power module
IGBT	Insulated gate bipolar transistor

Term/ Abbrevi- ation	Description
IT system	Type of supply network that has no (low-impedance) connection to ground. See IEC 60364-5.
STO	Safe torque off (IEC/EN 61800-5-2)
TN system	Type of supply network that provides a direct connection to ground

## Related documents

Name	Code (Eng- lish/Multilingual)	Code (Transla- tion)
<b>Drive hardware manuals and guides</b>		
<i>Drive/converter/inverter safety instructions</i>	<a href="#">3AXD50000037978</a>	
<i>ACS580-07 drives (75 to 500 kW) hardware manual</i>	<a href="#">3AXD50000045815</a>	
<i>Converter module lifting device for drive cabinets hardware manual</i>	<a href="#">3AXD50000210268</a>	
<i>ACX-AP-x Assistant control panels user's manual</i>	<a href="#">3AUA0000085685</a>	
<b>Drive firmware manuals and guides</b>		
<i>ACS580 standard control program firmware manual</i>	<a href="#">3AXD50000016097</a>	
<i>Quick start-up guide for ACS580 drives with ACS580 standard control program</i>	<a href="#">3AXD50000048035</a>	
<b>Drive option manuals and guides</b>		
<i>Emergency stop, stop category 0 (option +Q951) for ACS580-07, ACH580-07 and ACQ580-07 drives user's manual</i>	<a href="#">3AXD50000171828</a>	
<i>Emergency stop, stop category 0 (option +Q963) without opening main contactor with safety relay for ACS580-07, ACH580-07 and ACQ580-07 drives user's manual</i>	<a href="#">3AXD50000171835</a>	
<i>CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual</i>	<a href="#">3AXD50000030058</a>	
<i>FCAN-01 CANopen adapter module user's manual</i>	<a href="#">3AFE68615500</a>	
<i>FCNA-01 ControlNet adapter module user's manual</i>	<a href="#">3AUA0000141650</a>	
<i>FDNA-01 DeviceNet™ adapter module user's manual</i>	<a href="#">3AFE68573360</a>	
<i>FECA-01 EtherCAT adapter module user's manual</i>	<a href="#">3AUA0000068940</a>	
<i>FENA-01/-11/-21 Ethernet adapter module user's manual</i>	<a href="#">3AUA0000093568</a>	
<i>FEPL-02 Ethernet POWERLINK adapter module user's manual</i>	<a href="#">3AUA0000123527</a>	
<i>FPBA-01 PROFIBUS DP adapter module user's manual</i>	<a href="#">3AFE68573271</a>	
<i>FSCA-01 RS-485 adapter module user's manual</i>	<a href="#">3AUA0000109533</a>	
<b>Tool and maintenance manuals and guides</b>		

Name	Code (English/Multilingual)	Code (Translation)
<i>Drive composer start-up and maintenance PC tool user's manual</i>	<a href="#">3AUA0000094606</a>	
<i>Converter module capacitor reforming instructions</i>	<a href="#">3BFE64059629</a>	

You can find manuals and other product documents in PDF format on the Internet at [www.abb.com/drives/documents](http://www.abb.com/drives/documents).

The code below opens an online listing of the manuals applicable to this product.



[ACS580-07 manuals](#)





# 3

## Operation principle and hardware description

---


### Contents of this chapter

This chapter briefly describes the operation principle and construction of the drive.

## Product overview

The ACS580-07 is a drive module for controlling AC induction motors, synchronous reluctance motors and synchronous permanent magnet motors in open loop control.

The single-line circuit of the drive is shown below.

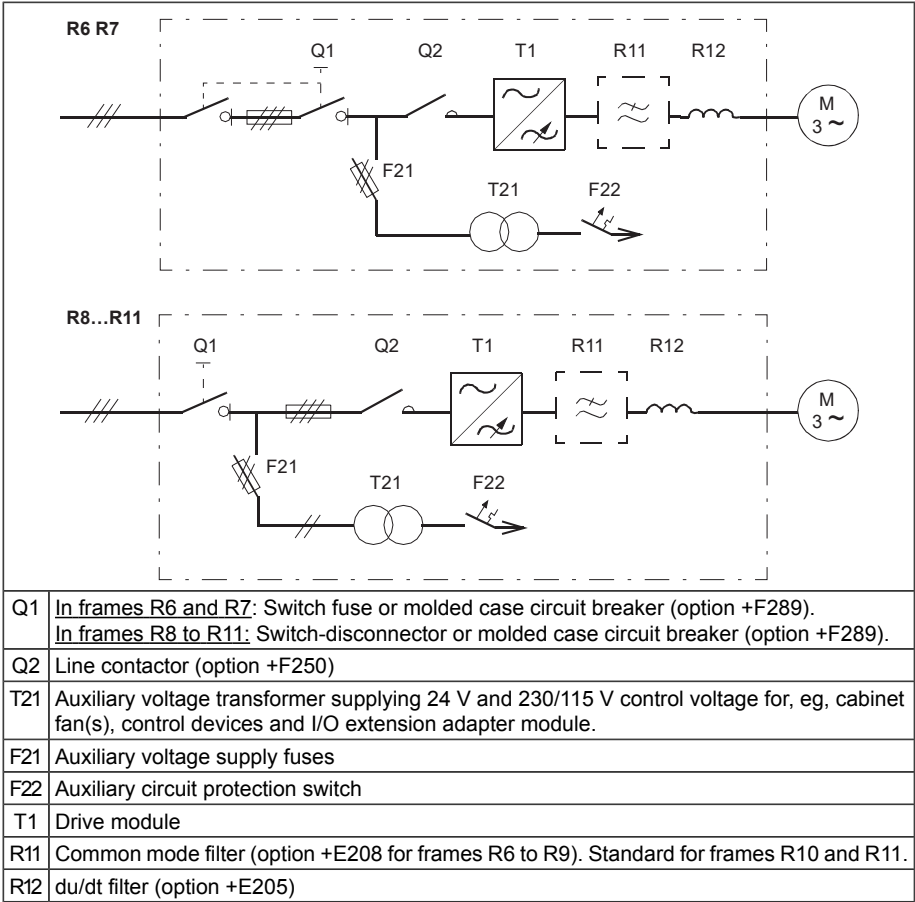

## Layout

### ■ General information on the cabinet layout




**IP21**  
**UL Type 1**



**IP42**  
**UL Type 1 Filtered**  
**(option +B054)**


## ■ Cabinet layout – R6 and R7 (bottom entry and exit of cables)

The cabinet layout of frame R7 with du/dt filter (option +E205) is shown below. Degree of protection IP42 (UL Type 1 Filtered [option +B054]). Frame R6 looks similar.

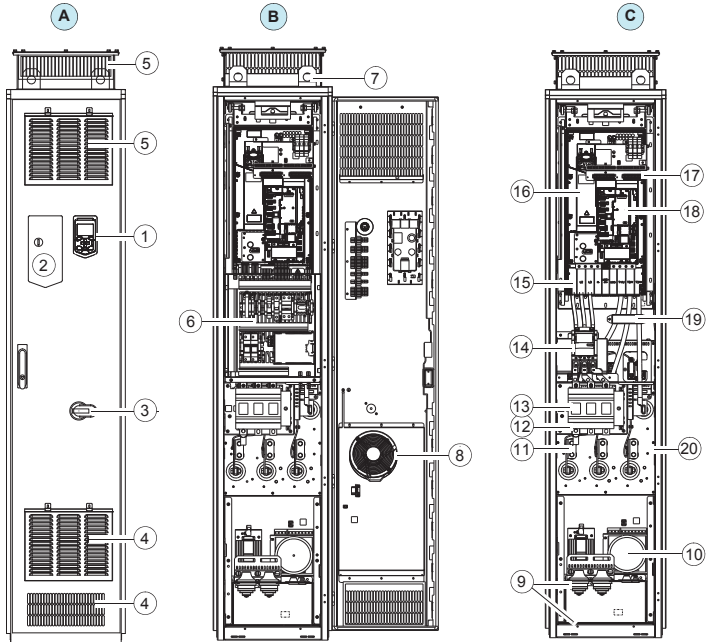		
A	Cabinet door closed	10 Auxiliary voltage transformer T21
B	Cabinet door open	11 Motor cable connection terminals <b>Note:</b> For drives with no du/dt filter (option +E205), the motor cables are connected to the drive module terminals.
C	Cabinet door open, mounting plate and cabinet shrouds removed	12 Input cable connection terminals
1	Drive control panel	13 Main switch with AC fuses (Q1)
2	Operating switch	14 Main contactor (Q2, option +F250)
3	Main switch handle	15 Power cable connection terminals of the drive module behind the shroud
4	Gratings for cooling air in	16 Drive module
5	Gratings for cooling air out	17 Additional I/O terminal block (option +L504)
6	Mounting plate, see section <a href="#">Mounting plate – R6 to R9 (page 42)</a>	18 Drive control unit
7	Lifting lugs	19 Common mode filter (option +E208)
8	Cabinet door fan	20 du/dt filter (option +E205)

9	Power and control cable entries	-	
---	---------------------------------	---	--


■ **Cabinet layout – R6 and R7 (top entry and exit of cables, options +H351 and +H53)**

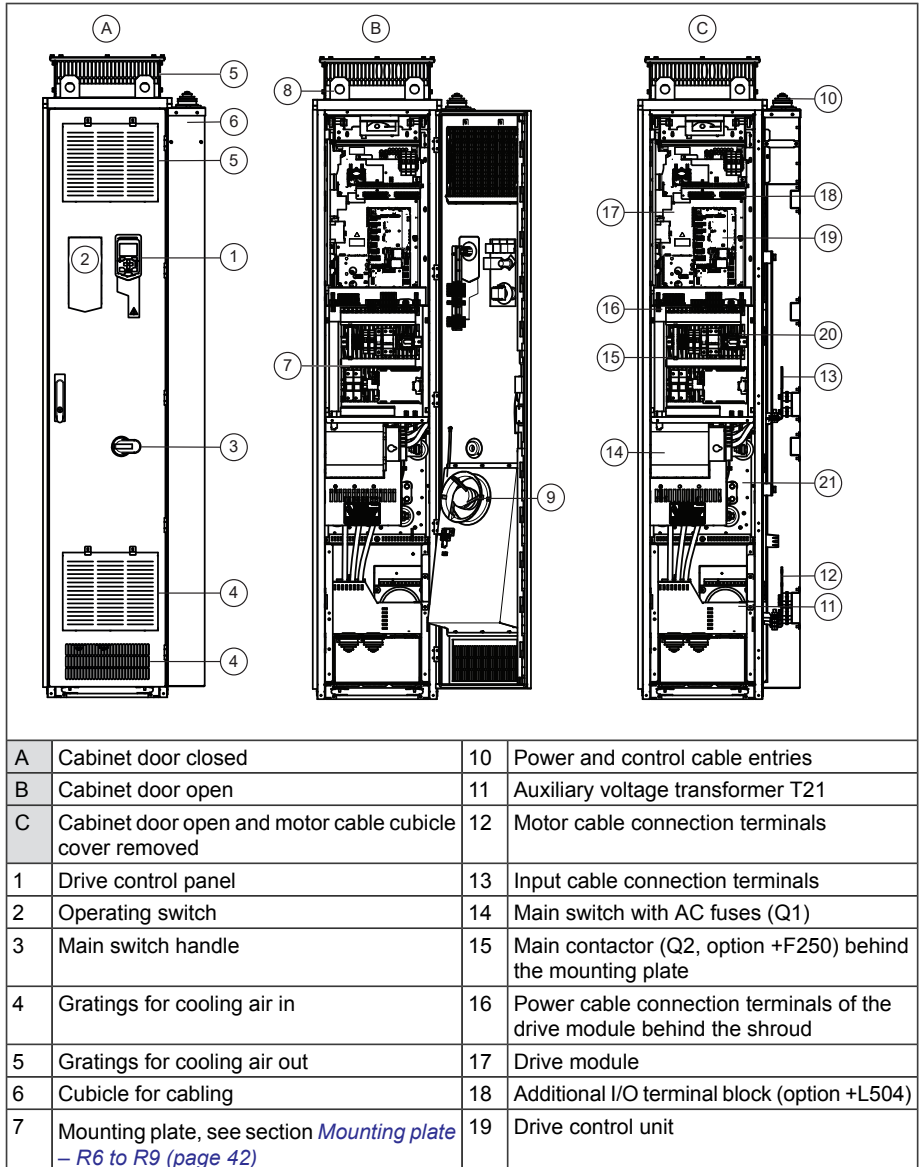

8	Lifting lugs	20	Common mode filter (option +E208) behind the mounting plate
9	Cabinet door fan	21	du/dt filter (option +E205)

### ■ Cabinet layout – R8 and R9 (bottom entry and exit of cables)


The cabinet layout of frame R9 with du/dt filter (option +E205) is shown below. Degree of protection IP42 (UL Type 1 Filtered [option +B054]). Frame R8 looks similar.

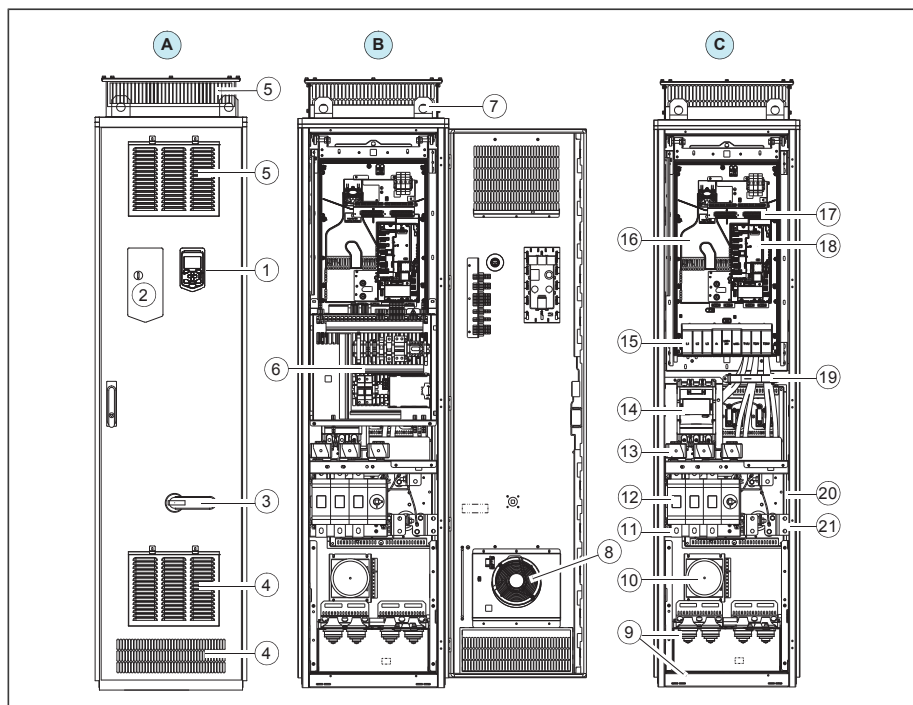

A	Cabinet door closed	10	Auxiliary voltage transformer T21
B	Cabinet door open	11	Input cable connection terminals
C	Cabinet door open, mounting plates and cabinet shrouds removed	12	Main switch-disconnector (Q1)
1	Drive control panel	13	AC fuses
2	Operating switch	14	Main contactor (Q2, option +F250)
3	Main switch handle	15	Power cable connection terminals of the drive module behind the shroud
4	Gratings for cooling air in	16	Drive module

5	Gratings for cooling air out	17	Additional I/O terminal block (option +L504)
6	Mounting plate, see section <a href="#">Mounting plate – R6 to R9 (page 42)</a>	18	Drive control unit
7	Lifting lugs	19	Common mode filter (option +E208)
8	Cabinet door fan	20	du/dt filter (option +E205)
9	Power and control cable entries	21	Motor cable connection terminals <b>Note:</b> For drives with no du/dt filter (option +E205), the motor cables are connected to the drive module terminals.

### ■ Cabinet layout – R8 and R9 (top entry and exit of cables, options +H351 and +H53)

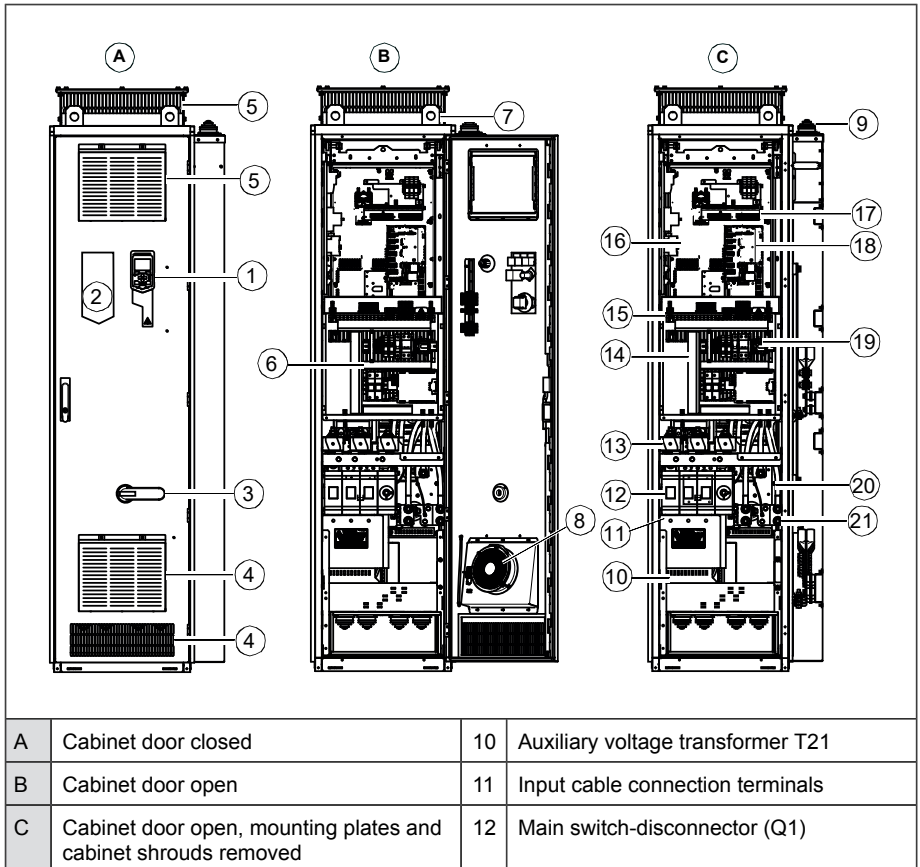


1	Drive control panel	13	AC fuses
2	Operating switch	14	Main contactor (Q2, option +F250)
3	Main switch handle	15	Power cable connection terminals of the drive module behind the shroud
4	Gratings for cooling air in	16	Drive module
5	Gratings for cooling air out	17	Additional I/O terminal block (option +L504)
6	Mounting plate, see section <a href="#">Mounting plate – R6 to R9 (page 42)</a>	18	Drive control unit
7	Lifting lugs	19	Common mode filter (option +E208)
8	Cabinet door fan	20	du/dt filter (option +E205)
9	Power and control cable entries	21	Motor cable connection terminals <b>Note:</b> For drives with no du/dt filter (option +E205), the motor cables are connected to the drive module terminals.

### ■ Mounting plate – R6 to R9

The components and terminals on the mounting plate of frames R6 to R9 are shown below. The layout of frames R6 and R7 is similar.



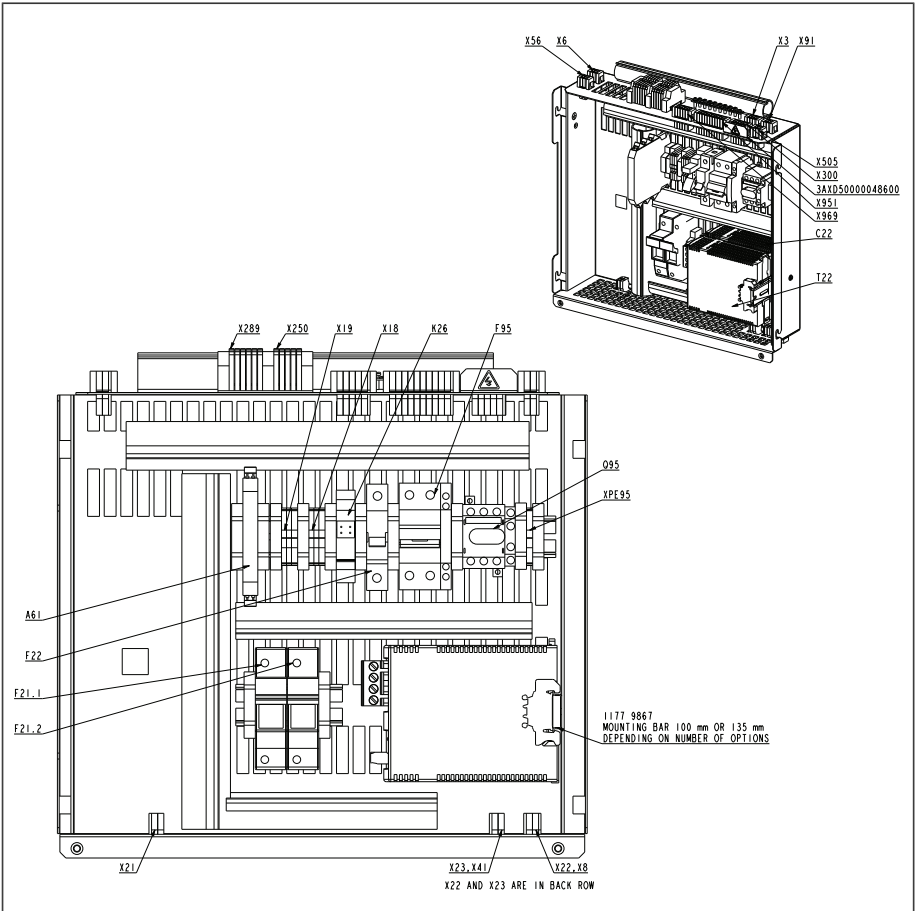

+G300	switch-disconnector and miniature circuit breaker for cabinet heater (option +G300)	X3	External main contactor control
A61	Emergency stop relay for options +Q951 and +Q963	X250	Indication of main contactor status5
Q95, F95	Switch-disconnector and miniature circuit breaker for cabinet heater (option +G300)	X289	Indication of the status of the molded case circuit breaker (option +F289)
F21	Auxiliary transformer fuses	X300	Connection terminals for cabinet heater (option +G300)
F22	Auxiliary transformer's secondary side miniature circuit breaker	X951	Connection of external emergency stop button (options +Q951 and +Q963)

44 Operation principle and hardware description

T22, C22	24VDC power supply and buffer with emergency stop options (+Q951 and +Q963), also with line contactor option (+F250).	X969	Connection of external Safe torque off button
X251, X4, X6, X56, X53, X51, X55, X18 and X19: for internal use.			

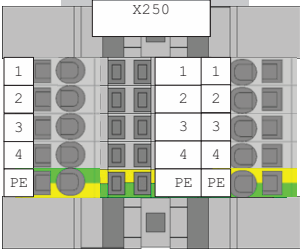


Diagram of terminal block X250. It shows a 5x3 grid of terminals. The first column is numbered 1 to 4, the second column is numbered 1 to 4, and the third column is labeled PE. The bottom row is highlighted in green and yellow.

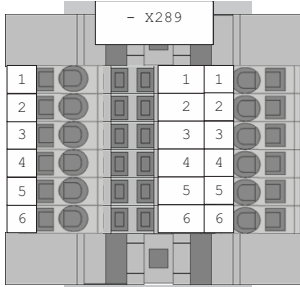


Diagram of terminal block X289. It shows a 6x3 grid of terminals. The first column is numbered 1 to 6, the second column is numbered 1 to 6, and the third column is labeled PE. The bottom row is highlighted in green and yellow.

**Terminals for**


X250 Auxiliary contacts of line contactor (option +F250)


X289 Auxiliary contacts of molded case circuit breaker (option +F289)

X951 Push buttons for emergency stop option +Q951 or +Q963. See section [Connecting the emergency stop push buttons \(options +Q951 and +Q963\) \(page 132\)](#).


X969 External STO customer connection for safety option +Q951 or +Q963. See section [Connecting the Safe torque off circuit \(page 133\)](#).


■ Cabinet layout – R10 and R11 (bottom entry and exit of cables)

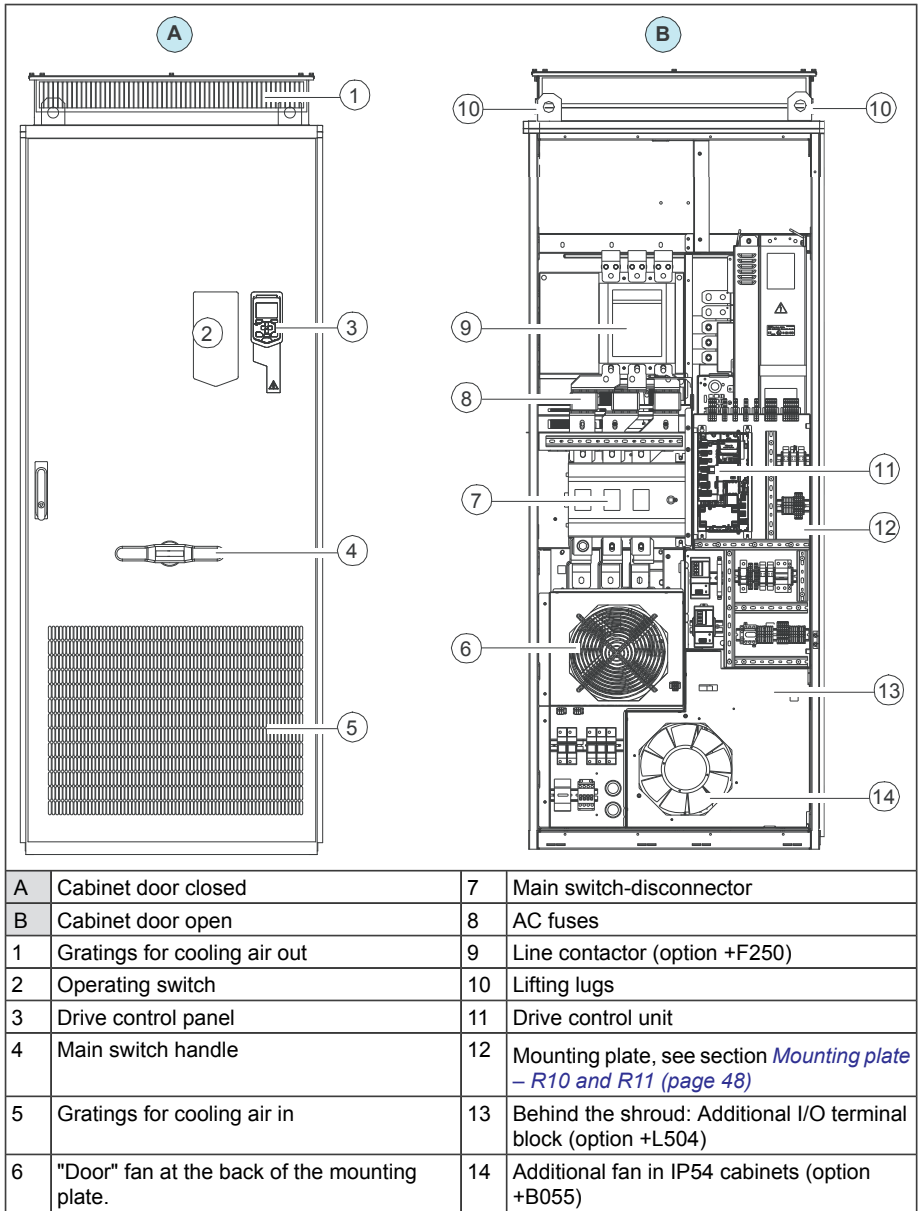

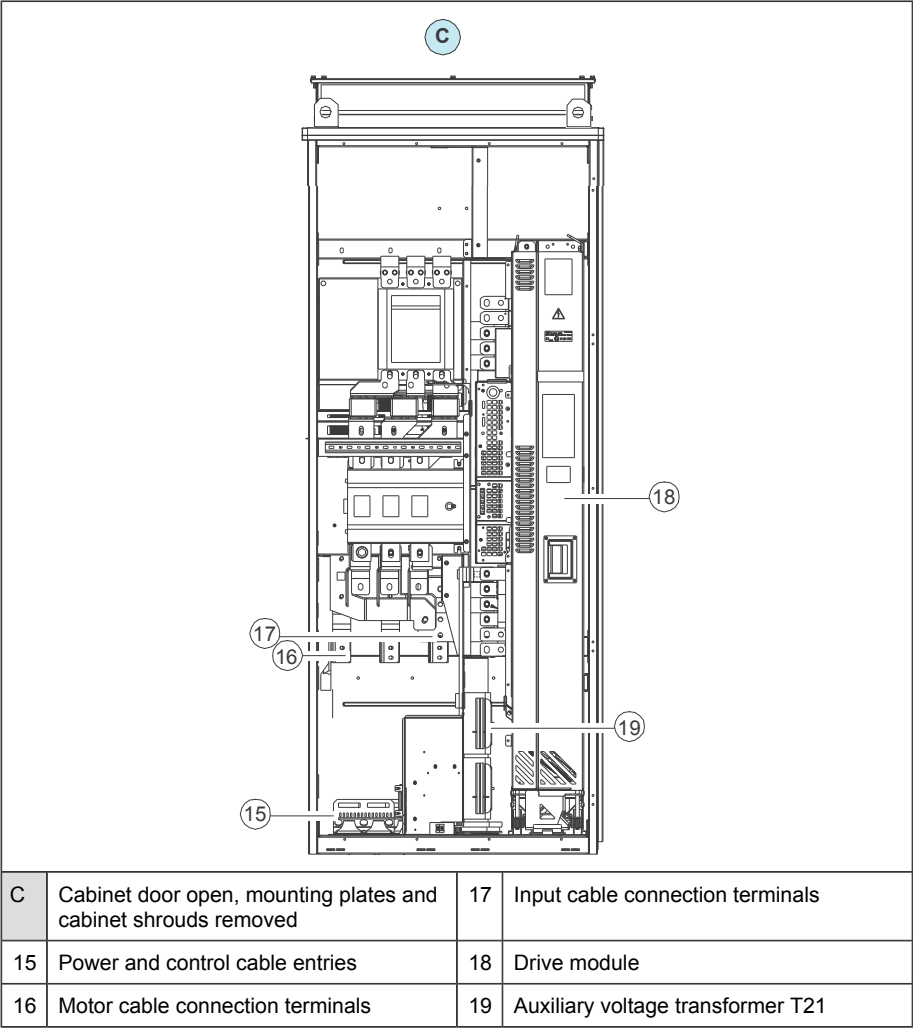

■ Cabinet layout – R10 and R11 (top entry and exit of cables, options +H351 and +H353)

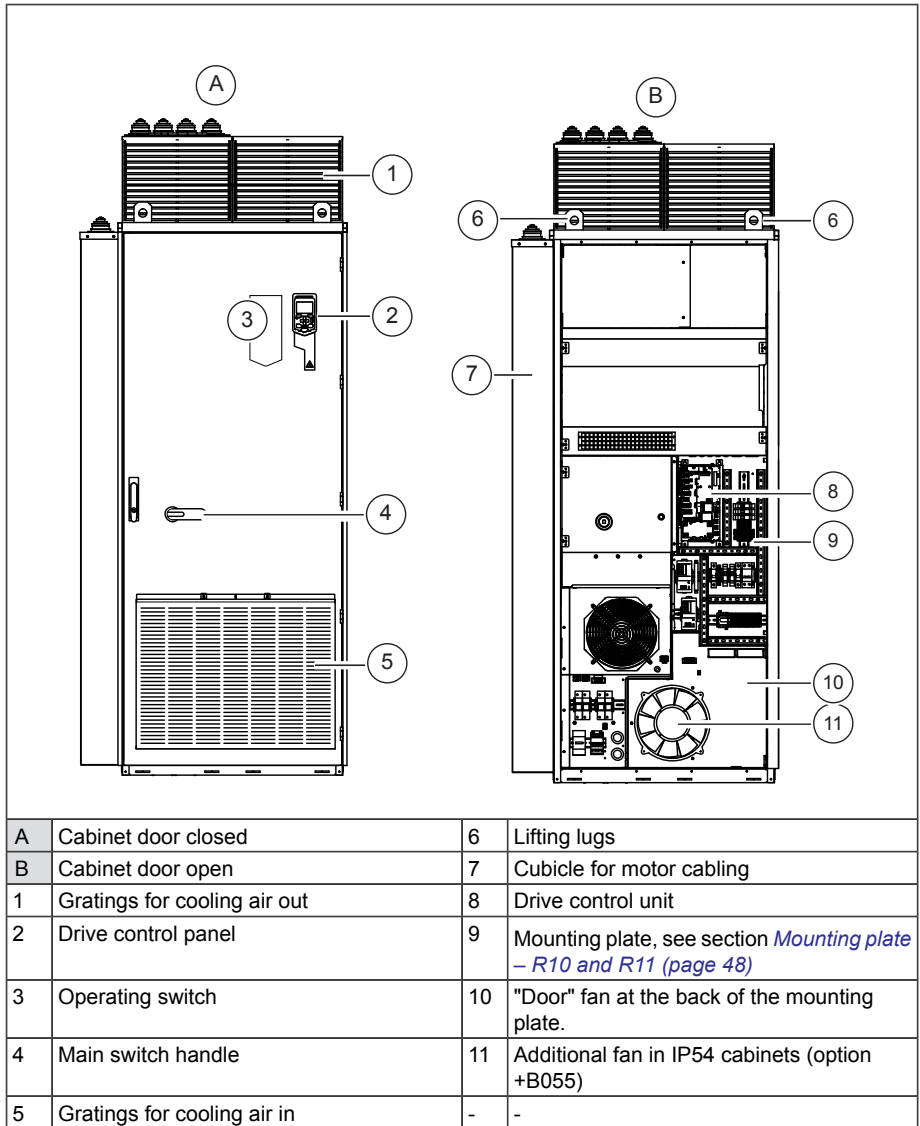


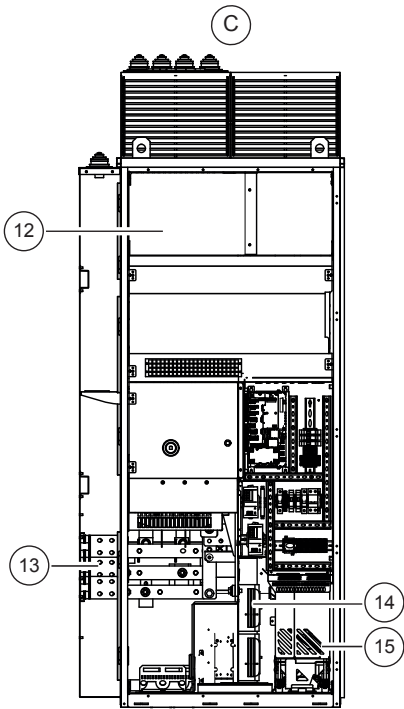

C	Cabinet door open, lower shrouds and motor cable cubicle cover removed	14	Auriliary voltage transformer T21
12	Input cable connection terminals behind the shroud	15	Drive module
13	Motor cable connection terminals	-	-

■ **Mounting plate – R10 and R11**


The components and terminals on the mounting plate of frames R10 and R11 are shown below.

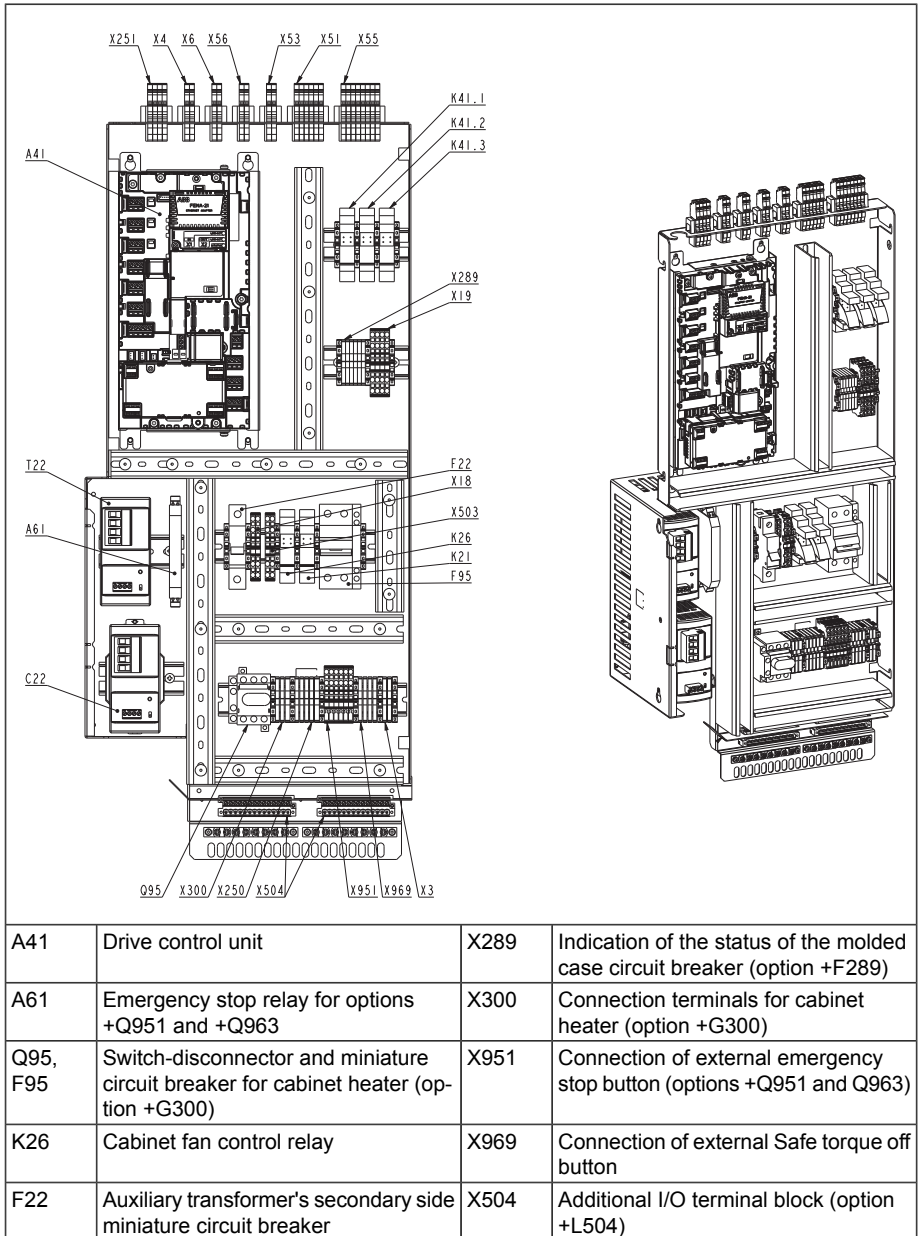

T22, C22	24VDC power supply and buffer with emergency stop options (+Q951 and +Q963), also with line contactor option (+F250).	K41.1	Ready pilot light control relay (option +G327)
X3	External main contactor control	K41.2	Run pilot light control relay (option+G328)
X250	Indication of main contactor status	K41.3	Fault pilot light control relay (option +G329)
X251, X4, X6, X56, X53, X51, X55, X18 and X19: for internal use.			

■ Cooling air flow


The figure below shows cooling air flow in frames R6 to R9 (side view) and in frames R10 and R11 (front view).

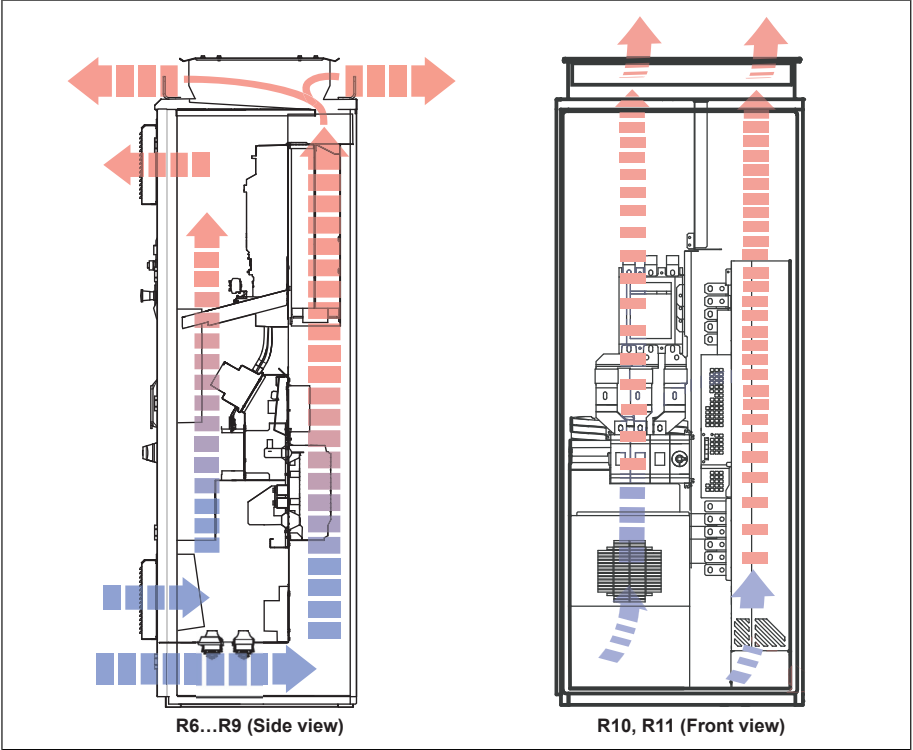



## ■ Door switches and lights



	Label in English	Label in local language	Description				
1	READY	-	Ready pilot light (option +G327)				
2	RUN	-	Run pilot light (option+G328)				
3	FAULT	-	Fault pilot light (option +G329)				
4	MAIN CONTACT- OR OFF ON 	-	Operating switch with option +F250 <table><tr><td>0</td><td>Opens the main contactor (Q2) and disables starting of the drive</td></tr><tr><td>1</td><td>Closes the main contactor (Q2)</td></tr></table>	0	Opens the main contactor (Q2) and disables starting of the drive	1	Closes the main contactor (Q2)
0	Opens the main contactor (Q2) and disables starting of the drive						
1	Closes the main contactor (Q2)						
5	EMERGENCY STOP RESET	-	Emergency stop indication light and reset push button with options +Q951 and +Q963				
6	EMERGENCY STOP	-	Emergency stop push button with options +Q951 and +Q963				

### Main switch-disconnector Q1

The switch-disconnector handle switches the main voltage to the drive on and off.

## ■ Control panel

The control panel is the user interface of the drive. It provides the essential controls such as Start/Stop/Direction/Reset/Reference, and the parameter settings for the control program.

One control panel can be used to control several drives through a panel link.

The control panel can be removed by pulling it forward from the top edge and disconnecting the panel cable. The panel is reinstalled in reverse order. For the use of the control panel, see the firmware manual or *ACX-AP-x Assistant control panel user's manual* (3AUA0000085685 [English]).



### Control by PC tools

There is a USB connector on the front of the panel that can be used to connect a PC to the drive. When a PC is connected to the control panel, the control panel keypad is disabled.


### ■ Common mode filter

The drive of frames R6 to R9 can be optionally equipped with a common mode filter (option +E208). Frames R10 and R11 are equipped with a common mode filter as standard. The filter contains ferrite rings mounted around the drive AC conductors. The filter protects the motor bearings by reducing the bearing currents.

More information on when the option is required: See section [Examining the compatibility of the motor and drive \(page 80\)](#).

## Overview of power and control connections

The diagram shows the power connections and control interfaces of the drive.

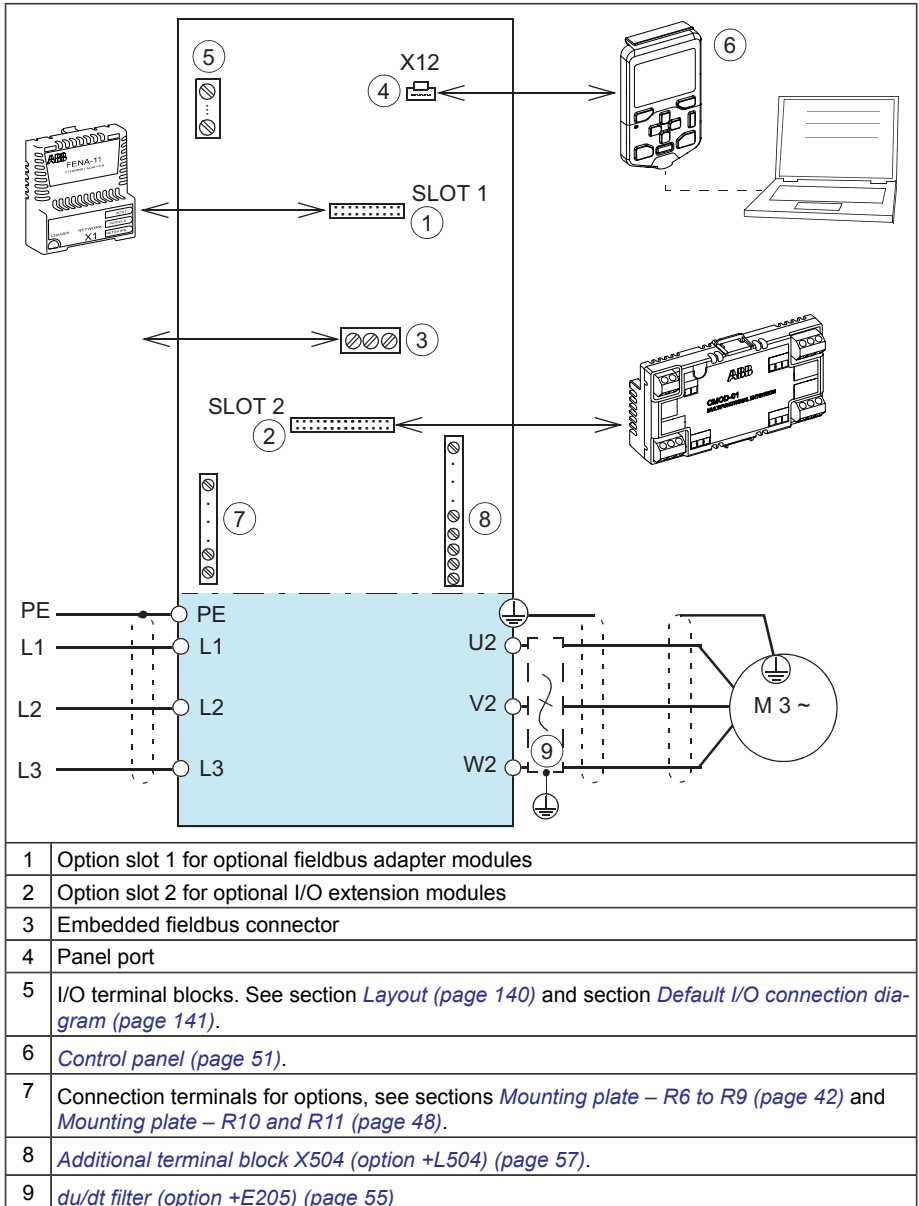

## Descriptions of options

**Note:** All options are not available for all drive types, do not coexist with certain other options, or may require additional engineering. Check actual availability with ABB.

### ■ Degree of protection

#### Definitions

According to IEC/EN 60529, the degree of protection is indicated by an IP code where the first numeral means protection against ingress of solid foreign objects, and the second numeral protection against ingress of water. The IP codes of the standard cabinet and options covered in this manual are defined below.

IP code	The equipment is protected ...	
	First numeral	Second numeral
IP21	against ingress of solid foreign objects > 12.5 mm diameter*	against dripping (vertically falling drops)
IP42	against ingress of solid foreign objects > 1 mm	against dripping (15° tilting) water
IP54	dust-protected	against splashing water

\* meaning for protection of persons: against access to hazardous parts with finger

#### IP21 (UL Type 1)

The degree of protection of the standard drive cabinet is IP21 (UL type 1). The air outlets at the top of the cabinet and the air inlet gratings are covered with metallic gratings. With doors open, the degree of protection of the standard cabinet and all cabinet options is IP20. The live parts inside the cabinet are protected against contact with clear plastic shrouds or metallic gratings.

#### IP42 (UL Type 1 Filtered) (option +B054)

This option provides the degree of protection of IP42 (UL type 1). The air inlet gratings are covered with a metallic mesh between the inner and outer metallic gratings.

#### IP54 (UL Type 12) (option +B055)

This option provides the degree of protection of IP54 (UL type 12). It provides the cabinet air inlets with filter housings containing folded board air filter mats between the inner and outer metallic gratings. An additional fan and filtered outlets on the cabinet roof are also included.

### ■ UL Listed (option +C129)

The cabinet contains the following accessories and features:

- all components UL/CSA Listed/Recognized
- maximum supply voltage 480 V
- US-type main switch and fuses.

#### ■ Plinth height (options +C164 and +C179)

The standard height of the cabinet plinth is 50 mm. These options specify a plinth height of 100 mm (+C164) or 200 mm (+C179).

#### ■ Empty cubicles on right (options +C196...C198)

The option adds an empty 400, 600 or 800 mm wide cubicle to the right end of the line-up. The cubicle is equipped with blank power cable entries both at the top and the bottom.

The cubicle is equipped with blank panel entries (two-half panels) on both the side and back.

#### ■ Empty cubicles on left (options +C199...C201)

The option adds an empty 400, 600 or 800 mm wide cubicle to the left end of the line-up. The cubicle is equipped with blank power cable entries both at the top and the bottom.

The cubicle is equipped with blank panel entries (two-half panels) on both the side and back.

#### ■ du/dt filter (option +E205)

The du/dt filter protects the motor insulating system by reducing the voltage rise speed at the motor terminals. The filter also protects the motor bearings by reducing the bearing currents.

More information on when the option is required: See section [Examining the compatibility of the motor and drive \(page 80\)](#).

#### ■ Common mode filter (option +E208)

The common mode filter contains ferrite rings mounted around the AC output busbars in the drive module. The filter protects the motor bearings by reducing the bearing currents.

More information on when the option is required: See section [Examining the compatibility of the motor and drive \(page 80\)](#).

#### ■ Molded case circuit breaker (MCCB, option +F289)

This option replaces the standard main switch with a molded case circuit breaker. The breaker has inbuilt protection functions against overload and short-circuit. It is operated with a direct rotary handle on the cabinet door.

---

For North American market only.

### ■ Cabinet heater with external supply (option +G300)

The option contains:

- heating elements in the cubicles or supply/inverter modules
- load switch for providing electrical isolation during service
- miniature circuit breaker for overcurrent protection
- terminal block for external power supply.

The heater prevents humidity condensation inside the cabinet when the drive is not running. The power output of the semiconductor-type heating elements depends on the environmental temperature. The customer must switch the heating off when it is not needed by cutting the supply voltage off.

The customer must supply the heater from an external 110...240 V AC power source.

For the actual wiring, see the circuit diagrams delivered with drive.

### ■ Terminals for external control voltage (option +G307)

The option provides terminals for connecting an external uninterruptible control voltage to the control unit and control devices when the drive is not powered.

See also:

- [Supplying power for the auxiliary circuits \(page 104\)](#)
- circuit diagrams delivered with drive for the actual wiring.

### ■ Ready/Run/Fault lights (options +G327...G329)

These options provide "ready" (+G327, white), "run" (+G328, green) and "fault" (+G329, red) lights installed on the cabinet door.

### ■ Top cable entry/exit (options +H351 and +H353)

The top entry (+H351) and top exit (+H353) options provide power and control cable entries at the roof of the cabinet. The entries are equipped with grommets and 360° grounding hardware.

The options add an additional 125 mm (4.92 in) wide cable channel to the cabinet width.

### ■ Cable conduit entry (option +H358)

The option provides US/UK conduit plates (plain 3 mm thick steel plates without any ready-made holes).

---

### ■ Additional terminal block X504 (option +L504)

The standard terminal blocks of the drive control unit are wired to the additional terminal block at the factory for customer control wiring. The terminals are spring loaded.

**Note:** The optional modules inserted in the slots of the control unit are not wired to the additional terminal block. The customer must connect the optional module control wires directly to the modules.

### ■ Starter for auxiliary motor fan (options +M6xx)

#### What the option contains

The option provides switched and protected connections for 3-phase auxiliary motor fans. Each fan connection is equipped with

- fuses
- a manual motor starter switch with an adjustable current limit
- a contactor controlled by the drive, and
- terminal block X601 for customer connections.

For more information, refer to *ACX580-07 ordering information* (3AXD10000485076, available on request).

#### Description

The output for the auxiliary fan is wired from the 3-phase supply voltage to terminal block X601 through a motor starter switch and a contactor. The contactor is operated by the drive. The 230 V AC control circuit is wired through a jumper on the terminal block; the jumper can be replaced by an external control circuit.

The starter switch has an adjustable trip current limit, and can be opened to permanently switch the fan off.

The statuses of both the starter switch and the fan contactor are wired to the terminal block.


See the circuit diagrams delivered with the drive for the actual wiring.

### Cables accepted by the terminals of the additional I/O terminal block (option +L504)

- solid wire 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG)
  - stranded wire with ferrule 0.25 to 2.5 mm<sup>2</sup> (24 to 12 AWG)
  - stranded wire without ferrule 0.2 to 2.5 mm<sup>2</sup> (24 to 12 AWG).
-

## Type designation label

The type designation label includes an IEC rating, appropriate markings, a type designation and a serial number, which allow identification of each unit. The type designation label is located on the front cover. An example label is shown below.

  
MADE IN FINLAND  
ABB Oy  
Himontie 13  
00380 Helsinki  
Finland  

FRAME  
R9

  
Air cooling  
IP54  
Icc 65 kA

1 ACS580-07-0430A-4+B055+C199+E205+F250+G300+G327+G328+G329+H351+H353+K454+L501+L504+P904+Q951+R700

2

6

Input  
U1 3~ 400/480 VAC  
I1 430/414 A  
f1 50/60 Hz

Output  
U2 3~ 0...U1  
I2 430/414 A  
f2 0...500 Hz  
Sn 298 kVA

3

4


5

7

8

9

10

  
EAC  
TUV NORD  
Safety Approved  
8  
9  
10  
S/N: 1164404983

1	Type designation, see section <a href="#">Type designation key</a> below.
2	Manufacturing address
3	Frame size
4	Cooling method
5	Degree of protection
6	Ratings, see section <a href="#">Ratings (page 195)</a> , <a href="#">Electrical power network specification (page 237)</a> and <a href="#">Motor connection data (page 237)</a> .
7	Short-circuit withstand strength, see section <a href="#">Electrical power network specification (page 237)</a> .
8	Valid markings
9	Serial number. The first digit of the serial number refers to the manufacturing plant. The next four digits refer to the unit's manufacturing year and week, respectively. The remaining digits complete the serial number so that there are no two units with the same number.
10	Link to product information

## Type designation key

The type designation contains information on the specifications and configuration of the drive. The first digits from left express the basic configuration (eg, ACS580-07-0640A-4). The optional selections are given thereafter, separated by plus signs, eg, +B055. The main selections are described below. Not all selections are available for all types or with all options. For more information, refer to [ACx580-07 ordering Information](#) (3AXD10000485076 available on request).

### ■ Basic code

Code	Description
ACS580	Product series
Type	



Code	Description
-07	When no options are selected: cabinet-installed drive, IP21, main switch, AC fuses, ACS-AP-S assistant control panel, for frames R6 to R9 EMC filtering for first environment TN grounded systems (category C2), for frames R10 and R11 EMC filtering for second environment TN grounded systems (category C3), input choke, common mode filter in frames R10 and R11, coated boards, ACS580 standard control program, EIA/RS-485 fieldbus connector, Safe torque off function, bottom entry and exit of cables, multilingual device label sticker, USB memory containing all manuals.
<b>Size</b>	
-xxxxA	See the ratings table.
<b>Voltage range</b>	
4	380...480 V. This is indicated in the type designation label as typical input voltage level (3~400/480 V AC).

## ■ Option codes

Code	Description
B054	IP42 (UL Type 1 Filtered)
B055	IP54 (UL Type 12)
C129	UL Listed (evaluated to both U.S. and Canadian safety requirements). See section <a href="#">UL Listed (option +C129) (page 54)</a> .
C164	Plinth height 100 mm. See section <a href="#">Plinth height (options +C164 and +C179) (page 55)</a> .
C179	Plinth height 200 mm. See section <a href="#">Plinth height (options +C164 and +C179) (page 55)</a> .
C196	Empty 400 mm wide cubicle on right. See section <a href="#">Empty cubicles on right (options +C196...C198) (page 55)</a> .
C197	Empty 600 mm wide cubicle on right. See section <a href="#">Empty cubicles on right (options +C196...C198) (page 55)</a> .
C198	Empty 800 mm wide cubicle on right. See section <a href="#">Empty cubicles on right (options +C196...C198) (page 55)</a> .
C199	Empty 400 mm wide cubicle on left. See section <a href="#">Empty cubicles on left (options +C199...C201) (page 55)</a> .
C200	Empty 600 mm wide cubicle on left. See section <a href="#">Empty cubicles on left (options +C199...C201) (page 55)</a> .
C201	Empty 800 mm wide cubicle on left. See section <a href="#">Empty cubicles on left (options +C199...C201) (page 55)</a> .
E205	du/dt filtering

Code	Description
E208	Common mode filtering (standard with frames R10 and R11)
F250	Main (line) contactor
F289	MCCB circuit breaker
G300	Cabinet and module heating elements (external supply). See section <a href="#">Cabinet heater with external supply (option +G300) (page 56)</a> .
G307	Terminals for connecting external control voltage (230 V AC or 115 V AC, eg. UPS). See section <a href="#">Terminals for external control voltage (option +G307) (page 56)</a> .
G327	Ready light on door, white
G328	Run light on door, green
G329	Fault light on door, red
H351	Top power cable entry. See section <a href="#">Top cable entry/exit (options +H351 and +H353) (page 56)</a> .
H353	Motor cabling direction up. See section <a href="#">Top cable entry/exit (options +H351 and +H353) (page 56)</a> .
H358	Cable gland plates (3 mm steel, undrilled)
J429	ACS-AP-W control panel (with Bluetooth)
K451	FDNA-01 DeviceNet™ adapter module
K454	FPBA-01 PROFIBUS DP adapter module
K457	FCAN-01 CANopen adapter module
K458	FSCA-01 RS-485 (Modbus/RTU) adapter module
K462	FCNA-01 ControlNet™ adapter module
K469	FECA-01 EtherCat adapter module
K470	FEPL-02 EtherPOWERLINK adapter module
K475	FENA-21 Ethernet adapter module for EtherNet/IP™, Modbus TCP and PROFINET IO protocols, 2-port
K490	FEIP-21 Ethernet adapter module for EtherNet/IP™
K491	FMBT-21 Ethernet adapter module for Modbus TCP
L500	FIO-11 analog I/O extension module
L501	FIO-01 digital I/O extension module
L504	Additional I/O terminal block. See section <a href="#">Additional terminal block X504 (option +L504) (page 57)</a> .

Code	Description
L537	FPTC-02 ATEX-certified thermistor protection module
M600	Trip limit setting range: 1 ... 1.6 A
M601	Trip limit setting range: 1.6 ... 2.5 A
M602	Trip limit setting range: 2.5 ... 4 A
M603	Trip limit setting range: 4 ... 6.3 A
M604	Trip limit setting range: 6.3 ... 10 A
M605	Trip limit setting range: 10...16 A
P912	Seaworthy packaging
P929	Container packaging
P931	Extended warranty (36 months from delivery)
P932	Extended warranty (60 months from delivery)
Q951	Emergency stop (category 0) with safety relays, by opening the main breaker/contactors
Q963	Emergency stop (category 0) with safety relays, by activating the Safe torque off function
Q971	ATEX-certified safe disconnection function
Q986	FSPS-21 PROFIsafe safety functions module
R700	Documentation/manuals in English
R701	German
R702	Italian
R703	Dutch
R704	Danish
R705	Swedish
R706	Finnish
R707	French
R708	Spanish
R709	Portuguese
R711	Russian



# 4

## Mechanical installation

---

### Contents of this chapter

This chapter describes the mechanical installation procedure of the drive.


### Examining the installation site

Examine the installation site. Make sure that:

- The installation site is sufficiently ventilated or cooled to remove heat from the drive. See the technical data.
- The ambient conditions of the drive meet the specifications. See the technical data.
- There is sufficient free space above the drive for cooling, maintenance, and operation of the pressure relief (if present).
- The floor that the drive cabinet is installed on is of non-flammable material, as smooth as possible, and strong enough to support the weight of the unit. Check the floor flatness with a spirit level. The maximum allowed deviation from the surface level is 5 mm (0.2 in) in every 3 meters (10 ft). Level the installation site, if necessary, as the cabinet is not equipped with adjustable feet.



Do not install the drive on an elevated platform or a recess. The module extraction/installation ramp included with the drive is only suitable for a height difference of 50 mm (2 in) maximum (ie. the standard plinth height of the drive).

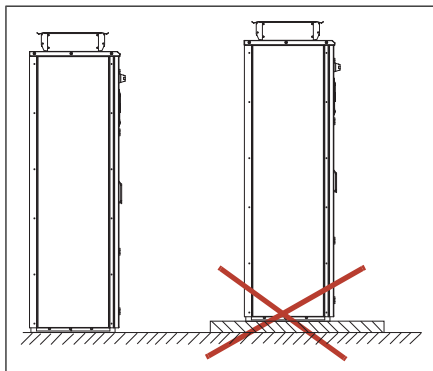

### Necessary tools

The tools required for moving the unit to its final position, fastening it to the floor and wall and tightening the connections are listed below:


- crane, fork-lift or pallet truck (check load capacity!), slate/spud bar, jack and rollers
- Pozidriv and Torx screwdrivers
- torque wrench
- set of wrenches or sockets.





### Moving and unpacking the drive


Move the drive preferably in the original package to installation site as shown below to avoid damaging the cabinet surfaces and door devices. When you use a pallet truck, check its load capacity before you move the drive.

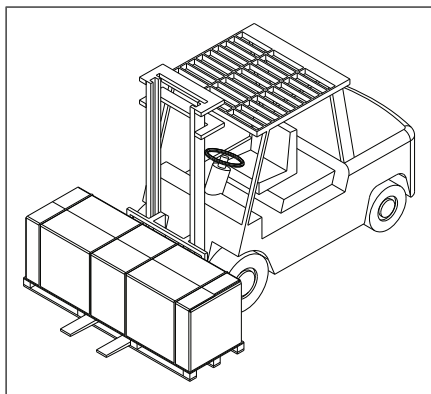
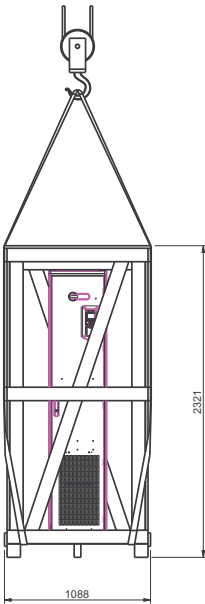
Horizontal package (frames R6...R9):



Vertical package (frames R10 and R11):



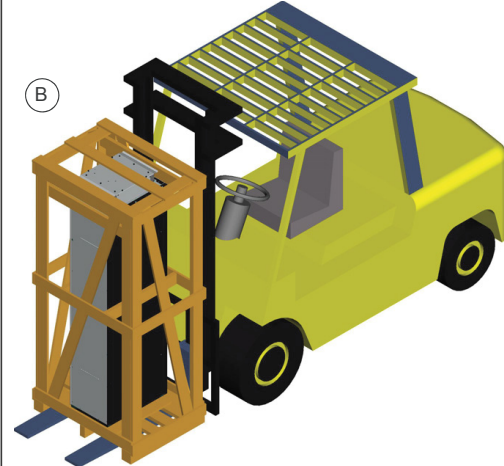




A	Lifting the transport package with slings.
1	Lifting points
B	Lifting the transport package with forklift





## ■ Unpacking the transport package

This drawing shows the layout of the horizontal transport package.

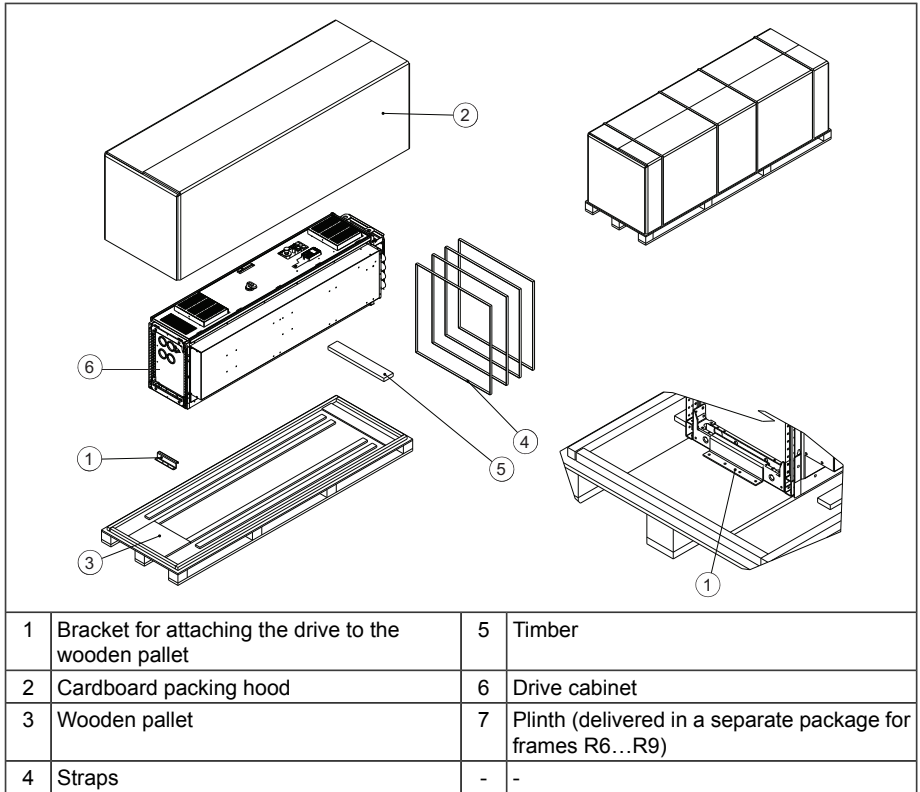

### Unpack the horizontal transport package as follows:

1. Cut the straps (4).
2. Remove the hood (2).
3. Undo the screws that attach the bracket (1) to the wooden pallet.
4. Remove the plastic wrapping.

### Unpack the vertical transport package as follows:

1. Undo the screws that attach the wooden parts of the transport crate to each other.
2. Remove the wooden parts.
3. Remove the clamps with which the drive cabinet is mounted onto the transport pallet by undoing the fastening screws.

4. Remove the plastic wrapping.

#### ■ **Examining the delivery**

The drive delivery contains:

- drive cabinet line-up
- optional modules (if ordered) installed onto the control unit(s) at the factory
- appropriate drive and optional module manuals
- delivery documents.

Make sure that there are no signs of damage. Before attempting installation and operation, see the information on the type designation labels of the drive to verify that the delivery is of the correct type.

#### ■ **Lifting the cabinet**

---




##### **WARNING!**

Incorrect lifting can cause danger or damage. Obey the local laws and regulations applicable to lifting, such as requirements for planning the lift, for capacity and condition of lifting equipment, and for training of personnel.

---


Lift the drive cabinet up using its lifting lugs.



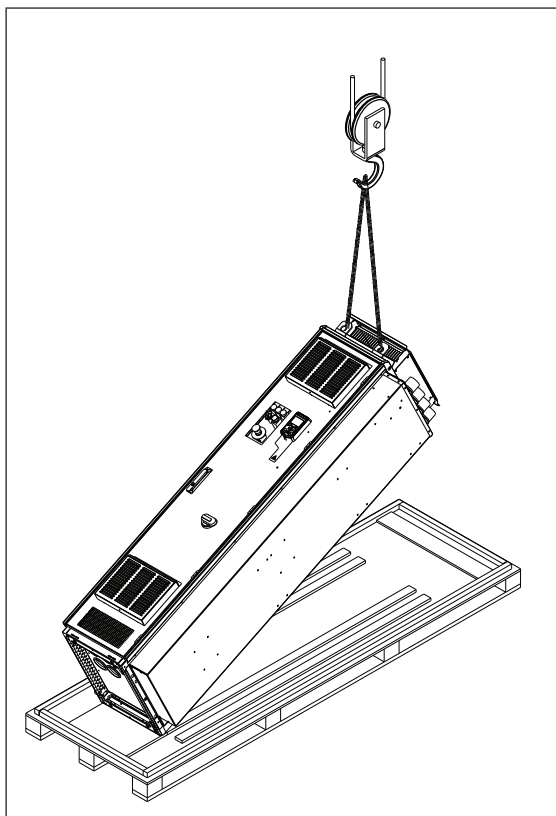

## 70 Mechanical installation

Lift the cabinet to its position. Maximum allowed angle of the lifting slings is  $20^\circ$  ( $10^\circ$  for frames R10 and R11, IP54).

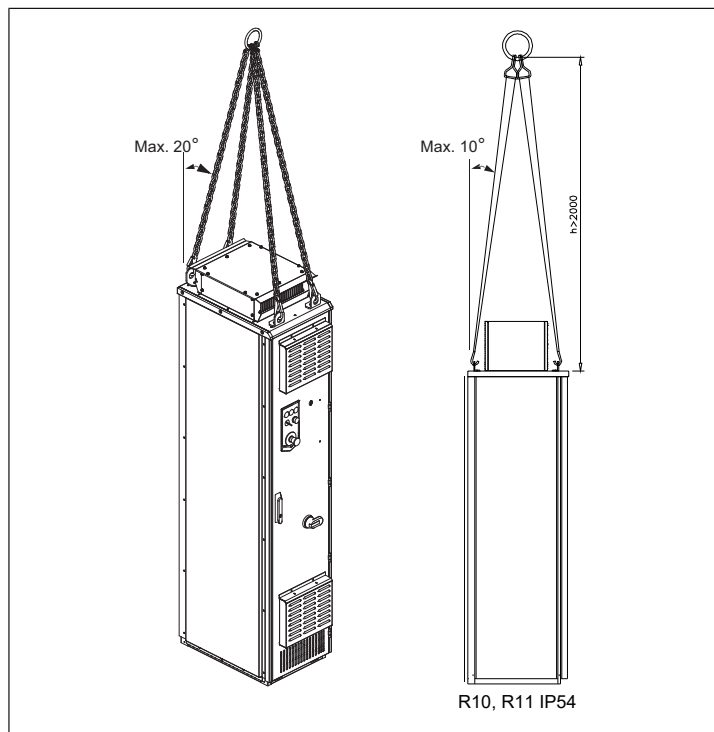

### Lifting lugs

#### *Certificate of conformity*

The certificate is available in ABB Library at [www.abb.com/drives/documents](http://www.abb.com/drives/documents) (document number 3AXD10001061361).

Declaration of Conformity



EU Declaration of Conformity

Machinery Directive 2006/42/EC

We  
Manufacturer: ABB Oy  
Address: Hiomotie 13, 00380 Helsinki, Finland.  
Phone: +358 10 22 11  
declare under our sole responsibility that the following products:

Lifting bars, identified with material codes			
64300971	64301284	64301411	64485342
64301047	64301306	64456695	64485351
64301063	64301314	64456725	64485369
64301080	64301322	64456822	64485377
64301101	64301331	64456881	64485458
64301136	64301349	64456890	68775558
64301152	64301357	64456920	68775540
64301187	64301365	64485296	3AUA5000013498
64301209	64301373	64485300	3AUA5000013504
64301250	64301381	64485318	3AUA0000055356
64301268	64301390	64485326	3AXD50000435524
64301276	64301403	64485334	3AXD50000435548

Lifting lugs, identified with material codes	
64302621	64327151

used for lifting the following frequency converters and frequency converter components

ACS800LC	types -x7LC, LC multidrives, -x07LC
ACS580, ACH580, ACQ580	types -07
ACS880	types -x7, multidrives, -x07, -xx07
ACS880LC	types -x7LC, LC multidrives, -x07LC, -xx07

identified with serial numbers beginning with 1 or 8





are in conformity with all the relevant lifting accessory requirements of EU Machinery Directive 2006/42/EC.

Person authorized to compile the technical file:

Name and address: Vesa Tiihonen, Hiomotie 13, 00380 Helsinki, Finland

Helsinki, 16 Dec 2019

Signed for and on behalf of:


  
Peter Lindgren  
Vice President, ABB Oy

  
Vesa Tiihonen  
Manager, Product Engineering and Quality

### ■ Moving the cabinet after unpacking


Move drive cabinet carefully in the upright position. Avoid tilting. The center of gravity of the cabinet is high.

### Moving the cabinet with rollers

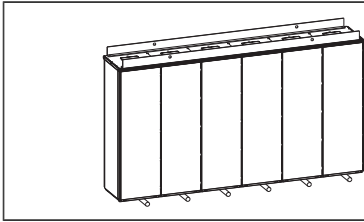

Lay the cabinet on the rollers and move it carefully until close to its final location. Remove the rollers by lifting the unit with a crane, forklift, pallet truck or jack.

### Moving the cabinet to its final placement with a slate bar

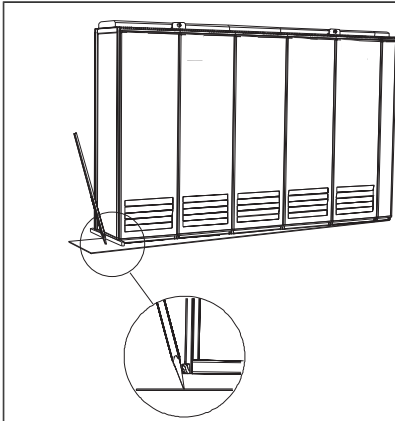


Move the cabinet into its final position with an iron bar. Place a wooden piece at the bottom edge of the cabinet in order not to damage the cabinet frame with the iron bar.

## Attaching the cabinet to the floor and wall or roof

### ■ General rules

- The drive must be installed in an upright vertical position.
- Leave 400 mm (15.75") of free space above the basic roof level of the cabinet for cooling.
- The cabinet can be installed with its back against a wall (a), or back-to-back with another unit (b).
- Leave some space (w) at the side where the cabinet outmost hinges are to allow the doors to open sufficiently. The doors must open 120° to allow supply or inverter moduledrive modulereplacement.




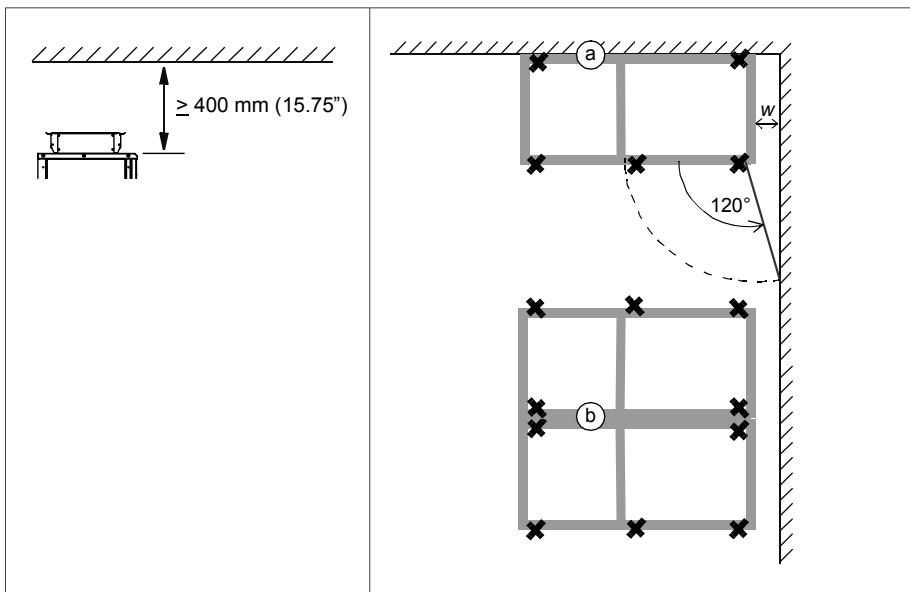

**Note 1:** Any height adjustment must be done before attaching the cabinet sections to the floor or to each other. Height adjustment can be done by using metal shims between the cabinet bottom and floor.



**Note 2:** Depending on the size of the cabinet, it has either bolt-on lifting eyes, or lifting bars with lifting holes. If the cabinet is delivered with lifting bars, remove them. Store the bars for decommissioning. Bolt-on lifting eyes need not be removed unless the holes are used for attaching the cabinet. Plug any unused holes using the existing bolts and sealing rings included. Tighten to 70 N·m (52 lbf·ft).

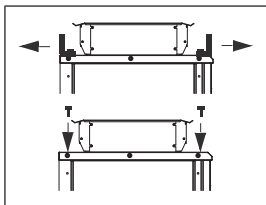



## ■ Attaching the cabinet (non-marine units)

### Alternative 1 – Clamping

1. Insert the clamps (included) into the twin slots along the front and rear edges of the cabinet frame body and fasten them to the floor with a bolt. The recommended maximum distance between the clamps in the front edge is 800 mm (31.5").





2. If floor mounting at the back is not possible, fasten the top of the cabinet to the wall with L-brackets (not included in the delivery) bolted to the lifting eye/bar holes, and suitable hardware.

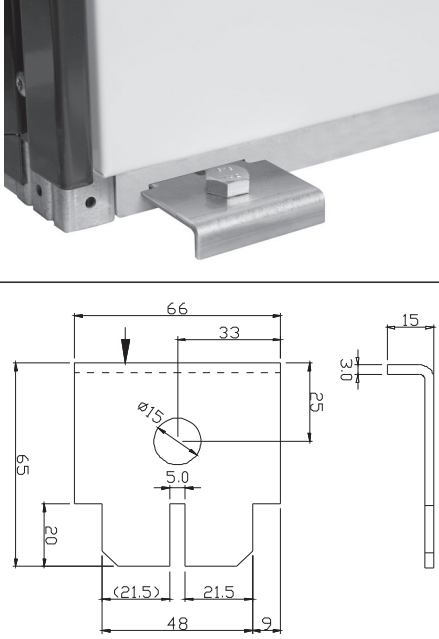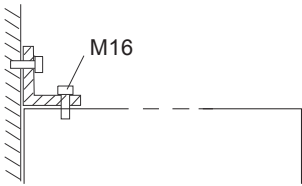Clamping bottom to floor	Attaching top to wall
 <p>The photograph shows the bottom of the cabinet with a metal clamping plate. The technical drawing shows the base plate with dimensions: overall width 66, mounting hole offset 33, mounting hole diameter <math>\varnothing 15</math>, mounting hole offset from bottom 25, mounting hole offset from side 5.0, mounting hole offset from front 21.5, mounting hole offset from back 21.5, mounting hole offset from side 20, mounting hole offset from front 48, mounting hole offset from back 9, mounting hole offset from top 65, mounting hole offset from bottom 15, mounting hole offset from side 30, and mounting hole offset from front 15.</p>	 <p>The drawing shows the top of the cabinet being attached to a wall using an L-bracket and an M16 bolt. The bracket is bolted to the wall, and the cabinet's top is secured to the bracket.</p>



**Alternative 2 – Using the holes inside the cabinet**

- 1. Attach the cabinet to the floor through the bottom fastening holes with M10 to M12 (3/8" to 1/2") bolts. The recommended maximum distance between the front edge fastening points is 800 mm (31.5").
- 2. If the back fastening holes are not accessible, fasten the top of the cabinet to the wall with L-brackets (not included in the delivery) bolted to the lifting eye/bar holes.

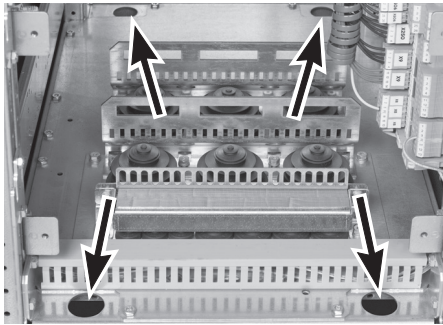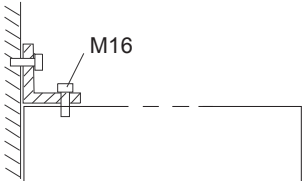
Attaching bottom to floor	Attaching cabinet top to wall
	




### Alternative 3 – Cabinets with plinth options +C164 and +C179

#### Frames R6...R9

1. Attach the plinth to the floor with the brackets included in the plinth package.

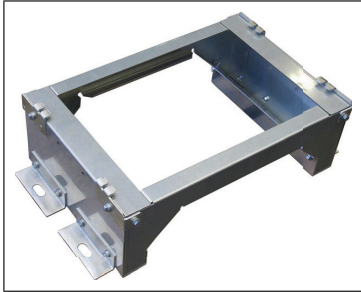

2. Lift the cabinet onto the plinth and attach it to the plinth with the L-brackets delivered with the plinth.

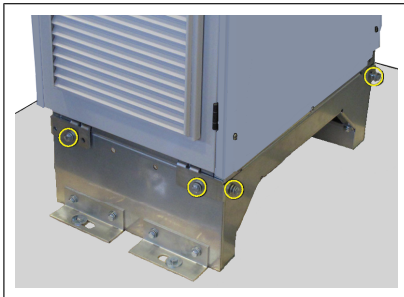

#### Frames R10 and R11

The plinth is attached to the cabinet frame at the factory. Attach the plinth to the floor with the L-brackets with which the cabinet is attached to the transportation pallet.




## Miscellaneous

### ■ Cable duct in the floor below the cabinet

A cable duct can be constructed below the 500 mm wide middle part of the cabinet. The cabinet weight lies on the two 50 mm wide transverse sections which the floor must carry.

Prevent the cooling air flow from the cable duct to the cabinet by bottom plates. To ensure the degree of protection for the cabinet, use the original bottom plates delivered with the unit. With user-defined cable entries, take care of the degree of protection, fire protection and EMC compliance.

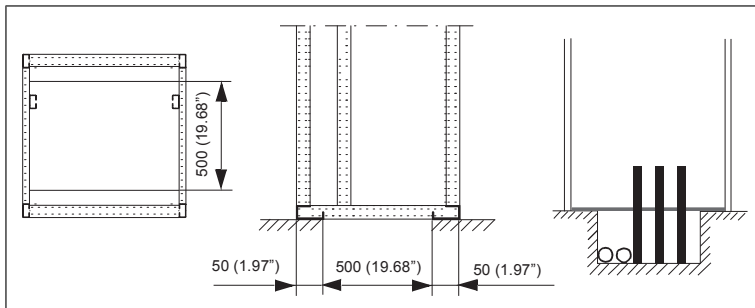

### ■ Arc welding



ABB does not recommend attaching the cabinet by arc welding. However, if arc welding is the only option, connect the return conductor of the welding equipment to the cabinet frame at the bottom within 0.5 meters (1'6\") of the welding point.

**Note:** The thickness of the zinc plating of the cabinet frame is 100...200 micrometers (4...8 mil).



#### **WARNING!**

Make sure that the return wire is connected correctly. Welding current must not return via any component or cabling of the drive. If the welding return wire is connected improperly, the welding circuit can damage electronic circuits in the cabinet.



#### **WARNING!**

Do not inhale the welding fumes.

# 5

## Guidelines for planning the electrical installation

---

### Contents of this chapter

This chapter contains guidelines for planning the electrical installation of the drive.

### Limitation of liability

The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive may experience problems that the warranty does not cover.

### Selecting the supply disconnecting device

The drive is equipped with a main disconnecting device as standard. Depending on the size of the drive, and the selected options, the type of disconnecting device may vary. Examples: switch-disconnector, withdrawable air circuit breaker, etc.

### Selecting the main contactor or breaker

You can order the drive with a main contactor (option +F250) or a molded case circuit breaker (option +F289).

---



## Examining the compatibility of the motor and drive

Use asynchronous AC induction motors, permanent magnet synchronous motors, AC induction servomotors or ABB synchronous reluctance motors (SynRM motors) with the drive.

Select the motor size and drive type from the rating table on basis of the AC line voltage and motor load. You can find the rating table in the appropriate hardware manual. You can also use the DriveSize PC tool.

Make sure that the motor withstands the maximum peak voltage in the motor terminals. See [Requirements table \(page 80\)](#). For basics of protecting the motor insulation and bearings in drive systems, see [Protecting the motor insulation and bearings \(page 80\)](#).

### Note:

- Consult the motor manufacturer before using a motor whose nominal voltage differs from the AC line voltage connected to the drive input.
- The voltage peaks at the motor terminals are relative to the supply voltage of the drive, not the drive output voltage.
- If the motor and drive are not of the same size, consider the operation limits of the drive control program for the motor nominal voltage and current. See the appropriate parameters in the firmware manual.

### ■ Protecting the motor insulation and bearings

The drive employs modern IGBT inverter technology. Regardless of frequency, the drive output comprises pulses of approximately the drive DC bus voltage with a very short rise time. The pulse voltage can almost double at the motor terminals, depending on the attenuation and reflection properties of the motor cable and the terminals. This can cause additional stress on the motor and motor cable insulation.



Modern variable speed drives with their fast rising voltage pulses and high switching frequencies can generate current pulses that flow through the motor bearings. This can gradually erode the bearing races and rolling elements.

$du/dt$  filters protect motor insulation system and reduce bearing currents. Common mode filters mainly reduce bearing currents. Insulated N-end (non-drive end) bearings protect the motor bearings.

### ■ Requirements table

These tables show how to select the motor insulation system and when a drive  $du/dt$  and common mode filters and insulated N-end (non-drive end) motor bearings are required. Ignoring the requirements or improper installation may shorten motor life or damage the motor bearings and voids the warranty.

---

This table shows the requirements when an ABB motor is in use.

Motor type	Nominal AC supply voltage	Requirement for			
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings		
			$P_n < 100 \text{ kW}$ and frame size < IEC 315	$100 \text{ kW} \leq P_n < 350 \text{ kW}$ or IEC 315 ≤ frame size < IEC 400	$P_n \geq 350 \text{ kW}$ or frame size ≥ IEC 400
			$P_n < 134 \text{ hp}$ and frame size < NEMA 500	$134 \text{ hp} \leq P_n < 469 \text{ hp}$ or NEMA 500 ≤ frame size ≤ NEMA 580	$P_n \geq 469 \text{ hp}$ or frame size > NEMA 580
Random-wound M2_, M3_ and M4_	$U_n \leq 500 \text{ V}$	Standard	-	+ N	+ N + CMF
	$500 \text{ V} < U_n \leq 600 \text{ V}$	Standard	+ du/dt	+ N + du/dt	+ N + du/dt + CMF
		or			
		Reinforced	-	+ N	+ N + CMF
		$600 \text{ V} < U_n \leq 690 \text{ V}$ (cable length ≤ 150 m)	Reinforced	+ du/dt	+ N + du/dt
	$600 \text{ V} < U_n \leq 690 \text{ V}$ (cable length > 150 m)	Reinforced	-	+ N	+ N + CMF
Form-wound HX_ and AM_	$380 \text{ V} < U_n \leq 690 \text{ V}$	Standard	n.a.	+ N + CMF	$P_N < 500 \text{ kW}$ : +N + CMF
					$P_N \geq 500 \text{ kW}$ : +N + du/dt + CMF
Old <sup>1)</sup> form-wound HX_ and modular	$380 \text{ V} < U_n \leq 690 \text{ V}$	Check with the motor manufacturer.	+ N + du/dt with voltages over 500 V + CMF		
Random-wound HX_ and AM_ <sup>2)</sup>	$0 \text{ V} < U_n \leq 500 \text{ V}$	Enamelled wire with fiber glass taping	+ N + CMF		
	$500 \text{ V} < U_n \leq 690 \text{ V}$		+ N + du/dt + CMF		
HDP	Consult the motor manufacturer.				

<sup>1)</sup> manufactured before 1.1.1998

<sup>2)</sup> For motors manufactured before 1.1.1998, check for additional instructions with the motor manufacturer.

This table shows the requirements when a non-ABB motor is in use.

Motor type	Nominal AC supply voltage	Requirement for			
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings		
			$P_n < 100 \text{ kW}$ and frame size $< \text{IEC 315}$	$100 \text{ kW} \leq P_n < 350 \text{ kW}$ or $\text{IEC 315} \leq \text{frame size} < \text{IEC 400}$	$P_n \geq 350 \text{ kW}$ or frame size $\geq \text{IEC 400}$
			$P_n < 134 \text{ hp}$ and frame size $< \text{NEMA 500}$	$134 \text{ hp} \leq P_n < 469 \text{ hp}$ or $\text{NEMA 500} \leq \text{frame size} \leq \text{NEMA 580}$	$P_n \geq 469 \text{ hp}$ or frame size $> \text{NEMA 580}$
Random-wound and form-wound	$U_n \leq 420 \text{ V}$	Standard: $\dot{U}_{LL} = 1300 \text{ V}$	-	+ N or CMF	+ N + CMF
	$420 \text{ V} < U_n \leq 500 \text{ V}$	Standard: $\dot{U}_{LL} = 1300 \text{ V}$	+ du/dt	+ du/dt + (N or CMF)	+ N + du/dt + CMF
		or			
	$500 \text{ V} < U_n \leq 600 \text{ V}$	Reinforced: $\dot{U}_{LL} = 1600 \text{ V}$ , 0.2 microsecond rise time	-	+ N or CMF	+ N + CMF
		or			
	$600 \text{ V} < U_n \leq 690 \text{ V}$	Reinforced: $\dot{U}_{LL} = 1600 \text{ V}$	+ du/dt	+ du/dt + (N or CMF)	+ N + du/dt + CMF
		or			
		Reinforced: $\dot{U}_{LL} = 1800 \text{ V}$	-	+ N or CMF	+ N + CMF
	$600 \text{ V} < U_n \leq 690 \text{ V}$	Reinforced: $\dot{U}_{LL} = 1800 \text{ V}$	+ du/dt	+ du/dt + N	+ N + du/dt + CMF
		Reinforced: $\dot{U}_{LL} = 2000 \text{ V}$ , 0.3 microsecond rise time <sup>1)</sup>	-	+ N + CMF	+ N + CMF

1) If the intermediate DC circuit voltage of the drive is increased from the nominal level due to long term resistor braking cycles, check with the motor manufacturer if additional output filters are needed in the applied drive operation range.



The abbreviations used in the tables are defined below.

Abbr.	Definition
$U_n$	Nominal AC line voltage
$\hat{U}_{LL}$	Peak line-to-line voltage at motor terminals which the motor insulation must withstand
$P_n$	Motor nominal power
$du/dt$	$du/dt$ filter at the output of the drive
CMF	Common mode filter
N	N-end bearing: insulated motor non-drive end bearing
n.a.	Motors of this power range are not available as standard units. Consult the motor manufacturer.

### Availability of $du/dt$ filter and common mode filter by drive type

Product type	Availability of $du/dt$ filter	Availability of common mode filter (CMF)
ACS580-07	+E205	+E208

### Additional requirements for explosion-safe (EX) motors

If you will use an explosion-safe (EX) motor, follow the rules in the requirements table above. In addition, consult the motor manufacturer for any further requirements.

### Additional requirements for ABB motors of types other than M2\_, M3\_, M4\_, HX\_ and AM\_

Use the selection criteria given for non-ABB motors.

### Additional requirements for ABB high-output and IP23 motors

The rated output power of high output motors is higher than what is stated for the particular frame size in EN 50347 (2001).

This table shows the requirements for protecting the motor insulation and bearings in drive systems for ABB random-wound motor series (for example, M3AA, M3AP and M3BP).



Nominal AC supply voltage	Requirement for			
	Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings		
		$P_n < 100 \text{ kW}$	$100 \text{ kW} \leq P_n < 200 \text{ kW}$	$P_n \geq 200 \text{ kW}$
		$P_n < 140 \text{ hp}$	$140 \text{ hp} \leq P_n < 268 \text{ hp}$	$P_n \geq 268 \text{ hp}$
$U_n \leq 500 \text{ V}$	Standard	-	+ N	+ N + CMF
$500 \text{ V} < U_n \leq 600 \text{ V}$	Standard	+ du/dt	+ du/dt + N	+ du/dt + N + CMF
	or Reinforced	-	+ N	+ N + CMF
$600 \text{ V} < U_n \leq 690 \text{ V}$	Reinforced	+ du/dt	+ du/dt + N	+ du/dt + N + CMF

**Additional requirements for non-ABB high-output and IP23 motors**

The rated output power of high-output motors is higher than what is stated for the particular frame size in EN 50347 (2001).

If you plan to use a non-ABB high-output motor or an IP23 motor, consider these additional requirements for protecting the motor insulation and bearings in drive systems:

- If motor power is below 350 kW: Equip the drive and/or motor with the filters and/or bearings according to the table below.
- If motor power is above 350 kW: Consult the motor manufacturer.




Nominal AC supply voltage	Requirement for		
	Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings	
		$P_n < 100 \text{ kW}$ or frame size $< \text{IEC 315}$	$100 \text{ kW} < P_n < 350 \text{ kW}$ or $\text{IEC 315} < \text{frame size} < \text{IEC 400}$
		$P_n < 134 \text{ hp}$ or frame size $< \text{NEMA 500}$	$134 \text{ hp} < P_n < 469 \text{ hp}$ or $\text{NEMA 500} < \text{frame size} < \text{NEMA 580}$
$U_n \leq 420 \text{ V}$	Standard: $\dot{U}_{LL} = 1300 \text{ V}$	+ N or CMF	+ N or CMF
$420 \text{ V} < U_n < 500 \text{ V}$	Standard: $\dot{U}_{LL} = 1300 \text{ V}$	+ du/dt + (N or CMF)	+ N + du/dt + CMF
	or		
	Reinforced: $\dot{U}_{LL} = 1600 \text{ V}$ , 0.2 micro-second rise time	+ N or CMF	+ N or CMF
$500 \text{ V} < U_n \leq 600 \text{ V}$	Reinforced: $\dot{U}_{LL} = 1600 \text{ V}$	+ du/dt + (N or CMF)	+ N + du/dt + CMF
	or		
	Reinforced: $\dot{U}_{LL} = 1800 \text{ V}$	+ N or CMF	+ N + CMF
$600 \text{ V} < U_n \leq 690 \text{ V}$	Reinforced: $\dot{U}_{LL} = 1800 \text{ V}$	+ N + du/dt	+ N + du/dt + CMF
	Reinforced: $\dot{U}_{LL} = 2000 \text{ V}$ , 0.3 micro-second rise time <sup>1)</sup>	+ N + CMF	+ N + CMF

<sup>1)</sup> If the intermediate DC circuit voltage of the drive is increased from the nominal level due to long term resistor braking cycles, check with the motor manufacturer if additional output filters are needed in the applied drive operation range.

### Additional data for calculating the rise time and the peak line-to-line voltage

The diagrams below show the relative peak line-to-line voltage and rate of change of voltage as a function of the motor cable length. If you need to calculate the actual peak voltage and voltage rise time considering the actual cable length, proceed as follows:

- Peak line-to line voltage: Read the relative  $\dot{U}_{LL}/U_N$  value from the diagram below and multiply it by the nominal supply voltage ( $U_N$ ).
- Voltage rise time: Read the relative values  $\dot{U}_{LL}/U_N$  and  $(du/dt)/U_N$  from the diagram below. Multiply the values by the nominal supply voltage ( $U_N$ ) and substitute into equation  $t = 0.8 \cdot \dot{U}_{LL}/(du/dt)$ .

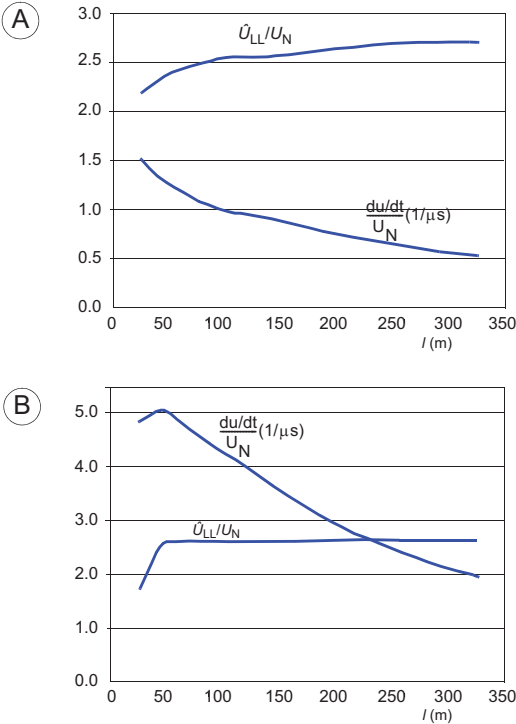

A	Drive with du/dt filter
B	Drive without du/dt filter
<i>l</i>	Motor cable length
$\dot{U}_{LL}/U_N$	Relative peak line-to-line voltage
$(du/dt)/U_N$	Relative du/dt value



## Selecting the power cables

### ■ General guidelines

Select the input power and motor cables according to local regulations.

- **Current:** Select a cable capable of carrying the maximum load current.
- **Temperature:** For an IEC installation, select a cable rated for at least 70 °C (158 °F) maximum permissible temperature of conductor in continuous use. For North America, select a cable rated for at least 75 °C (167 °F).
- **Voltage:** 600 V AC cable is accepted for up to 500 V AC. 750 V AC cable is accepted for up to 600 V AC. 1000 V AC cable is accepted for up to 690 V AC.

To comply with the EMC requirements of the CE mark, use one of the preferred cable types. See [Preferred power cable types \(page 88\)](#).

Symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as the stress on motor insulation, bearing currents and wear.

Metal conduit reduces electromagnetic emission of the whole drive system.

The protective conductor must always have an adequate conductivity.

Unless local wiring regulations state otherwise, the cross-sectional area of the protective conductor must agree with the conditions that require automatic disconnection of the supply required in 411.3.2. of IEC 60364-4-41:2005 and be capable of withstanding the prospective fault current during the disconnection time of the protective device. The cross-sectional area of the protective conductor can either be selected from the table below or calculated according to 543.1 of IEC 60364-5-54.

This table shows the minimum cross-sectional area of the protective conductor related to the phase conductor size according to IEC/UL 61800-5-1 when the phase conductor and the protective conductor are made of the same metal. If this is not so, the cross-sectional area of the protective grounding conductor shall be determined in a manner which produces a conductance equivalent to that which results from the application of this table.

Cross-sectional area of the phase conduct- ors $S$ (mm <sup>2</sup> )	Minimum cross-sectional area of the corres- ponding protective conductor $S_p$ (mm <sup>2</sup> )
$S \leq 16$	$S^1$
$16 < S \leq 35$	16
$35 < S$	$S/2$

<sup>1)</sup> To comply with standard IEC/EN 61800-5-1 (UL 61800-5-1)

- use a protective earth conductor with a minimum cross-sectional area of 10 mm<sup>2</sup> Cu or 16 mm<sup>2</sup> Al (as an alternative when aluminum cables are permitted), or

- use a second protective earth conductor of the same cross-sectional area as the original protective earth conductor,  
or
- use a device that automatically disconnects the supply if the protective earth conductor is damaged. If the protective earth conductor is separate (that is, it does not form part of the input power cable or the input power cable enclosure), the minimum cross-sectional area must be:
  - 2.5 mm<sup>2</sup> when the conductor is mechanically protected,
  - or
  - 4 mm<sup>2</sup> when the conductor is not mechanically protected.




■ Typical power cable sizes

See the technical data.

■ Power cable types







Preferred power cable types

This section presents the preferred cable types. Make sure that the selected cable type also complies with local/state/country electrical codes.

Cable type	Use as input power cabling	Use as motor cabling
 <p>Symmetrical shielded (or armored) cable with three phase conductors and concentric PE conductor as shield (or armor)</p>	Yes	Yes
 <p>Symmetrical shielded (or armored) cable with three phase conductors and symmetrically constructed PE conductor and a shield (or armor)</p>	Yes	Yes
 <p>Symmetrical shielded (or armored) cable with three phase conductors and a shield (or armor), and separate PE conductor/cable<sup>1)</sup></p>	Yes	Yes


1) A separate PE conductor is required if the conductivity of the shield (or armor) is not sufficient for the PE use.

# Alternate power cable types

Cable type	Use as input power cabling	Use as motor cabling
 <p>PVC</p> <p>Four-conductor cabling in PVC conduit or jacket (three phase conductors and PE)</p>	<p>Yes with phase conductor smaller than 10 mm<sup>2</sup> (8 AWG) Cu.</p>	<p>Yes with phase conductor smaller than 10 mm<sup>2</sup> (8 AWG) Cu, or motors up to 30 kW (40 hp).</p> <p><b>Note:</b> Shielded or armored cable, or cabling in metal conduit is always recommended to minimize radio frequency interference.</p>
 <p>EMT</p> <p>Four-conductor cabling in metal conduit (three phase conductors and PE), eg, EMT, or four-conductor armored cable</p>	<p>Yes</p>	<p>Yes with phase conductor smaller than 10 mm<sup>2</sup> (8 AWG) Cu, or motors up to 30 kW (40 hp)</p>
 <p>Well-shielded (Al/Cu shield or armor) four-conductor cable (three phase conductors and a PE)</p>	<p>Yes</p>	<p>Yes with motors up to 100 kW (135 hp). A potential equalization between the frames of motor and driven equipment is required.</p>
 <p>PE</p> <p>A single-core cable system: three phase conductors and PE conductor on cable tray</p>  <p>Preferable cable arrangement to avoid voltage or current unbalance between the phases</p>	<p>Yes</p> <p> <b>WARNING!</b> If you use unshielded single-core cables in an IT network, make sure that the non-conductive outer sheath (jacket) of the cables have good contact with a properly grounded conductive surface. For example, install the cables on a properly grounded cable tray. Otherwise voltage may become present on the non-conductive outer sheath of the cables, and there is even a risk of an electric shock.</p>	<p>No</p>



Not allowed power cable types

Cable type	Use as input power cabling	Use as motor cabling
 Symmetrical shielded cable with individual shields for each phase conductor	No	No

■ Additional guidelines, North America

ABB recommends the use of conduit for power wiring to the drive and between the drive and the motor(s). Due to the variety of application needs, metallic and non-metallic conduit can be used. ABB recommends the use of metallic conduit.

The following table shows examples of various materials and methods for wiring the drive in the intended application. See NEC 70 along with state and local codes for the appropriate materials for your application.

In all applications, ABB prefers the use of symmetrical shielded VFD cable between drive and motor(s).

Wiring method	Notes
Conduit - Metallic <sup>1) 2)</sup>	
Electrical metallic tubing: Type EMT	Prefer symmetrical shielded VFD cable. Use separate conduit run for each motor. Do not run input power wiring and motor wiring in the same conduit.
Rigid metal conduit: Type RMC	
Liquid-tight flexible metal electrical conduit: Type LFMC	
Conduit - Non-metallic <sup>2) 3)</sup>	
Liquid-tight flexible non-metallic conduit: Type LFNC	Prefer symmetrical shielded VFD cable. Use separate conduit run for each motor. Do not run input power wiring and motor wiring in the same conduit.
Wireways <sup>2)</sup>	
Metallic	Prefer symmetrical shielded VFD cable. Separate motor wiring from input power wiring and other low voltage wiring. Do not run outputs of multiple drives parallel. Bundle each cable (wiring) together and use separators where possible.



Wiring method	Notes
Free air <sup>2)</sup>	
Enclosures, air handlers, etc.	Prefer symmetrical shielded VFD cable. Allowed internally in enclosures when in accordance with UL.

- 1) Metallic conduit may be used as an additional ground path, provided this path is a solid path capable of handling ground currents.
- 2) See NFPA NEC 70, UL, and local codes for your application.
- 3) Non-metallic conduit use underground is allowed; however, these installations inherently have an increased chance for nuisance problems due to the potential for water/moisture in the conduit. Water/moisture in the conduit increases the likelihood of VFD faults or warnings. Proper installation is required to make sure there is no intrusion of water/moisture.


### Metal conduit

Couple separate parts of a metal conduit together: bridge the joints with a ground conductor bonded to the conduit on each side of the joint. Also bond the conduits to the drive enclosure and motor frame. Use separate conduits for input power, motor, brake resistor, and control wiring. Do not run motor wiring from more than one drive in the same conduit.

### ■ Power cable shield

If the cable shield is used as the sole protective earth (PE) conductor, make sure that its conductivity agrees with the PE conductor requirements.

To effectively suppress radiated and conducted radio-frequency emissions, the cable shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminum shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a concentric layer of copper wires with an open helix of copper tape or copper wire. The better and tighter the shield, the lower the emission level and bearing currents.

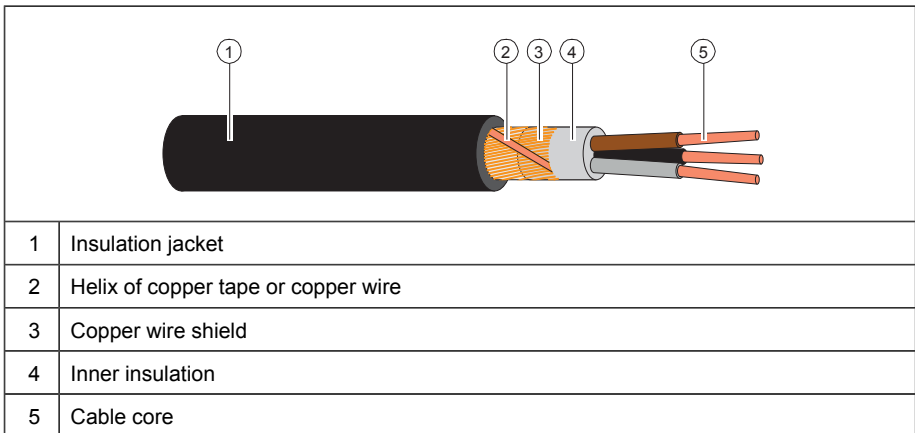


## Selecting the control cables

### ■ Shielding

Only use shielded control cables.

Use a double-shielded twisted pair cable for analog signals. This type of cable is recommended for the pulse encoder signals also. Use one individually shielded pair for each signal. Do not use common return for different analog signals.

A double-shielded cable (a) is the best alternative for low-voltage digital signals, but single-shielded (b) twisted pair cable is also acceptable.

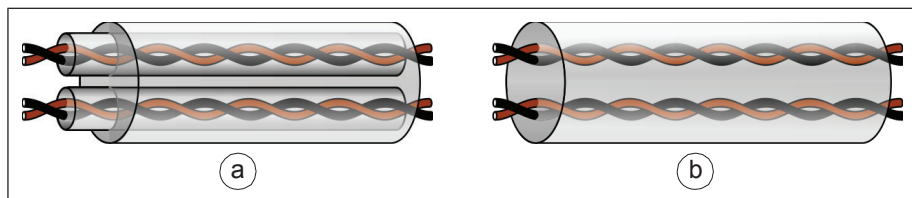

### ■ Signals in separate cables

Run analog and digital signals in separate, shielded cables. Do not mix 24 V DC and 115/230 V AC signals in the same cable.

### ■ Signals that can be run in the same cable

If their voltage does not exceed 48 V, relay-controlled signals can be run in the same cables as digital input signals. The relay-controlled signals should be run as twisted pairs.

### ■ Relay cable

The cable type with braided metallic shield (for example ÖLFLEX by LAPPKABEL, Germany) has been tested and approved by ABB.

### ■ Control panel to drive cable

Use EIA-485 with male RJ-45 connector, cable type Cat 5e or better. The maximum permitted length of the cable is 100 m (328 ft).

### ■ PC tool cable

Connect the Drive composer PC tool to the drive through the USB port of the control panel. Use a USB Type A (PC) - Type Mini-B (control panel) cable. The maximum length of the cable is 3 m (9.8 ft).


# Routing the cables

## ■ General guidelines – IEC

- Route the motor cable away from other cables. Motor cables of several drives can be run in parallel installed next to each other.
- Install the motor cable, input power cable and control cables on separate trays.
- Avoid long parallel runs of motor cables with other cables.
- Where control cables must cross power cables, make sure that they are arranged at an angle as near to 90 degrees as possible.
- Do not run extra cables through the drive.
- Make sure that the cable trays have good electrical bonding to each other and to the grounding electrodes. Aluminum tray systems can be used to improve local equalizing of potential.

The following figure illustrates the cable routing guidelines with an example drive.

**Note:** When motor cable is symmetrical and shielded and it has short parallel runs with other cables (< 1.5 m / 5 ft), distances between the motor cable and other cables can be reduced by half.

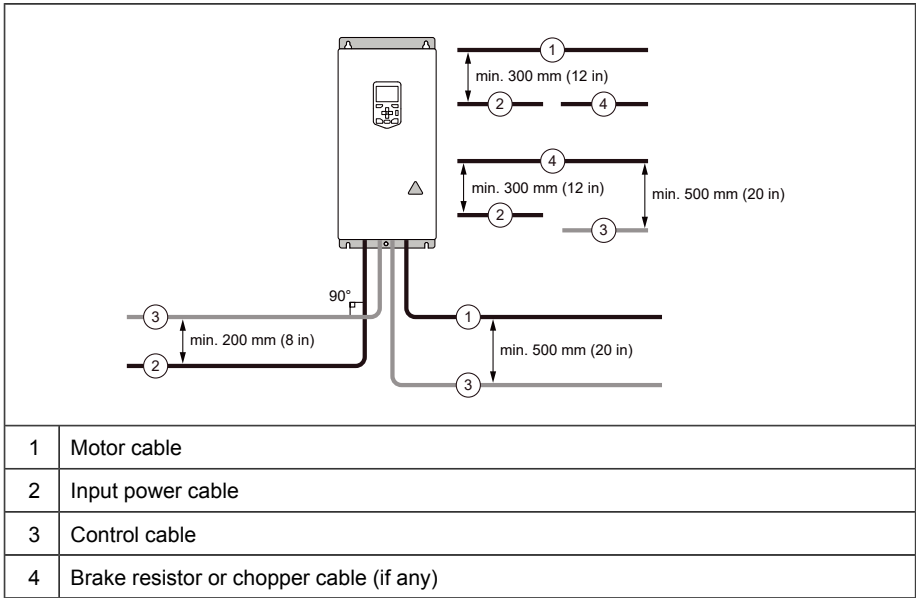


■ General guidelines – North America

Make sure that the installation is in accordance with national and local codes. Obey these general guidelines:

- Use separate conduits for the input power, motor, brake resistor (optional), and control cabling.
- Use separate conduit for each motor cabling.

The following figure illustrates the cable routing guidelines with an example drive.

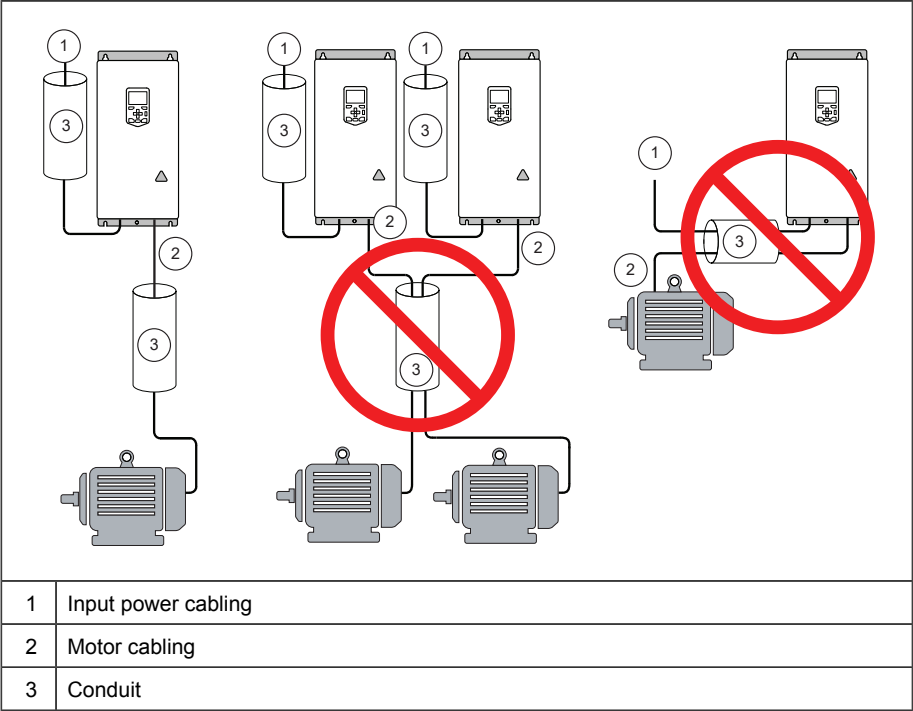


### ■ Continuous motor cable shield/conduit or enclosure for equipment on the motor cable

To minimize the emission level when safety switches, contactors, connection boxes or similar equipment are installed on the motor cable between the drive and the motor:

- Install the equipment in a metal enclosure.
- Use either a symmetrical shielded cable, or install the cabling in a metal conduit.
- Make sure that there is a good and continuous galvanic connection in the shield/conduit between drive and motor.
- Connect the shield/conduit to the protective ground terminal of the drive and the motor.

### ■ Separate control cable ducts

Put 24 V DC and 230 V AC (120 V AC) control cables in separate ducts, unless the 24 V DC cable is insulated for 230 V AC (120 V AC) or insulated with an insulation sleeving for 230 V AC (120 V AC).

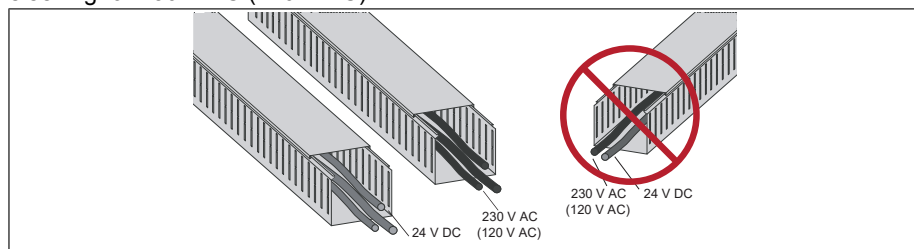


## Implementing short-circuit and thermal overload protection

### ■ Protecting the input cabling and drive in short-circuits

The drive is equipped with internal AC fuses (1) as standard. The fuses restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive.

Protect the input cable with fuses or circuit breaker (2) according to local safety regulations, appropriate input voltage and the rated current of the drive (see chapter [Technical data \(page 195\)](#)).



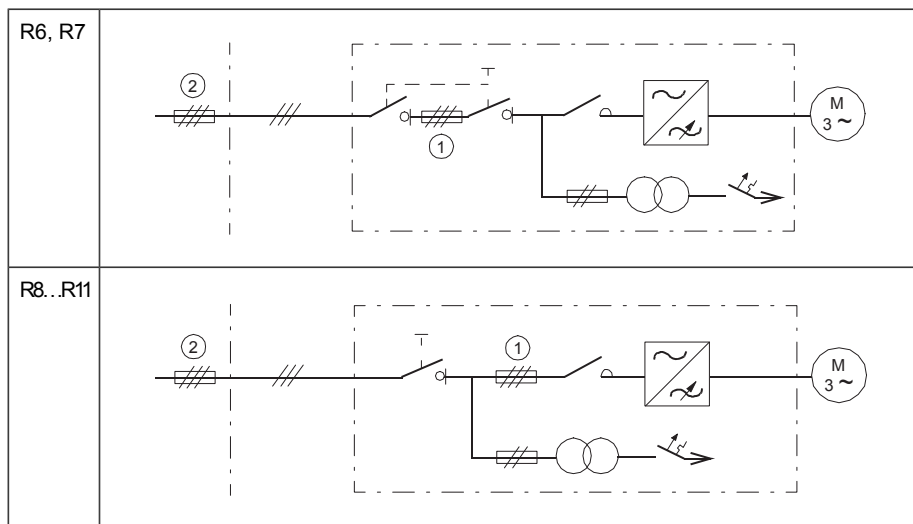

### ■ Protecting the motor and motor cable in short-circuits

The drive protects the motor cable and motor in a short-circuit situation when the motor cable is sized according to the nominal current of the drive. No additional protection devices are needed.

### ■ Protecting the drive and the power cables against thermal overload

The drive protects itself and the input and motor cables against thermal overload when the cables are sized according to the nominal current of the drive. No additional thermal protection devices are needed.

#### WARNING!

If the drive is connected to multiple motors, use a separate circuit breaker or fuses for protecting each motor cable and motor against overload. The drive overload protection is tuned for the total motor load. It may not trip due to an overload in one motor circuit only.

### ■ Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. Depending on a drive parameter value, the function either monitors a calculated temperature value (based on a motor thermal model) or an actual temperature indication given by motor temperature sensors.

The motor thermal protection model supports thermal memory retention and speed sensitivity. The user can tune the thermal model further by feeding in additional motor and load data.

The most common temperature sensor types are thermal switch (for example Klixon), PTC or Pt100.

For more information, see the firmware manual.

## Protecting the drive against ground faults

The drive is equipped with an internal ground fault protective function to protect the unit against ground faults in the motor and motor cable. This function is not a personnel safety or a fire protection feature. See the firmware manual for more information.

### ■ Residual current device compatibility

The drive is suitable to be used with residual current devices of Type B.

**Note:** As standard, the drive contains capacitors connected between the main circuit and the frame. These capacitors and long motor cables increase the ground leakage current and may cause nuisance faults in residual current devices.

## Implementing the emergency stop function

You can order the drive with an emergency stop function (option).

See the appropriate option manual for more information.

Option code	User's manual	Manual code (English)
+Q951	<i>Emergency stop, stop category 0 (option +Q951) for ACS580-07, ACH580-07 and ACQ580-07 drives user's manual</i>	<a href="#">3AXD50000171828</a>
+Q963	<i>Emergency Stop, Category 0 (option +Q963) without opening main contactor with safety relay for ACS580-07, ACH580-07 and ACQ580-07 drives user's manual</i>	<a href="#">3AXD50000171835</a>

## Implementing the Safe torque off function

See chapter *The Safe torque off function (page 271)*.

## Implementing the power loss ride-through function

If the incoming supply voltage is cut off, the drive will continue to operate by utilizing the kinetic energy of the rotating motor. The drive will be fully operational as long as the motor rotates and generates energy to the drive.

If the drive is equipped with a main contactor (option +F250), it restores the drive input power after a short break. The power supply for the contactor control circuit is buffered.

It keeps the contactor closed in short power-loss situations. If the drive is equipped an external uninterruptible auxiliary power supply (option +G307), it keeps the main contactor closed in power-loss situations.

Note that if the power loss lasts so long that the drive trips on undervoltage, a fault reset and a fresh start command is required to continue operation.

Implement the power-loss ride-through function as follows:

1. Enable the power-loss ride-through function of the drive (parameter 30.31).
2. Enable the automatic restart of the motor after a short power supply break:
  - Set the start mode to automatic (parameter 21.01 or 21.19, depending on the motor control mode being used).
  - Define the automatic restart time (parameter 21.18).



**WARNING!**

Make sure that a flying restart of the motor will not cause any danger. If you are in doubt, do not implement the power loss ride-through function.

---

## Using power factor compensation capacitors with the drive

Power factor compensation is not needed with AC drives. However, if a drive is to be connected in a system with compensation capacitors installed, note the following restrictions.



**WARNING!**

Do not connect power factor compensation capacitors or harmonic filters to the motor cables (between the drive and the motor). They are not meant to be used with AC drives and can cause permanent damage to the drive or themselves.

---

If there are power factor compensation capacitors in parallel with the input of the drive:

1. Do not connect a high-power capacitor to the power line while the drive is connected. The connection will cause voltage transients that may trip or even damage the drive.
  2. If capacitor load is increased/decreased step by step when the AC drive is connected to the power line, make sure that the connection steps are low enough not to cause voltage transients that would trip the drive.
  3. Make sure that the power factor compensation unit is suitable for use in systems with AC drives, ie, harmonic generating loads. In such systems, the compensation unit should typically be equipped with a blocking reactor or harmonic filter.
-



## Using a safety switch between the drive and the motor

ABB recommends to install a safety switch between the permanent magnet motor and the drive output. The switch is needed to isolate the motor from the drive during maintenance work on the drive.

## Implementing an ATEX-certified motor thermal protection

With option +Q971, the drive provides ATEX-certified safe motor disconnection without contactor using the drive Safe torque off function. To implement the thermal protection of a motor in explosive atmosphere (Ex motor), you must also:

- use an ATEX-certified Ex motor
- order an ATEX-certified thermistor protection module for the drive (option +L357), or acquire and install an ATEX-compliant protection relay
- do the necessary connections.

For more information, see:

User's manual	Manual code (English)
<i>CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (option +L537+Q971) user's manual</i>	<a href="#">3AXD50000030058</a>

## Controlling a contactor between drive and motor

The control of the output contactor depends on how you use the drive, that is, which motor control mode and which motor stop mode you select.

If you have the vector control mode and motor ramp stop selected, open the contactor as follows:

1. Give a stop command to the drive.
2. Wait until the drive decelerates the motor to zero speed.
3. Open the contactor.

If you have the vector control mode and motor coast stop, or scalar control mode selected, open the contactor as follows:

1. Give a stop command to the drive.
2. Open the contactor.



### WARNING!

When the vector control mode is in use, never open the output contactor while the drive controls the motor. The vector control operates extremely fast, much faster than it takes for the contactor to open its contacts. When the contactor starts



opening while the drive controls the motor, the vector control will try to maintain the load current by immediately increasing the drive output voltage to the maximum. This will damage, or even burn the contactor completely.

---

## Implementing a bypass connection

If bypassing is required, employ mechanically or electrically interlocked contactors between the motor and the drive and between the motor and the power line. Make sure with interlocking that the contactors cannot be closed simultaneously. The installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".

Bypass connection is available as a factory-installed option for some cabinet-installed drive types. Consult ABB for more information.

---



### **WARNING!**

Never connect the drive output to the electrical power network. The connection may damage the drive.

---


## Protecting the contacts of relay outputs

Inductive loads (relays, contactors, motors) cause voltage transients when switched off.

It is highly recommended that inductive loads are equipped with noise attenuating circuits (varistors, RC filters [AC] or diodes [DC]) to minimize the EMC emission at switch-off. If not suppressed, the disturbances can connect capacitively or inductively to other conductors in the control cable and form a risk of malfunction in other parts of the system.

Install the protective component as close to the inductive load as possible. Do not install protective components at the relay outputs.



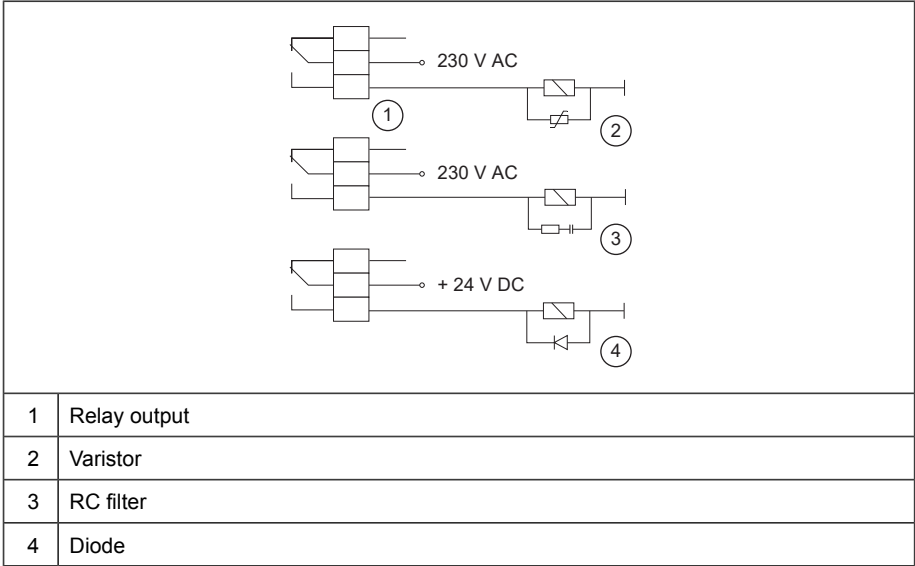

## Implementing a motor temperature sensor connection



### WARNING!

IEC 60664 and IEC 61800-5-1 require double or reinforced insulation between live parts and accessible parts when:

- the accessible parts are not conductive, or
- the accessible parts are conductive, but not connected to the protective earth.

Obey this requirement when you plan the connection of the motor temperature sensor to the drive.

You have these implementation alternatives:

1. If there is double or reinforced insulation between the sensor and the live parts of the motor: You can connect the sensor directly to the analog/digital input(s) of the drive. See the control cable connection instructions.
2. If there is basic insulation between the sensor and the live parts of the motor: You can connect the sensor to the analog/digital input(s) of the drive. All other circuits connected to the digital and analog inputs (typically extra-low voltage circuits) must be:
  - protected against contact, and
  - insulated with basic insulation from other low-voltage circuits. The insulation must be rated for the same voltage level as the drive main circuit.

**Note:** Extra-low voltage circuits (for example, 24 V DC) typically do not meet these requirements.

As an alternative, you can connect the sensor with basic insulation to the analog/digital input(s) of the drive, if you do not connect any other external control circuits to the drive digital and analog inputs.

3. You can connect the sensor to the drive via an option module. The sensor and the module must form a double or reinforced insulation between the motor live parts and the drive control unit. See [Connecting motor temperature sensor to the drive via an option module \(page 102\)](#).
4. You can connect a sensor to a digital input of the drive via an external relay. The sensor and the relay must form a double or reinforced insulation between the motor live parts and the digital input of the drive.

See sections,

- [AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs \(X1\) \(page 144\)](#)
- [Control unit \(page 139\)](#)
- [CMOD-02 multifunction extension module \(external 24 V AC/DC and isolated PTC interface\) \(page 311\)](#)

#### ■ Connecting motor temperature sensor to the drive via an option module

This table shows:

- option module types that you can use for the motor temperature sensor connection
- insulation or isolation level that each option module forms between its temperature sensor connector and other connectors
- temperature sensor types that you can connect to each option module
- temperature sensor insulation requirement in order to form, together with the insulation of the option module, a reinforced insulation between the motor live parts and the drive control unit.



Option module		Temperature sensor type			Temperature sensor insulation requirement
Type	Insulation/Isolation	PTC	KTY	Pt100, Pt1000	
FIO-11	Galvanic isolation between sensor connector and other connectors (including drive control unit connector)	-	x	x	Reinforced insulation
FEN-xx	Galvanic isolation between sensor connector and other connectors (including drive control unit connector)	x	x	-	Reinforced insulation
FAIO-01	Basic insulation between sensor connector and drive control unit connector. No insulation between sensor connector and other I/O connectors.	x	x	x	Basic insulation. Connectors of option module other than sensor connector must be left unconnected.
FPTC-xx <sup>1)</sup>	Reinforced insulation between sensor connector and other connectors (including drive control unit connector).	x	-	-	No special requirement

1) Suitable for use in safety functions (SIL2 / PL c rated).

Option module		Temperature sensor type			Temperature sensor insulation requirement
Type	Insulation/Isolation	PTC	KTY	Pt100, Pt1000	
CMOD-02	Reinforced insulation between the sensor connector and the other connectors of the module (including drive control unit connector). → No special requirements for the thermistor insulation level. (The drive control unit is PELV compatible also when the module and a thermistor protection circuit are installed.)	x	-	-	No special requirement
CPTC-02		x	-	-	No special requirement



## **Supplying power for the auxiliary circuits**

The drive is equipped with an auxiliary voltage transformer which supplies, for example, control unit(s) and cooling fan(s).

The user must supply these options from external power sources:

- +G300/+G301: Cabinet heaters and/or lighting (230 or 115 V AC; external fuse: 16 A gG)
- +G307: Connection for an external uninterruptible power supply (230 or 115 V AC; external fuse 16 A gG)



# 6

## Electrical installation

---

### Contents of this chapter

This chapter gives instructions on the wiring the drive.

### Warning

---



#### **WARNING!**

If you are not a qualified electrical professional, do not do installation or maintenance work. Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur.

---


### Attaching the device stickers on the cabinet door

A multilingual device label sticker is delivered with the drive. Attach the stickers in the local language on the English texts, see section [Door switches and lights \(page 51\)](#).



## Layout of the cable entries (frames R6...R9)

The layout of the input and motor cable connection terminals of frame R9 bottom entry without du/dt filter option (+E205) is shown below. The shrouds in front of the terminals are removed. The layout is similar for the other frame sizes.

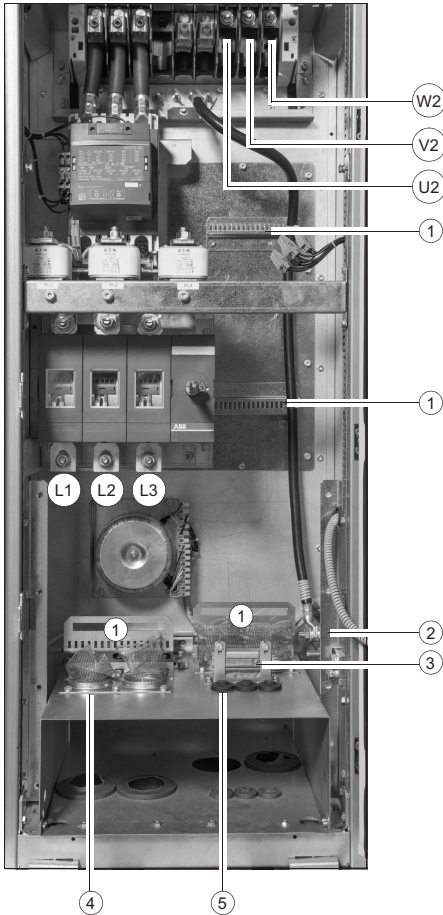


L1, L2, L3	Input power cable terminals
U2, V2, W2	Motor cable terminals
1	Strain relief
2	PE (ground) terminal
3	EMI-conductive cushion for grounding of the outer shields of the control cables
4	Power cable entry
5	Control cable entry



## Layout of the cable entries (frames R10 and R11)


The layout of the input and motor cable connection terminals of frame R10 bottom entry is shown below. The shrouds in front of the terminals are removed. The layout is similar for frame R11.

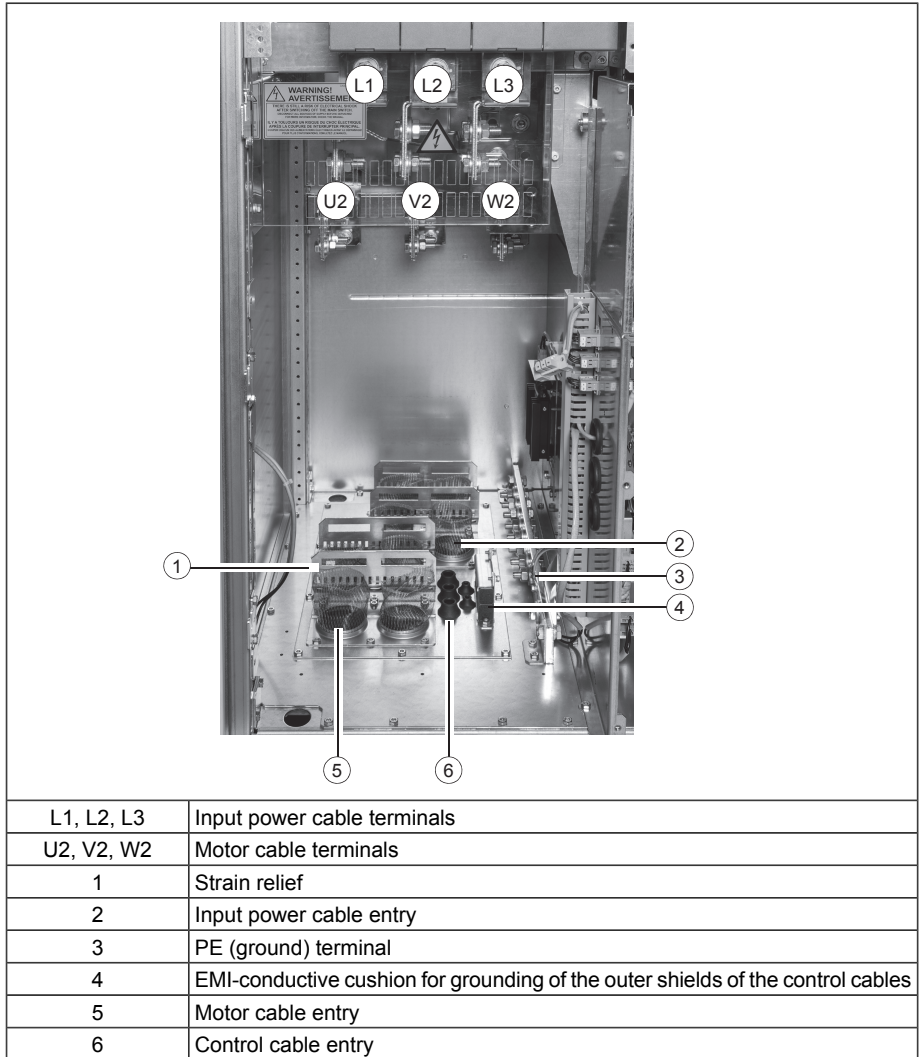

## Connecting the motor cable at the motor end

Connect the power cables at the motor end.

For minimum radio-frequency interference, ground the cable shield 360 degrees at the cable entry of the motor terminal box.

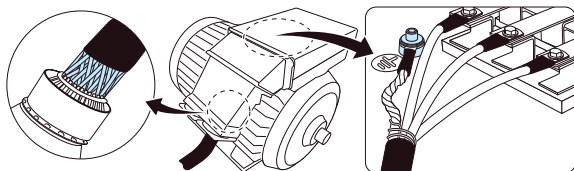

## Measuring the insulation

### ■ Measuring the insulation of the drive



#### **WARNING!**

Do not do any voltage withstand or insulation resistance tests on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

### ■ Measuring the insulation of the input power cable

Before you connect the input power cable to the drive, measure its insulation according to local regulations.

### ■ Measuring the insulation of the motor and motor cable




#### **WARNING!**

Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation or maintenance work.



1. Do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Make sure that the motor cable is disconnected from the drive output terminals.
3. Measure the insulation resistance between each phase conductor and the protective earth conductor. Use a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must be more than 100 Mohm (reference value at 25 °C [77°F]). For the insulation resistance of other motors, refer to the manufacturer's instructions.

**Note:** Moisture inside the motor casing reduces the insulation resistance. If you think that there is moisture in the motor, dry the motor and do the measurement again.

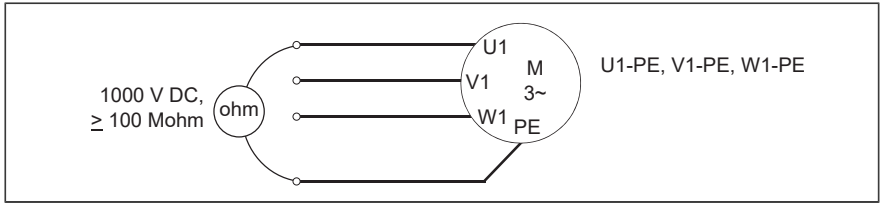

## Grounding system compatibility check

The standard drive can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter and ground-to-phase varistor. See sections *When to disconnect the ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems* (page 317), *Disconnecting the EMC filter and ground-to-phase varistor (frames R6...R9)* (page 321) and *Disconnecting the ground-to-phase varistor (frames R10 and R11)* (page 321).



### WARNING!

Do not install the drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger or damage the drive.



### WARNING!


Do not install the drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

## Connecting the power cables


### ■ Preparing the cable ends and making 360-degree grounding at the cable entry

1. Peel off 3...5 cm (1 1/4 ... 2 in) of the outer insulation of the cables at the cable entries with the conductive sleeves for the 360° high-frequency grounding.



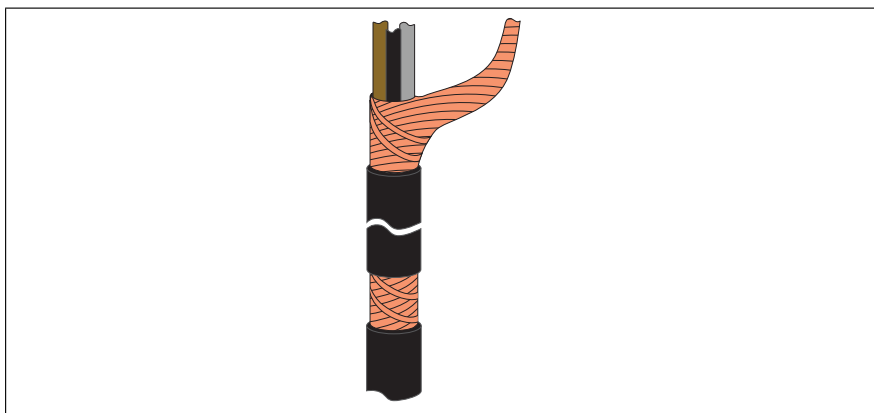


## 2. Prepare the ends of the cables.

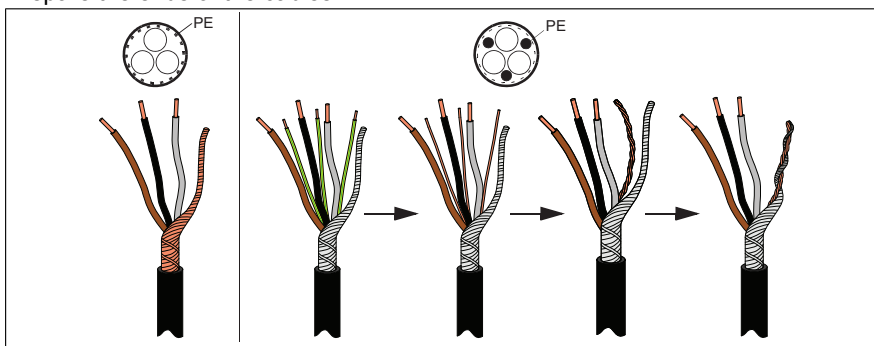


### **WARNING!**

Apply grease to stripped aluminum conductors before attaching them to non-coated aluminum cable lugs. Obey the grease manufacturer's instructions. Aluminum-aluminum contact can cause oxidation in the contact surfaces.

3. If fire insulation is used, make an opening in the mineral wool sheet according to the diameter of the cable.
4. Put the cables through the entry plate.
5. Remove rubber grommets from the entry plate for the cables to be connected. Cut adequate holes into the rubber grommets. Slide the grommets onto the cables. Slide the cables through the entry plate and attach the grommets to the holes.
6. Attach the conductive sleeves to the cable shields with cable ties. Tie up the unused conductive sleeves with cable ties. An example of bottom entry is shown below. For top entry, place the grommet upwards.

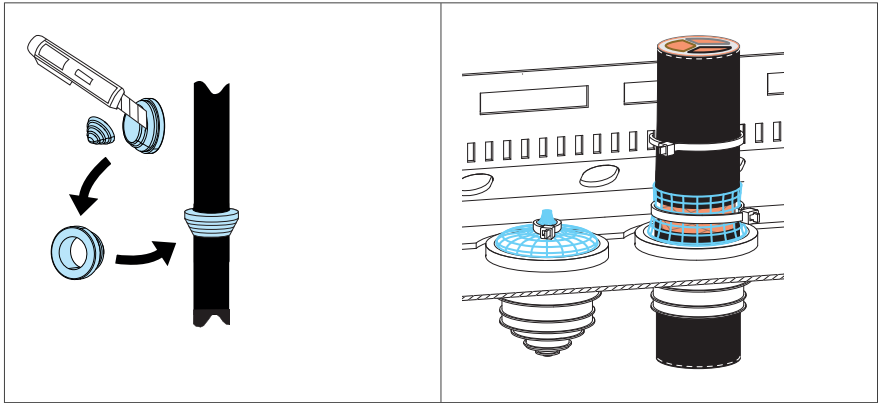

### ■ Connection diagram

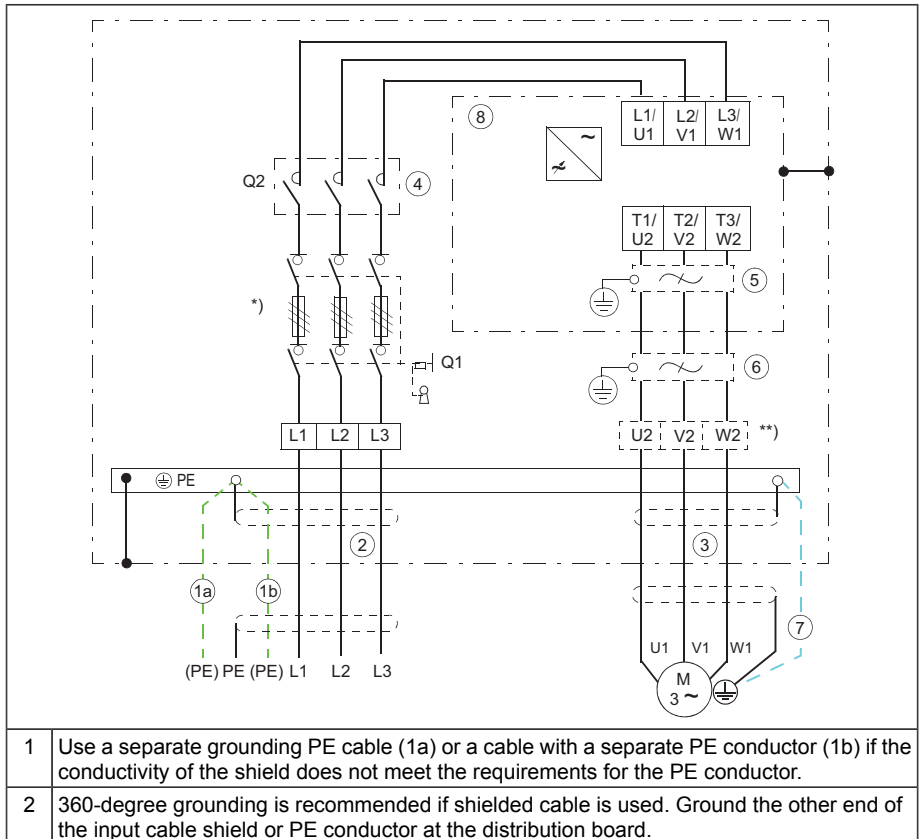

3	360-degree grounding is required.
4	Line contactor (option +F250)
5	Common mode filter (option +E208 for frames R6 to R9). Standard in frames R10 and R11.
6	du/dt filter (option +E205)
7	Use a separate grounding cable if the shield does not meet the requirements of IEC 61439-1 and there is no symmetrically constructed grounding conductor in the cable.
8	Drive module

**Note:** If there is a symmetrically constructed grounding conductor on the motor cable in addition to the conductive shield, connect the grounding conductor to the grounding terminal at the drive and motor ends.

Do not use an asymmetrically constructed motor cable. Connecting its fourth conductor at the motor end increases bearing currents and causes extra wear.

\*) Switch-disconnector or molded case circuit breaker (option +F289) and separate fuses in frames R8 to R11.


\*\*) Output terminals U2, V2 and W2 are included with option +E205 and in frames R10 and R11.




## ■ Connection procedure (frames R6...R9)

This section applies to drives with bottom entry and exit of power cables.

1. Do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. For drives without option +E205: To remove the mounting plate, undo the mounting screws and unplug the connectors on top of it:
  - auxiliary voltage supply connectors X23, X22 and X21
  - Contactor control connectors: X3, X6
  - contactor feedback connector X250 with option +F250
  - cabinet door fan supply connector X8 and control X505
  - cabinet heater connector X300 with option +G300.
4. For drives without option +E205: Remove the shrouds (4a, 4b, 4c and 4d). To remove the shroud on the power cable terminals, release the clips with a screwdriver and pull the shroud out (4d). For drives with option +E205: Remove the shrouds 4a, 4b.

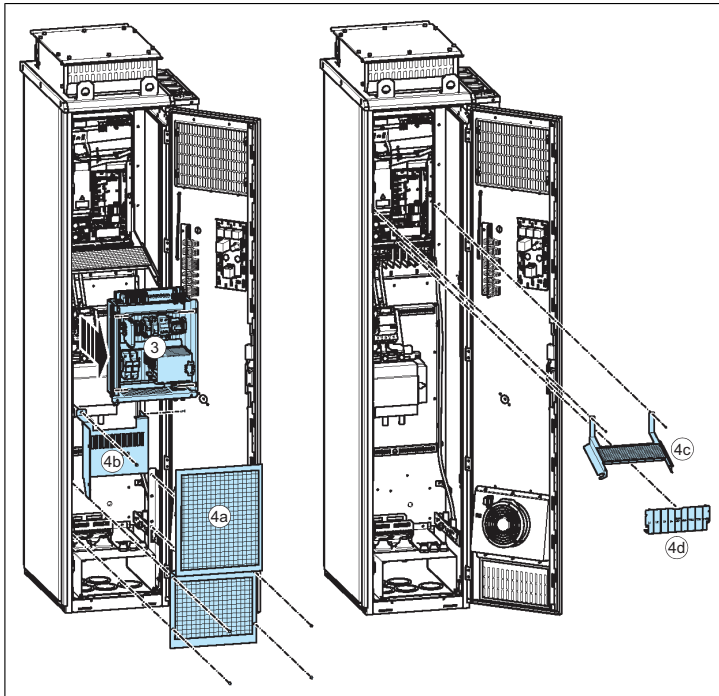

5. For drives without option +E205: Knock out holes in the shroud for the motor cable conductors.
6. Connect the twisted shields of the motor cables to the ground bar and the phase conductors to the U2, V2 and W2 terminals of the drive module. For drives with du/dt filter (option +E205), connect the phase conductors to the T1/U2, T2/V2 and T3/W2 terminals of the cabinet with cable lugs.
7. Connect the twisted shields of the input cables and separate ground cable (if present) to the PE terminal of the cabinet and the phase conductors to the L1, L2 and L3 terminals.

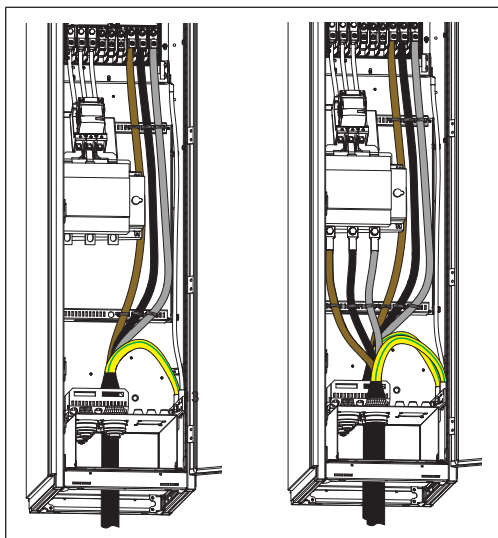


8. Tighten the power cable screws to the torque given in *Terminal and entry data for the power cables (page 207)*.
9. Reinstall the shrouds and mounting plate.




■ **Connection procedure (frames R6 and R7 with options +H351 and +H353)**

1. Do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. Remove the shrouds.



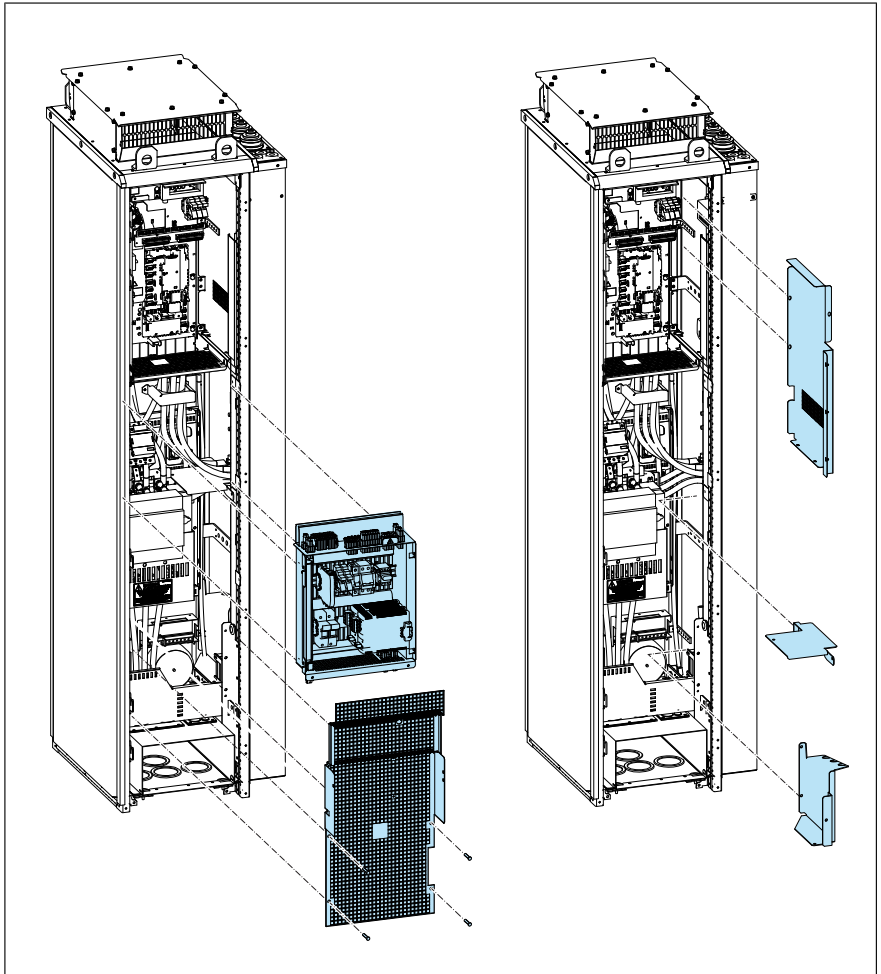

4. Connect the twisted shields of the motor cables to the ground bar and the phase conductors to the U2, V2 and W2 terminals of the drive module.
5. Connect the twisted shields of the input cables and separate ground cable (if present) to the PE terminal of the cabinet and the phase conductors to the L1, L2 and L3 terminals.

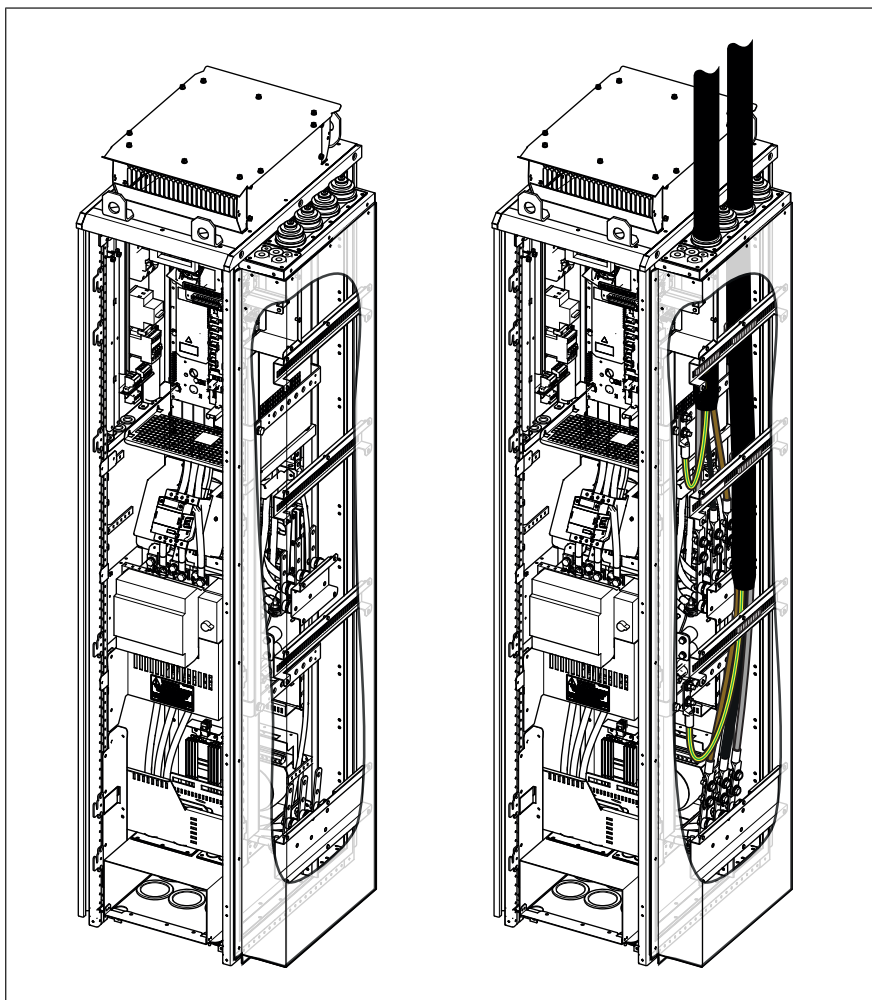


6. Tighten the power cable screws to the torque given in [Terminal and entry data for the power cables \(page 207\)](#).
7. Reinstall the shrouds and mounting plate.

■ **Connection procedure (frames R8 and R9 with options +H351 and +H353)**


1. Do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.

3. Remove the shrouds.

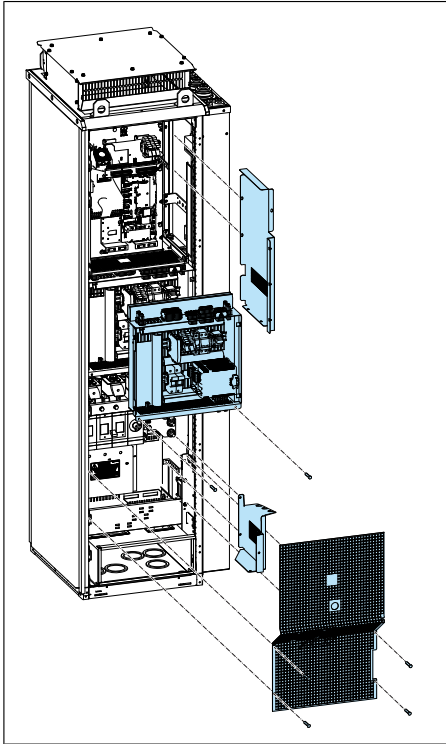

4. Connect the twisted shields of the motor cables to the ground bar and the phase conductors to the U2, V2 and W2 terminals of the drive module.
5. Connect the twisted shields of the input cables and separate ground cable (if present) to the PE terminal of the cabinet and the phase conductors to the L1, L2 and L3 terminals.




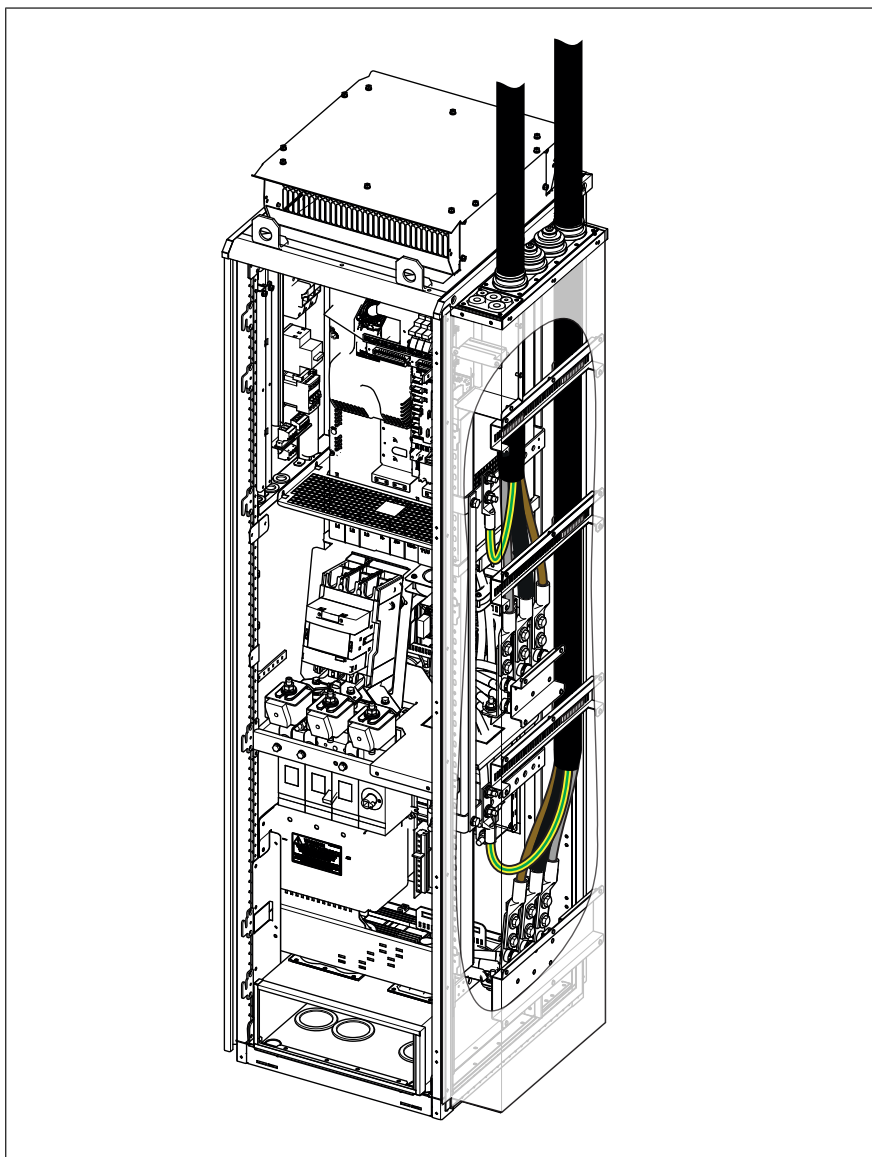


6. Tighten the power cable screws to the torque given in [Terminal and entry data for the power cables \(page 207\)](#).
  7. Reinstall the shrouds and mounting plate.
-

### ■ Connection procedure (frames R10 and R11)

1. Do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. Remove the shroud.

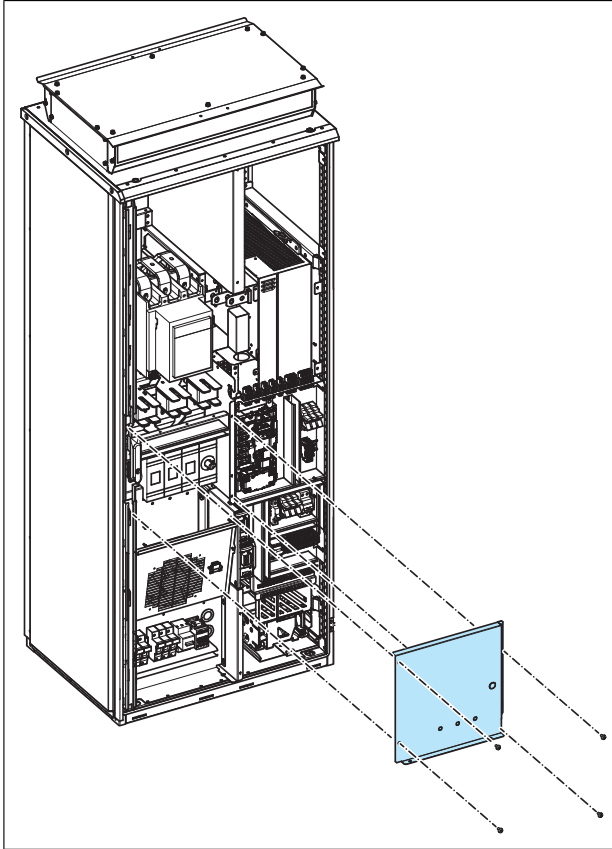

4. Remove the door fan mounting plate. See section *Replacing the door fan (frames R10 and R11) (page 164)*
5. Connect the twisted shields of the motor cables to the ground bar and the phase conductors to the U2, V2 and W2 terminals of the drive module.
6. Connect the twisted shields of the input cables and separate ground cable (if present) to the PE terminal of the cabinet and the phase conductors to the L1, L2 and L3 terminals.

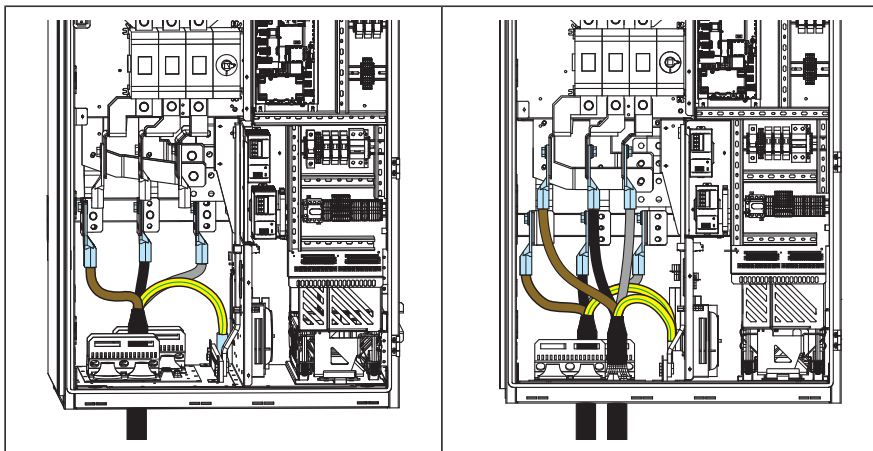


7. Tighten the power cable screws to the torque given in *Terminal and entry data for the power cables (page 207)*.
8. Reinstall the shrouds and mounting plate.

■ **Connection procedure (frames R10 and R11 with options +H351 and +H353)**

1. Do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.




3. With top entry (option +H351) and bottom exit: Undo the mounting screws and pull the shroud out.

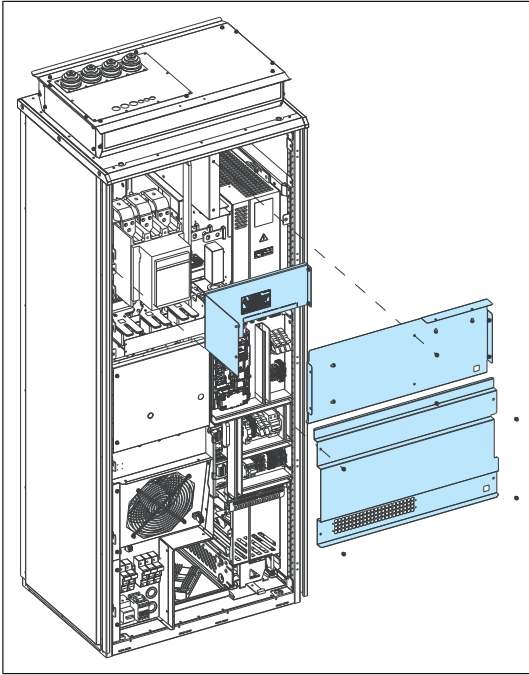

Remove the door fan mounting plate. See section *Replacing the door fan (frames R10 and R11) (page 164)*

4. With top entry and top exit (options +H351 and +H353): Remove the shrouds and door fan (see *Replacing the door fan (frames R10 and R11) (page 164)*). Undo the mounting screws and pull the shrouds out.




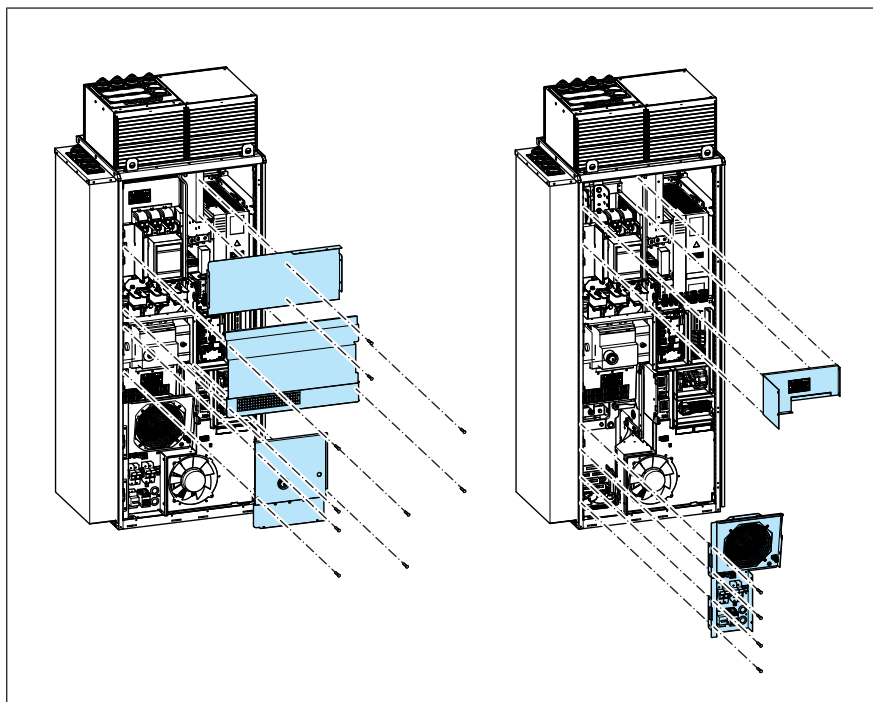

5. Connect the twisted shields of the motor cables to the ground bar and the phase conductors to the U2, V2 and W2 terminals of the drive module.
6. Connect the twisted shields of the input cables and separate ground cable (if present) to the PE terminal of the cabinet and the phase conductors to the L1, L2 and L3 terminals.





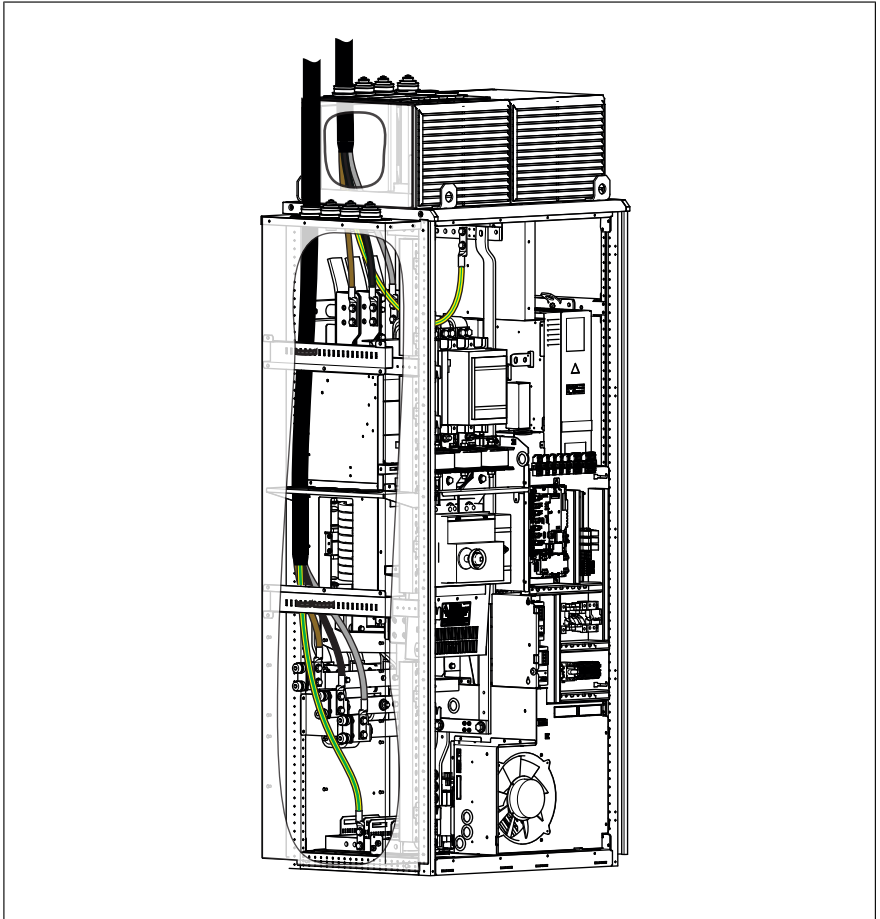

7. Tighten the power cable screws to the torque given in [Terminal and entry data for the power cables \(page 207\)](#).
8. Reinstall the shrouds and mounting plate.

## Connecting the control cables

See chapter [Control unit \(page 139\)](#) for the default I/O connections of the drive control program. The default I/O connections can be different with some hardware options, see the circuit diagrams delivered with the drive for the actual wiring.

Connect the cables as described under [Overview of control cable connection procedure \(page 124\)](#).



## ■ Overview of control cable connection procedure



### **WARNING!**

Obey the instructions in chapter *Safety instructions*. If you ignore them, injury or death, or damage to the equipment can occur.


1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Run the control cables to the inside the cabinet as described in section *Grounding the outer shields of the control cables at the cabinet entry (page 124)*.
3. Route the control cables as described in section *Routing the control cables inside the cabinet (page 128)*.
4. Connect the control cables as described in sections
  - *Connecting external wiring to the control unit or optional I/O terminal block (page 131)*
  - *Connecting the emergency stop push buttons (options +Q951 and +Q963) (page 132)*
  - *Connecting the Safe torque off circuit (page 133)*
  - *Connecting external power supply wires for the cabinet heater (option +G300) (page 133)*

## ■ Grounding the outer shields of the control cables at the cabinet entry

Ground the outer shields of all control cables 360 degrees at the EMI conductive cushions as follows (example constructions are shown below, the actual hardware may vary):

1. Loosen the tightening screws of the EMI conductive cushions and pull the cushions apart.
2. Cut adequate holes to the rubber grommets in the entry plate and put the cables through the grommets and the cushions.
3. Strip off the cable plastic sheath above the entry plate just enough to ensure proper connection of the bare shield and the EMI conductive cushions.
4. Tighten the two tightening screws so that the EMI conductive cushions press tightly round the bare shield.



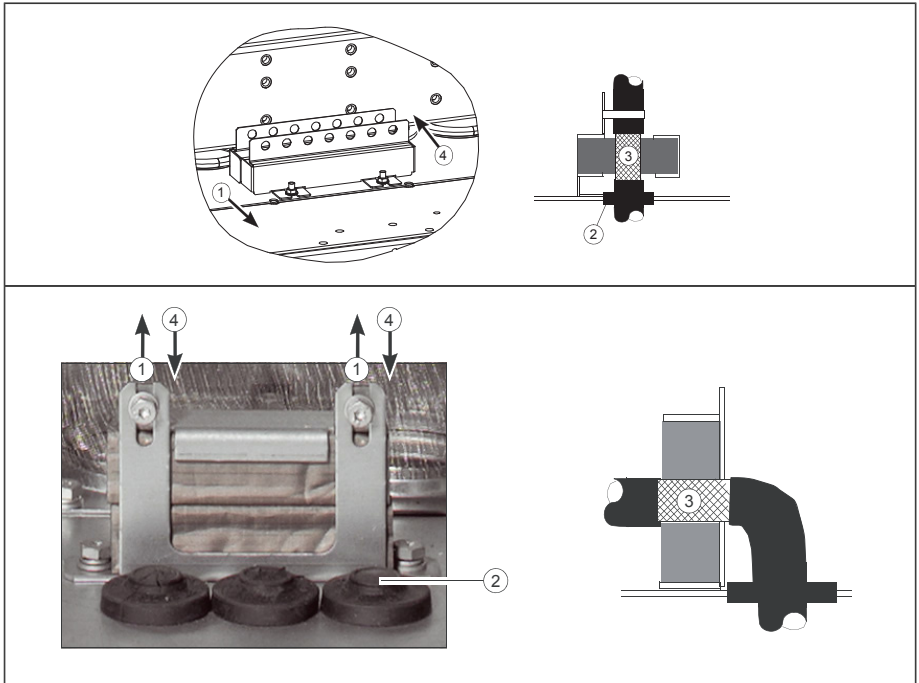


**Note 1:** Keep the shields continuous as close to the connection terminals as possible. Secure the cables mechanically at the entry strain relief.

**Note 2:** If the outer surface of the shield is non-conductive:

- Cut the shield at the midpoint of the bare part. Be careful not to cut the conductors or the grounding wire (if present).
- Turn the shield inside out to expose its conductive surface.
- Cover the turned shield and the stripped cable with copper foil to keep the shielding continuous.



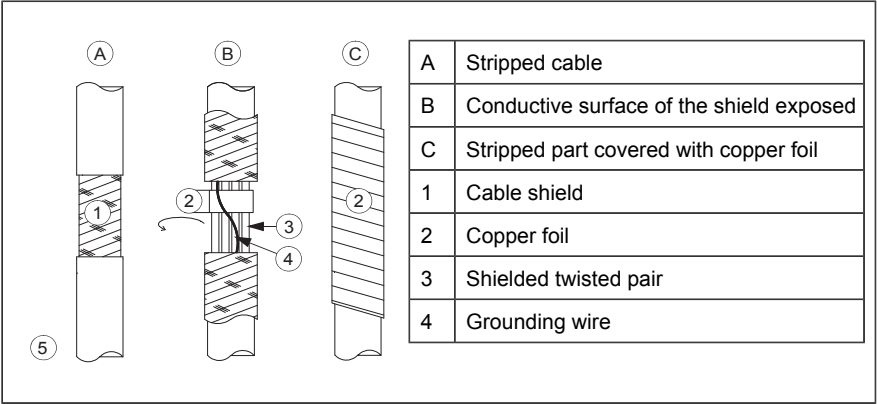


**Note for top entry of cables:** When each cable has its own rubber grommet, sufficient IP and EMC protection can be achieved. However, if there is more than one cable per grommet, plan the installation beforehand as follows:

1. Make a list of the cables coming to the cabinet.
2. Sort the cables going to the left into one group and the cables going to the right into another group to avoid unnecessary crossing of cables inside the cabinet.
3. Sort the cables in each group according to size.
4. Group the cables for each grommet as follows ensuring that each cable has a proper contact to the cushions on both sides.

Cable diameter in mm	Max. number of cables per grommet
≤ 13	4
≤ 17	3
< 25	2
≥ 25	1

5. Arrange the bunches according to size from thickest to the thinnest between the EMI conductive cushions.

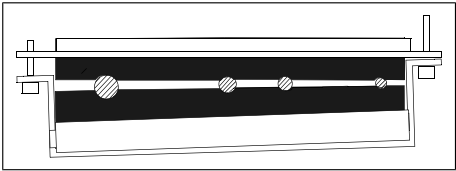



6. If more than one cable go through a grommet, seal the grommet by applying Loctite 5221 inside the grommet.




■ **Routing the control cables inside the cabinet**

The route of the control cables is shown below in frame R9. The route is similar for frames R6, R7 and R8.

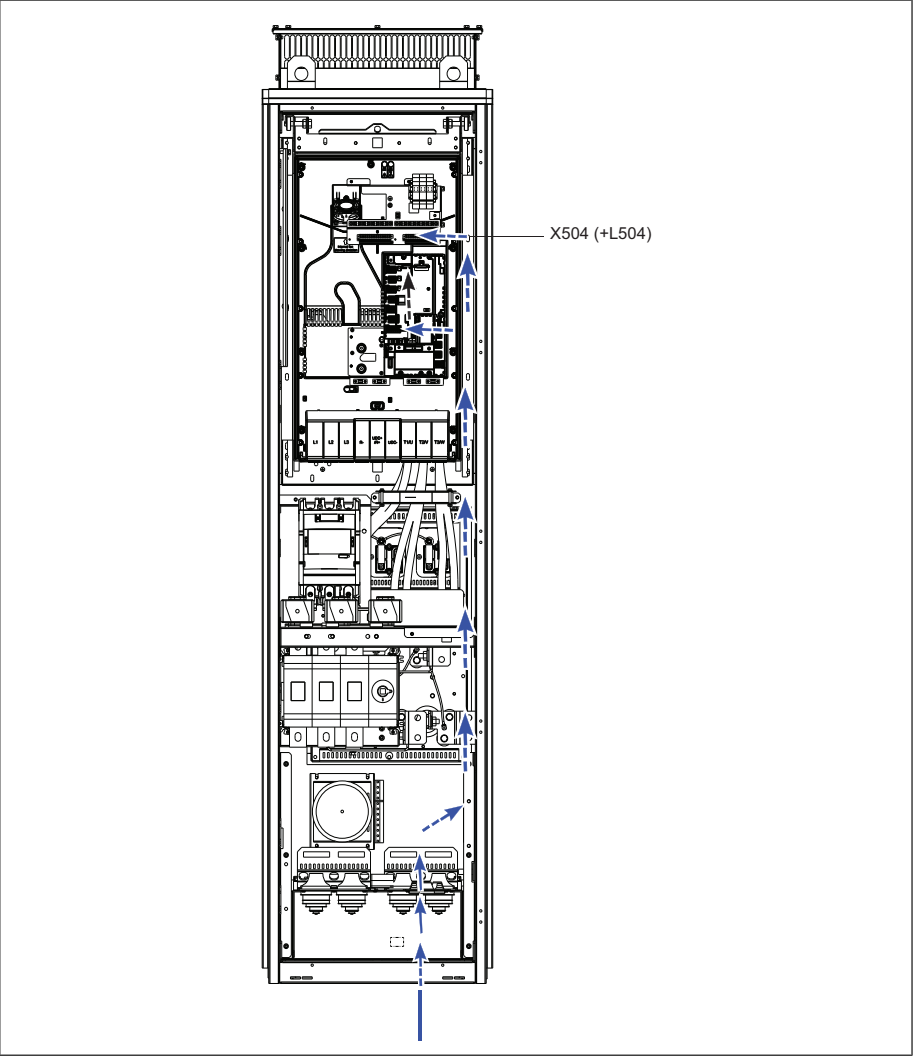


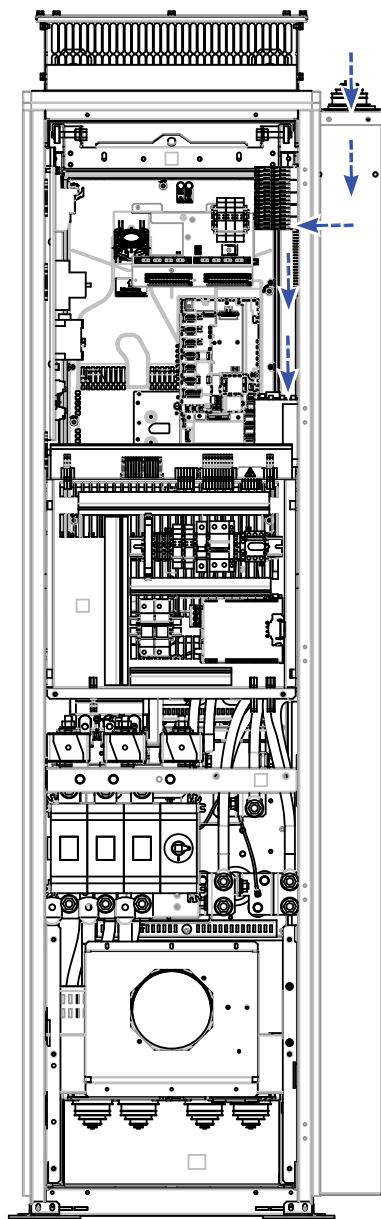

The route of the control cables for frames R10 and R11 is shown below.

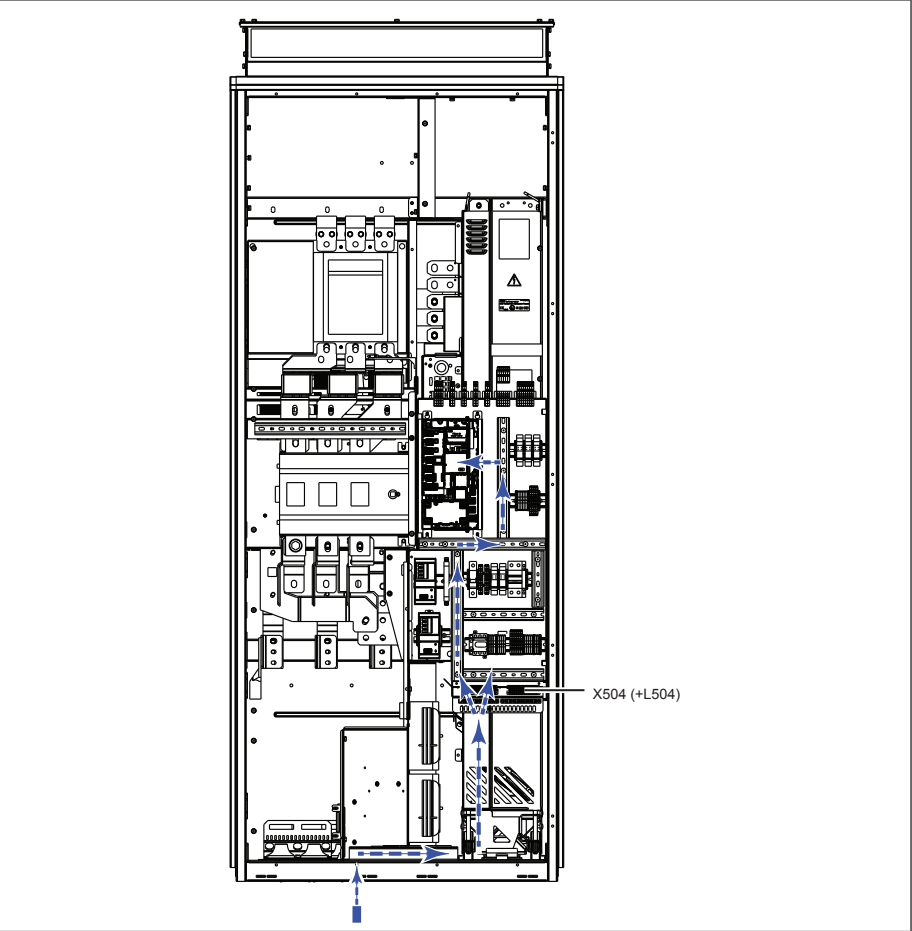



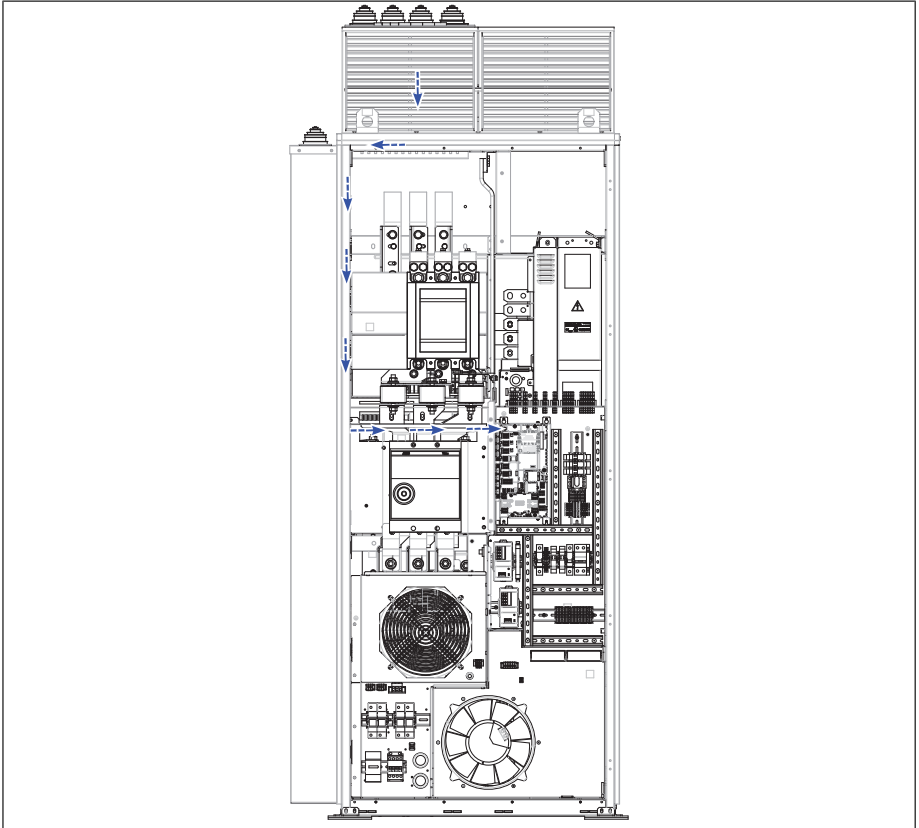


### ■ Connecting external wiring to the control unit or optional I/O terminal block

**Note:** Keep any signal wire pairs twisted as close to the terminals as possible. Twisting the wire with its return wire reduces disturbances caused by inductive coupling.

**Note:** Leave slack to the control wires to make it possible to lift the control unit mounting plate a little when the drive module is replaced.

Ground the pair-cable shields and all grounding wires to the grounding clamp.

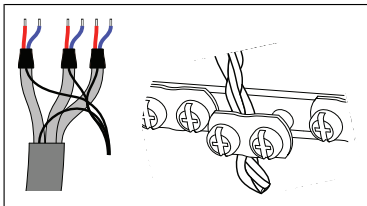

Leave the other ends of the control cable shields unconnected or ground them indirectly via a high-frequency capacitor with a few nanofarads, eg, 3.3 nF / 630 V. The shield can also be grounded directly at both ends if they are in the same ground line with no significant voltage drop between the end points.

Connect the conductors to the appropriate terminals (see [Default I/O connection diagram \(page 141\)](#)) of the control unit or with option +L504 to the detachable terminal block X504.


■ **Connecting the emergency stop push buttons (options +Q951 and +Q963)**

See the circuit diagrams delivered with the drive for connecting the emergency stop circuit and the user manuals of the options.

**Frames R6...R9**

<p>X951</p> <p>① ← 1 —</p> <p>② ← 2 —</p> <p>① → 3* —</p> <p>③ → 4* —</p> <p>② → 5* —</p> <p>③ → 6* —</p> <p>④ { ← 7 —</p> <p>→ 8 —</p> <p>⑤ { ← 9 —</p> <p>→ 10 —</p> <p>⑥</p> <p>⑦</p>	<b>Internal connections</b>	
	1	Emergency stop push button on the cabinet door
	2	Emergency stop push button on the cabinet door
	3	Emergency stop circuit
	4	Emergency stop reset button on the cabinet door
	5	Emergency stop indication on the cabinet door
	<b>Customer connections</b>	
	6	Customer external emergency stop button
	7	Customer external emergency stop reset
	*	Remove bridges 3–4 and 5–6 if there is an external emergency stop button. The bridge connections are installed only if the cabinet door push button is in use.

## Frames R10 and R11

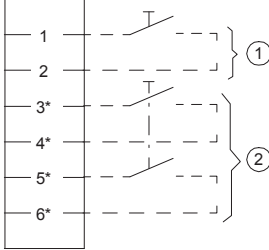
X951	Customer connections	
	1	Customer external emergency stop reset
	2	Customer external emergency stop button
	*	Remove bridges 3–4 and 5–6 if there is an external emergency stop button. The bridge connections are installed only if the cabinet door push button is in use.

### ■ Connecting the Safe torque off circuit

Connect the customer Safe torque off circuit as described in chapter [Safe torque off function\\_en.xml](#).

For drives with options +Q951, +Q963 and +Q971, connect the Safe torque off circuit to terminal block X969 – not to the control unit STO terminals.:

A	Internal connections	B Customer connections	
1	STO OUT1	1	STO OUT1
2	STO IN1	2	STO IN1
3	STO IN2	3	STO IN2
4	STO OUT2	4	STO OUT2
5	STO INTERNAL		

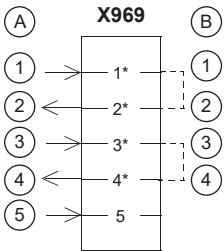

\* Remove bridges 1-2 and 3-4 if there is an external Safe torque off function.


### ■ Connecting external power supply wires for the cabinet heater (option +G300)

Connect the external power supply wires for the cabinet heater to terminal block X300 at the back of the mounting plate.



Frames R6...R9


**X300**

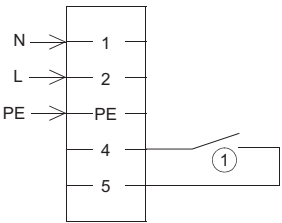


1 Internal wiring of the cabinet heater: heater off/fault = contact open.

Frames R10...R11

**Q95**




**X300**

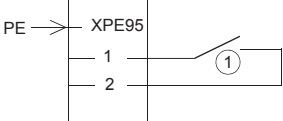

1 Internal wiring of the cabinet heater: heater off/fault = contact open.

# Setting the voltage range of the auxiliary control voltage transformer (T21)

Connect the power supply wires of the auxiliary control voltage transformer according to the power network voltage.

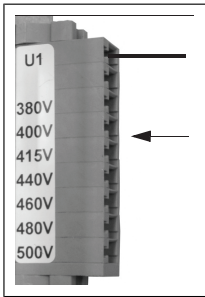


## Connecting a PC

**WARNING!**

Do not connect the PC directly to the control panel connector of the control unit as this can cause damage.

A PC (with eg, the Drive composer PC tool) can be connected as follows:

1. Connect an ACx-AP-x control panel to the unit either
  - by inserting the control panel into the panel holder or platform, or
  - by using an Ethernet (eg, Cat 5e) networking cable.
2. Remove the USB connector cover on the front of the control panel.
3. Connect an USB cable (Type A to Type Mini-B) between the USB connector on the control panel (3a) and a free USB port on the PC (3b).
4. The panel will display an indication whenever the connection is active.
5. See the documentation of the PC tool for setup instructions.

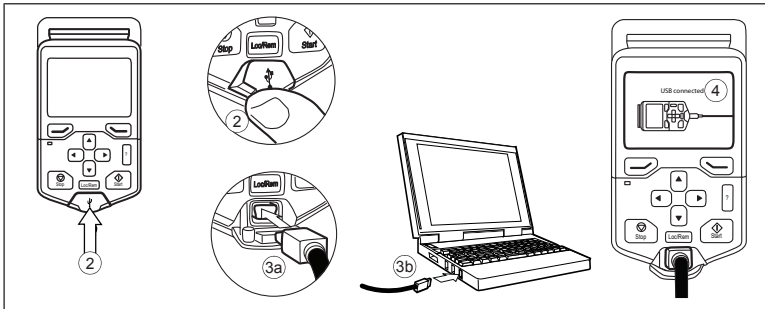

## Installing option modules




### **WARNING!**

Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.


### ■ Option slot 2 (I/O extension modules)

1. Put the module carefully into its position on the control unit.
2. Tighten the mounting screw.
3. Tighten the grounding screw (CHASSIS) to 0.8 N·m (7 lbf·in). The screw grounds the module. It is necessary for fulfilling the EMC requirements and for correct operation of the module.

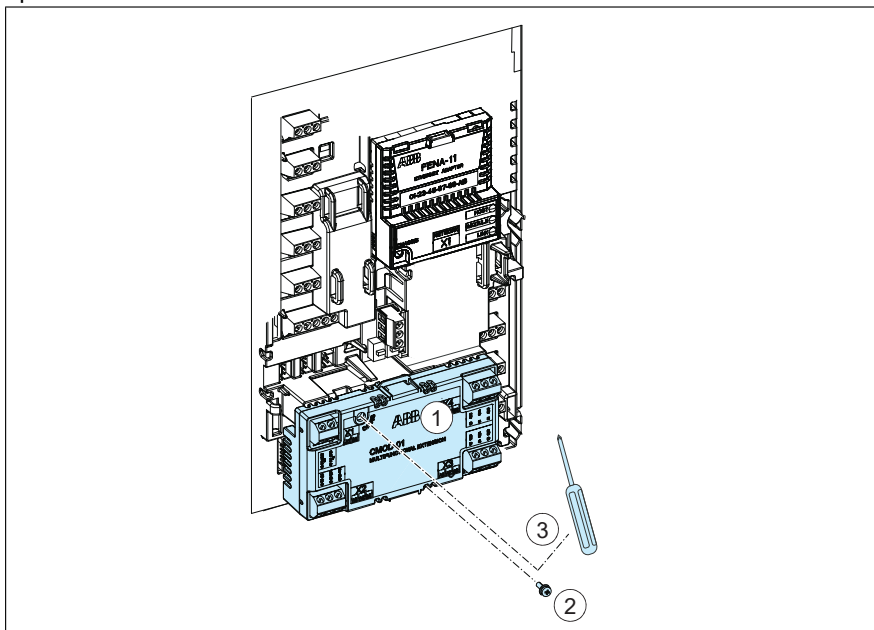

### ■ Option slot 1 (fieldbus adapter modules)

1. Put the module carefully into its position on the control unit.
2. Tighten the mounting screw (CHASSIS) to 0.8 N·m (7 lbf·in). The screw tightens the connections and grounds the module. It is necessary for fulfilling the EMC requirements and for correct operation of the module.

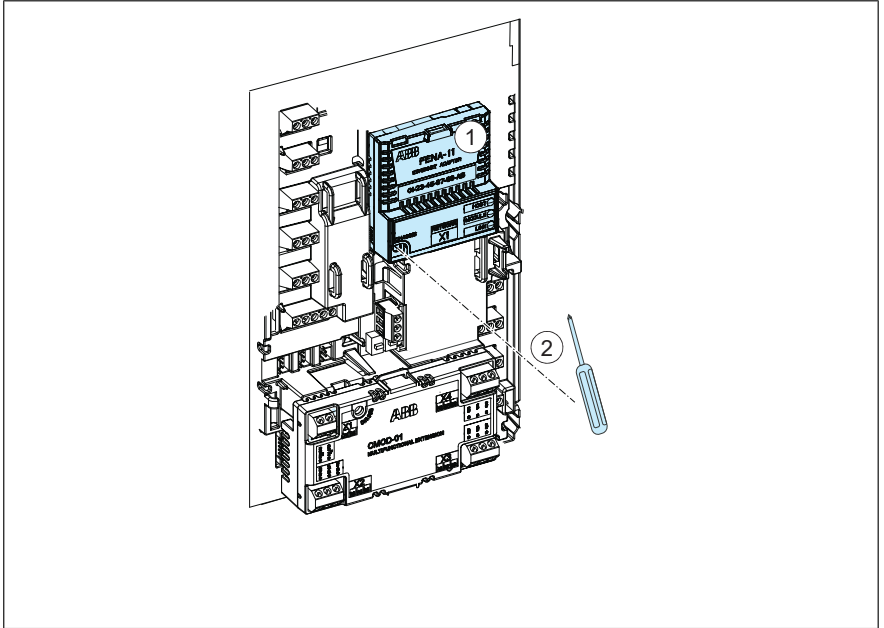

### ■ Wiring the optional modules

See the appropriate option module manual or for I/O options the appropriate chapter in this manual.







# 7

## Control unit

---

### Contents of this chapter

This chapter contains the default I/O connection diagram, descriptions of the terminals and technical data for the drive control unit (CCU-24).

Layout


The layout of the external control connection terminals on the drive module control unit is shown below.

The diagram shows the rear panel of the 140 Control unit with various connection terminals. Labels with leader lines point to specific terminals: X15 (top), SLOT 1 (top), 1...3 (Analog input 1), 4...6 (Analog input 2), 7...9 (Analog outputs), 10...12 (Auxiliary voltage output, digital input common), 13...15 (Digital inputs), 16...18 (Digital inputs), 34...38 (Safe torque off connection), X12 (Panel port), AIR IN TEMP (Internal air temperature NTC sensor), FAN 2, FAN 1 (Internal fan connections), SLOT 2 (I/O extension modules), TERM (End termination switch), BIAS (Bias resistor switch), and 40, 41 (24 V AC/DC external power input).

<b>SLOT 1</b>	
Option slot 1 (fieldbus adapter modules)	
<b>ANALOG IN/OUT</b>	
1...3	Analog input 1
4...6	Analog input 2
7...9	Analog outputs
10...12	Auxiliary voltage output, digital input common
<b>DIGITAL IN</b>	
13...18	Digital inputs
<b>STO</b>	
34...38	Safe torque off connection. Reserved for internal use with options +Q951, +Q963 and +Q971.
AIR IN TEMP	Internal air temperature NTC sensor connection
FAN2	Internal fan 2 connection
FAN1	Internal fan 1 connection
X12	Panel port (control panel connection, wired at the factory to the control panel)
X15	Reserved to internal use.
<b>EFB</b>	
EIA/RS-485 fieldbus connector	
BIAS	Bias resistor switch
TERM	End termination switch
29...31	Connection terminals
<b>SLOT 2</b>	
Option slot 2 (I/O extension modules)	
40, 41	24 V AC/DC external power input
<b>RO1 ... RO3</b>	
19...21	Relay output 1 (RO1)
22...24	Relay output 2 (RO2)
25...27	Relay output 3 (RO3)

## Default I/O connection diagram

The default I/O connections of the ABB Standard macro are shown below.

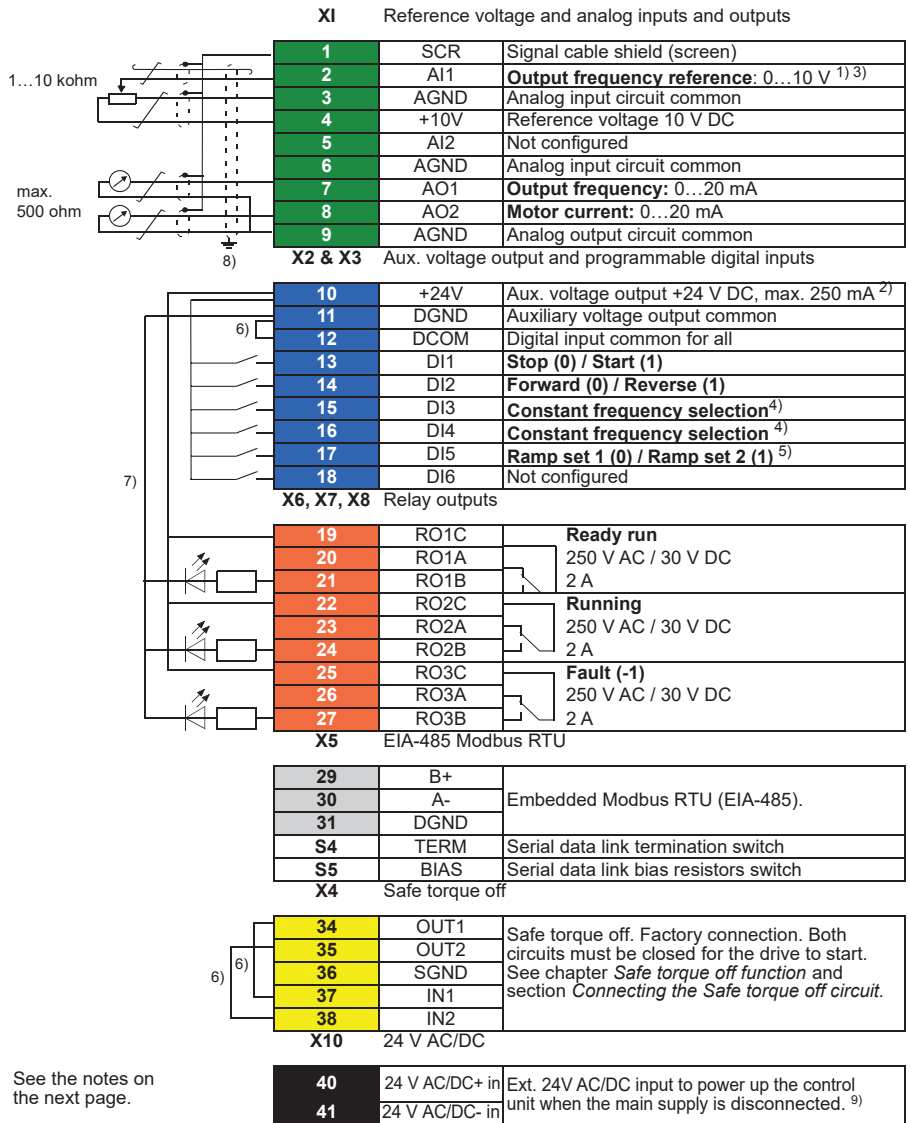

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Digital inputs DI1...DI5 also support 10 to 24 V AC

Terminal sizes: 0.14...2.5 mm<sup>2</sup> (all terminals)

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)

### Notes:

- 1) Current [0(4)...20 mA,  $R_{in} = 100 \text{ ohm}$ ] or voltage [0(2)...10 V,  $R_{in} > 200 \text{ kohm}$ ]. Change of setting requires changing the corresponding parameter.
- 2) Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V) minus the power taken by the option modules installed on the board.
- 3) AI1 is used as a speed reference if vector control is selected.
- 4) In scalar control (default): See **Menu - Primary settings - Start, stop, reference - Constant frequencies** or parameter group 28 Frequency reference chain.  
In vector control: See **Menu - Primary settings - Start, stop, reference - Constant speeds** or parameter group 22 Speed reference selection





D3	D4	Operation/Parameter	
		Scalar control (default)	Vector control
0	0	Set frequency through AI1	Set speed through AI1
1	0	28.26 Constant frequency 1	22.26 Constant speed 1
0	1	28.27 Constant frequency 2	22.27 Constant speed 2
1	1	28.28 Constant frequency 3	22.28 Constant speed 3

- 5) In scalar control (default): See **Menu - Primary settings - Ramps** or parameter group 28 Frequency reference chain.  
In vector control: See **Menu - Primary settings - Ramps** or parameter group 23 Speed reference ramp.

D5	Ramp set	Parameters	
		Scalar control (default)	Vector control
0	1	28.72 Freq acceleration time 1 28.73 Freq deceleration time 1	23.12 Acceleration time 1 23.13 Deceleration time 1
1	2	28.74 Freq acceleration time 2 28.75 Freq deceleration time 2	23.14 Acceleration time 2 23.15 Deceleration time 2

- 6) Connected with jumpers at the factory.
- 7) Use shielded twisted-pair cables for digital signals.


## ■ Switches

Switch	Description	Position	
<b>TERM S4</b>	EFB link termination. Must be set to the terminated (ON) position when the drive (or another device) is the first or last unit on the link.	 ON TERM	Bus not terminated ( <b>default</b> )
		 ON TERM	Bus terminated
<b>BIAS S5</b>	Switches on the biasing voltages to the bus. One (and only one) device, preferably at the end of the bus must have the bias on.	 ON BIAS	Bias off ( <b>default</b> )
		 ON BIAS	Bias on

## Additional information on I/O connections

### ■ Connection for obtaining 0...10 V from analog output 2 (AO2)

To obtain 0...10 V from analog output AO2, connect a 500 ohm resistor (or two 1 kohm resistors in parallel) between analog output AO2 and analog common ground AGND.

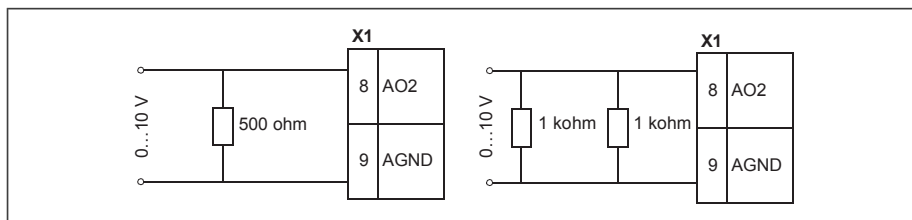


### ■ Connection examples of two-wire and three-wire sensors to analog input (AI2)


Hand/Auto, Hand/PID, and PID macros use analog input AI2.

**Note:** The maximum capability of the auxiliary voltage output (24 V DC [250 mA]) must not be exceeded.

An example of a two-wire sensor/transmitter supplied by the drive auxiliary voltage output is shown below. Set the input signal to 4...20 mA, not 0...20 mA.

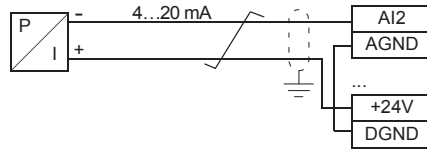

An example of a three-wire sensor/transmitter supplied by the drive auxiliary voltage output is shown below. The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V DC). Thus the output signal must be 4...20 mA, not 0...20 mA.

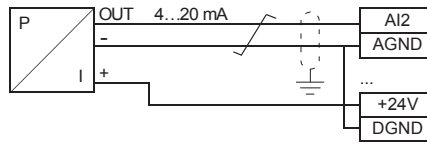


■ DI5 as frequency input

For setting the parameters for the digital frequency input, see the firmware manual.

■ DI6 as PTC input

If DI6 is used as a PTC input, see firmware manual for how to set parameters accordingly.


**Note:** If DI6 is used as a PTC input, the wiring and the PTC sensor need to be double isolated. Otherwise the CMOD-02 I/O extension module must be used.

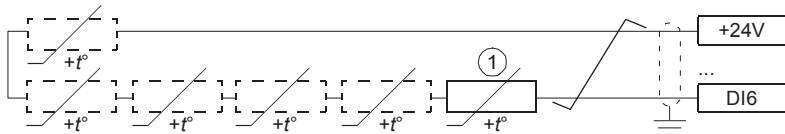

1 One to six PTC thermistors connected in series

■ AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)

Sensors for motor temperature measurement can be connected between an analog input and output, an example connection is shown below. Leave the other end of the shield unconnected or ground it indirectly via a few nanofarads high-frequency capacitor, for example, 3.3 nF / 630 V. The shield can also be grounded directly at both ends if they are in the same ground line with no significant voltage drop between the end points.

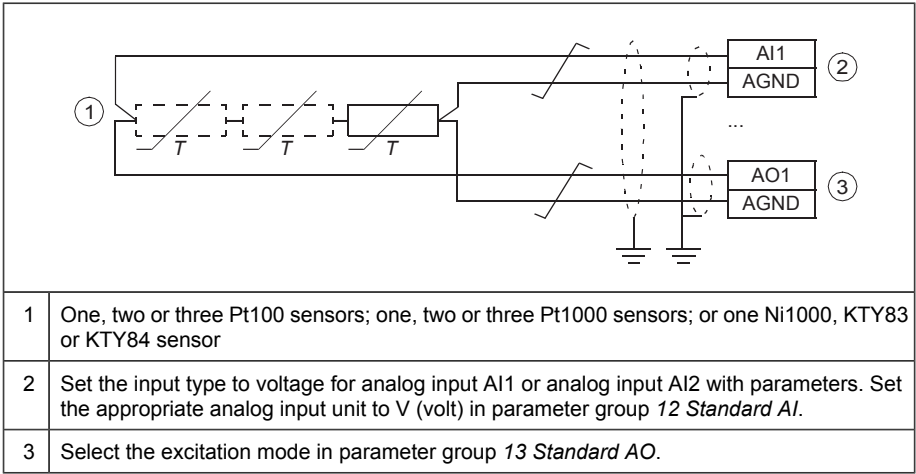

**WARNING!**

As the inputs pictured above are not insulated according to IEC 60664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor.

If the assembly does not fulfill this requirement, the I/O board terminals must be protected against contact and must not be connected to other equipment or the temperature sensor must be isolated from the I/O terminals.

■ **Safe torque off (X4)**

For the drive to start, both connections (+24 V DC to IN1 and +24 V DC to IN2) must be closed. By default, the terminal block has jumpers to close the circuit.

Remove the jumpers before connecting an external Safe torque off circuitry to the drive. See also chapter [The Safe torque off function \(page 271\)](#).

**Note:** Only 24 V DC can be used for STO. Only PNP input configuration can be used.


## Technical data

External power supply Term. 40, 41	Maximum power: 36 W, 1.50 A at 24 V AC/DC $\pm 10\%$ as standard Terminal size: 0.14...2.5 mm <sup>2</sup>
+24 V DC output (Term. 10)	Total load capacity of this outputs is 6.0 W (250 mA / 24 V) minus the power taken by the option modules installed on board. Terminal size: 0.14...2.5 mm <sup>2</sup>
Digital inputs DI1...DI6 (Term. 13...18)	<p>Input type: NPN/PNP Terminal size: 0.14...2.5 mm<sup>2</sup> <u>DI1...DI4 (Term.13...16)</u> 12/24 V DC logic levels: "0" &lt; 4 V, "1" &gt; 8 V <math>R_{in}</math>: 3 kohm Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling <u>DI5 (Term.17)</u> Can be used as a digital or frequency input. 12/24 V DC logic levels: "0" &lt; 4 V, "1" &gt; 8 V <math>R_{in}</math>: 3 kohm Max. frequency 16 kHz Symmetrical signal (duty cycle D = 0.50) <u>DI6 (Term.18)</u> Can be used as a digital or PTC input. 12/24 V DC logic levels: "0" &lt; 3 V, "1" &gt; 8 V <math>R_{in}</math>: 3 kohm Max. frequency 16 kHz Symmetrical signal (duty cycle D = 0.50) Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling</p> <p><b>Note:</b> DI6 is not supported in the NPN configuration. PTC mode – PTC thermistor can be connected between DI6 and +24 V DC: &lt; 1.5 kohm = '1' (low temperature), &gt; 4 kohm = '0' (high temperature), open circuit = '0' (high temperature). DI6 is not a reinforced/double insulated input. Connecting the motor PTC sensor to this input requires usage of a reinforced/double insulated PTC sensor inside the motor</p>
Relay outputs RO1...RO3 (Term. 19...27)	250 V AC / 30 V DC, 2 A Terminal size: 0.14...2.5 mm <sup>2</sup> See section <i>Isolation areas (page 148)</i> .
Analog inputs AI1 and AI2 (Term. 2 and 5)	<p>Current/voltage input mode selected with a parameter, see <i>AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1) (page 144)</i>.</p> <p>Current input: 0(4)...20 mA, <math>R_{in}</math>: 100 ohm Voltage input: 0(2)...10 V, <math>R_{in}</math>: &gt; 200 kohm Terminal size: 0.14...2.5 mm<sup>2</sup> Inaccuracy: typical <math>\pm 1\%</math>, max. <math>\pm 1.5\%</math> of full scale Inaccuracy for Pt100 sensors: 10 °C (50 °F)</p>




Analog outputs AO1 and AO2 (Term. 7 and 8)	<p>Current/voltage output mode for AO1 selected with a parameter, see <a href="#">Connection for obtaining 0...10 V from analog output 2 (AO2) (page 143)</a>.</p> <p>Current output: 0...20 mA, <math>R_{load} &lt; 500 \text{ ohm}</math></p> <p>Voltage input: 0...10 V, <math>R_{load} &gt; 100 \text{ kohm}</math> (AO1 only)</p> <p>Terminal size: 0.14...2.5 mm<sup>2</sup></p> <p>Inaccuracy: <math>\pm 1\%</math> of full scale (in voltage and current modes)</p>
Reference voltage output for analog inputs +10V DC (Term. 4)	<p>Max. 20 mA output</p> <p>Inaccuracy: <math>\pm 1\%</math></p>
Safe torque off (STO) inputs IN1 and IN2 (Term. 37 and 38)	<p>24 V DC logic levels: "0" &lt; 5 V, "1" &gt; 13 V</p> <p><math>R_{in}</math>: 2.47 kohm</p> <p>Terminal size: 0.14...2.5 mm<sup>2</sup></p>
Embedded fieldbus (X5)	<p>Connector pitch 5 mm, wire size 2.5 mm<sup>2</sup></p> <p>Physical layer: EIA-485</p> <p>Cable type: Shielded twisted pair cable with twisted pair for data and a wire or pair for signal ground, nominal impedance 100...165 ohms, for example Belden 9842</p> <p>Transmission rate: 9.6...115.2 kbit/s</p> <p>Termination by switch</p>
Control panel - drive connection	EIA-485, male RJ-45 connector, max. cable length 100 m (328 ft)
Control panel - PC connection	USB Type Mini-B, max. cable length 2 m (7 ft)

## Isolation areas

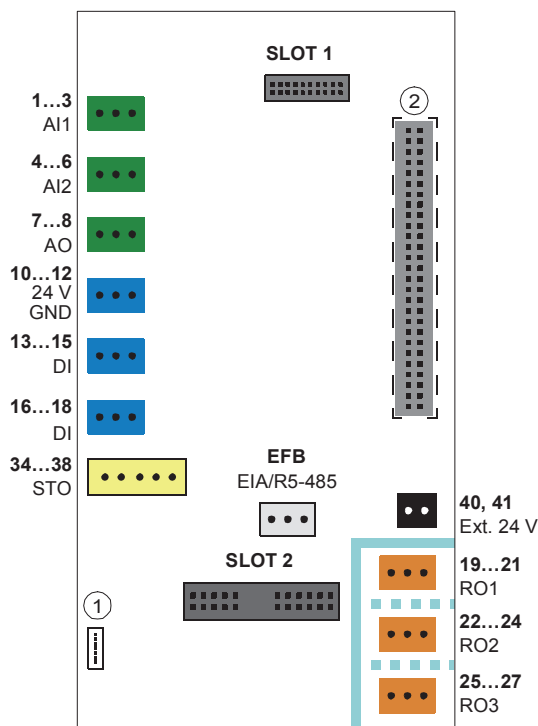

1	Panel port
2	Power unit connection at the bottom of the control unit
	Reinforced insulation (IEC/EN 61800-5-1:2007, UL 61800-5-1 First edition)
	Functional insulation (IEC/EN 61800-5-1:2007, UL 61800-5-1 First edition)
<p>The terminals on the control board fulfill the Protective Extra Low Voltage (PELV) requirements (EN 50178): There is reinforced insulation between the user terminals which only accept ELV voltages and terminals that accept higher voltages (relay outputs).</p> <p><b>Note:</b> There is functional insulation also between the individual relay outputs.</p> <p><b>Note:</b> There is reinforced insulation on the power unit.</p>	

Ground isolation diagram

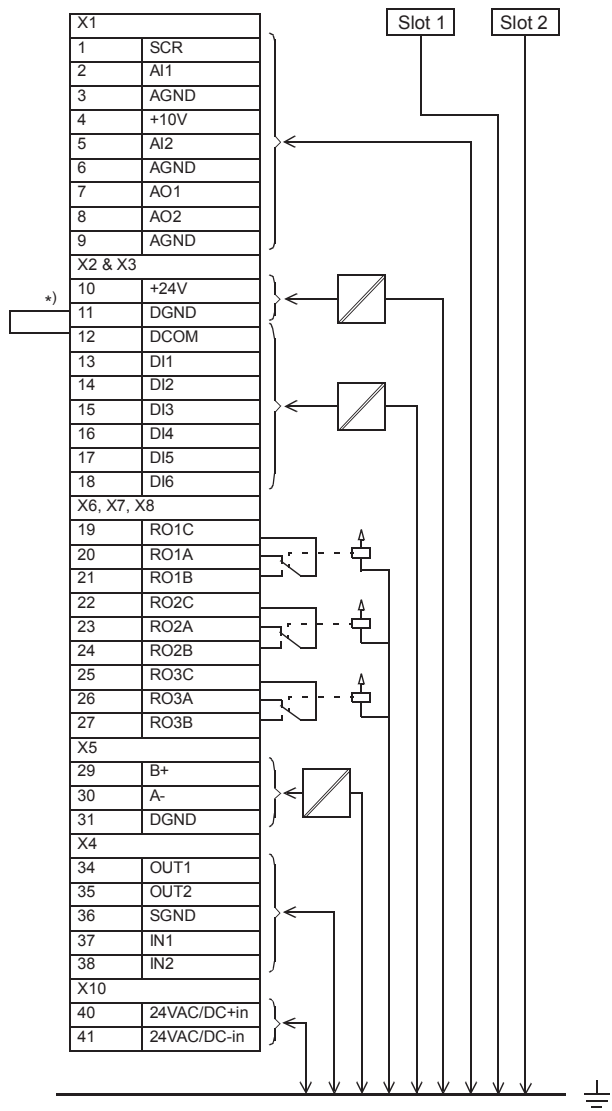

\*) Jumper installed at factory



8

# Installation checklist

## Contents of this chapter

This chapter contains a checklist of the mechanical and electrical installation of the drive.

## Checklist

Examine the mechanical and electrical installation of the drive before start-up. Go through the checklist together with another person.



**WARNING!**

Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation or maintenance work.



**WARNING!**

Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.

<b>Make sure that ...</b>	<input checked="" type="checkbox"/>
The ambient operating conditions meet the drive ambient conditions specification, and enclosure rating (IP code or UL enclosure type).	<input type="checkbox"/>
The supply voltage matches the nominal input voltage of the drive. See the type designation label.	<input type="checkbox"/>

<b>Make sure that ...</b>	<input checked="" type="checkbox"/>
The insulation resistance of the input power cable, motor cable and motor is measured according to local regulations and the manuals of the drive.	<input type="checkbox"/>
The drive cabinet is attached to the floor, and if necessary due to vibration etc, also by its top to the wall or roof.	<input type="checkbox"/>
The drive module is fastened properly to the enclosure.	<input type="checkbox"/>
The cooling air flows freely in and out of the drive.	<input type="checkbox"/>
<u>If the drive is connected to a network other than a symmetrically grounded TN-S system:</u> You have done all the required modifications (for example, you may need to disconnect the EMC filter or ground-to-phase varistor). See the electrical installation instructions.	<input type="checkbox"/>
There is an adequately sized protective earth (ground) conductor(s) between the drive and the switchboard, the conductor is connected to correct terminal, and the terminal is tightened to the correct torque. Proper grounding has also been measured according to the regulations.	<input type="checkbox"/>
The input power cable is connected to the correct terminals, the phase order is correct, and the terminals are tightened to the correct torque.	<input type="checkbox"/>
There is an adequately sized protective earth (ground) conductor between the motor and the drive, and the conductor is connected to the correct terminal, and the terminal is tightened to the correct torque. Proper grounding has also been measured according to the regulations.	<input type="checkbox"/>
The motor cable is connected to the correct terminals, the phase order is correct, and the terminals are tightened to the correct torque.	<input type="checkbox"/>
The motor cable is routed away from other cables.	<input type="checkbox"/>
No power factor compensation capacitors are connected to the motor cable.	<input type="checkbox"/>
The control cables are connected to the correct terminals, and the terminals are tightened to the correct torque.	<input type="checkbox"/>
The voltage setting of the auxiliary voltage transformers (if any) is correct. See the electrical installation instructions.	<input type="checkbox"/>
<u>If a drive bypass connection will be used:</u> The direct-on-line contactor of the motor and the drive output contactor are either mechanically and/or electrically interlocked, that is, they cannot be closed at the same time. A thermal overload device must be used for protection when bypassing the drive. Refer to local codes and regulations.	<input type="checkbox"/>
There are no tools, foreign objects or dust from drilling inside the drive.	<input type="checkbox"/>
The area in front of the drive is clean: the drive cooling fan cannot draw any dust or dirt inside.	<input type="checkbox"/>
Cover(s) of the motor connection box are in place. Cabinet shrouds are in place and doors are closed.	<input type="checkbox"/>
The motor and the driven equipment are ready for power-up.	<input type="checkbox"/>


## 9

# Start-up

## Contents of this chapter

This chapter contains the start-up procedure of the drive. The default device designations (if any) are given in brackets after the name, for example "main switch-disconnector (Q1)". The same device designations are also used in the circuit diagrams, typically.

## Start-up procedure

<b>Action</b>	<input checked="" type="checkbox"/>
<b>Safety</b>	
 <b>WARNING!</b> Obey the safety instructions during the start-up procedure. See chapter <a href="#">Safety instructions (page 17)</a> .	<input type="checkbox"/>
<b>Basic checks with no voltage connected</b>	
Check the mechanical and electrical installation of the drive. See <a href="#">Installation check-list (page 151)</a> .	<input type="checkbox"/>
<b>Connecting voltage to the input terminals and auxiliary circuit</b>	
<b>Note:</b> Before you close the door, make sure that the main protective circuit breaker (F21) for the auxiliary voltage supply is closed.	<input type="checkbox"/>



<b>Action</b>	<input checked="" type="checkbox"/>
Make sure that it is safe to connect voltage. Make sure that: <ul style="list-style-type: none"> <li>cabinet doors are closed</li> <li>nobody is working on the drive or circuits that have been wired from outside into the drive cabinet</li> <li>cover of the motor terminal box is on.</li> </ul>	<input type="checkbox"/>
Close the main switch-disconnector (Q1).	<input type="checkbox"/>
<b>Setting up the drive parameters, and performing the first start</b>	
Setup the drive control program. See <i>Quick start-up guide for ACS580 drives with standard control program</i> (3AXD50000048035 [English])	<input type="checkbox"/>
<b>Powering up</b>	
<u>Drive with the emergency stop cat. 0 (option +Q951):</u> Reset the emergency stop relay (A61) with the emergency stop reset button (S62) on the cabinet door. Otherwise you cannot close the main contactor.	<input type="checkbox"/>
<u>Drive with the emergency stop cat. 0 (option +Q963):</u> Reset the emergency stop relay (A61) with the emergency stop reset button (S62) on the cabinet door. Otherwise you cannot start the drive because the STO signal circuit is open.	
<u>Drives with main contactor (Q2, option +F250):</u> Close the main contactor by turning the operating switch on the cabinet door from OFF into ON position.	<input type="checkbox"/>
Perform the first start of the drive and motor.	<input type="checkbox"/>
Stop the motor and drive.	<input type="checkbox"/>
<u>Drives with a fieldbus adapter module (optional):</u> Set the fieldbus parameters. Activate the appropriate assistant in the control program, or see the user's manual of the fieldbus adapter module, and the drive firmware manual. Not all control programs include assistants. Check that the communication works between the drive and the PLC.	<input type="checkbox"/>
<b>On-load checks</b>	
Check that the cooling fans rotate freely in the right direction, and the air flows upwards. A paper sheet set on the intake (door) gratings stays. The fans run noiselessly.	<input type="checkbox"/>
Check that the motor starts, stops and follows the speed reference in right direction when controlled with the control panel.	<input type="checkbox"/>
Check that the motor starts, stops and follows the speed reference in right direction when controlled through the customer-specific I/O or fieldbus.	<input type="checkbox"/>
<u>Drives in which the Safe torque off control circuit is connected:</u> Test and validate the operation of the Safe torque off function. See chapter <i>The Safe torque off function</i> (page 271).	<input type="checkbox"/>
<u>Drives with an emergency stop circuit (options +Q951 and +Q963):</u> Test and validate the operation of the emergency-stop circuit. See section <i>Implementing the emergency stop function</i> (page 97).	<input type="checkbox"/>





# 10

## Fault tracing

---

### **Contents of this chapter**

This chapter describes the fault tracing possibilities of the drive.

### **Warning and fault messages**

See the firmware manual for the descriptions, causes and remedies of the drive control program warning and fault messages.



# 11

## Maintenance

---

### Contents of this chapter

This chapter contains preventive maintenance instructions.

### Maintenance intervals

The table below shows the maintenance tasks which can be done by the end user. The complete maintenance schedule is available on the Internet ([www.abb.com/driveservices](http://www.abb.com/driveservices)). For more information, consult your local ABB Service representative ([www.abb.com/searchchannels](http://www.abb.com/searchchannels)).

The maintenance and component replacement intervals are based on the assumption that the equipment is operated within the specified ratings and ambient conditions. ABB recommends annual drive inspections to ensure the highest reliability and optimum performance.

**Note:** Long term operation near the specified maximum ratings or ambient conditions may require shorter maintenance intervals for certain components. Consult your local ABB Service representative for additional maintenance recommendations.

#### ■ Descriptions of symbols

Action	Description
I	Visual inspection and maintenance action if needed
P	Performance of on/off-site work (commissioning, tests, measurements or other work)
R	Replacement of component

---

### ■ Recommended annual maintenance actions by the user

Action	Target
I	IP42 air inlet and outlet meshes on the cabinet doors
R	IP54 air filters on the cabinet doors
P	Quality of supply voltage
I	Spare parts
P	Capacitor reforming, spare modules and spare capacitors
I	Tightness of terminals
I	Dustiness, corrosion or temperature
I	Heat sink cleaning

### ■ Recommended maintenance intervals after start-up

Component	Years from start-up					
	3	6	9	12	15	18
<b>Cooling</b>						
<b>Main cooling fans</b>						
Main cooling fans (frames R6 to R11)			R			R
<b>Auxiliary cooling fans</b>						
Auxiliary cooling fan for circuit boards (frames R6 to R9)			R			R
Second auxiliary cooling fan (frames R8 to R9)			R			R
Circuit board compartment cooling fans (frames R10 and R11)			R			R
<b>Cabinet cooling fans</b>						
Cabinet cooling fan, door (frames R6 to R9)			R			R
Cabinet cooling fan, 50 Hz, internal/door/IP54 (frames R10 to R11)			R			R
Cabinet cooling fan, 60 Hz, internal/IP54 (frames R10 to R11)		R		R		R
Cabinet cooling fan, 60 Hz, door (frames R10 to R11)			R			R
<b>Aging</b>						
Control panel battery (real-time clock)			R			R

## Cleaning the interior of the cabinet

---

**WARNING!**

Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation or maintenance work.

---

**WARNING!**

Use a vacuum cleaner with antistatic hose and nozzle, and wear a grounding wristband. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.


---

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Clean the interior of the cabinet. Use a vacuum cleaner and a soft brush.
4. Clean the air inlets of the fans and air outlets of the modules (top).
5. Clean the air inlet gratings (if any) on the door.
6. Close the door.

## Cleaning the air inlet (door) meshes (IP42 / UL Type 1 Filtered)

Check the dustiness of the air inlet meshes. If the dust cannot be removed by vacuum cleaning from outside through the grating holes with a small nozzle, proceed as follows:

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
  2. Remove the fasteners at the top of the grating.
  3. Lift the grating and pull it away from the door.
  4. Vacuum clean or wash the grating on both sides.
  5. Reinstall the grating in reverse order.
-

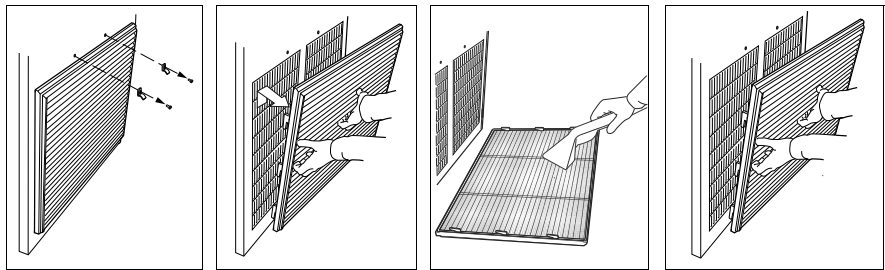


**Replacing the air filters (IP54 / UL Type 12)**

Check the air filters and replace if necessary.

### ■ Inlet (door) filters (IP54 / UL Type 12)

1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Remove the fasteners at the top of the grating.
3. Lift the grating and pull it away from the door.
4. Remove the air filter mat.
5. Place the new filter mat in the grating the metal wire side facing the door.
6. Reinstall the grating in reverse order.

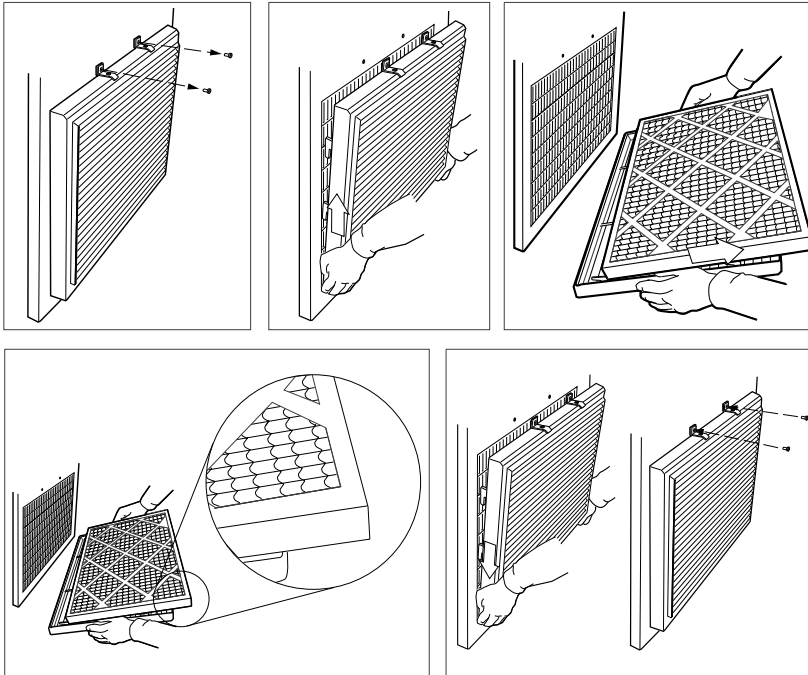

### ■ Outlet (roof) filters (IP54 / UL Type 12)

1. Remove the front and back gratings of the fan cubicle by lifting them upwards.
2. Remove the air filter mat.
3. Place the new filter mat in the grating.
4. Reinstall the gratings in reverse order.

## Heatsink (frames R6 to R9)

The drive module heatsink fins pick up dust from the cooling air. The drive runs into overtemperature warnings and faults if the heatsink is not clean. When necessary, clean the heatsink as follows.



### **WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

---



### **WARNING!**

Use a vacuum cleaner with antistatic hose and nozzle. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.

---

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Remove the drive module from the cabinet. See section [Replacing the drive module \(frames R6...R9\) \(page 172\)](#)
3. Undo the attaching screws of the handle plate of the drive module.
4. Remove the handle plate.
5. Vacuum the interior of the heatsink from the opening.
6. Blow clean compressed air (not humid or oily) upwards from the opening and, at the same time, vacuum from the top of the drive module.
7. Reinstall the handle plate.
8. Install the drive module back into the cabinet.

## Fans

The lifespan of the cooling fans of the drive depends on the running time, ambient temperature and dust concentration. See the firmware manual for the actual signal which indicates the running time of the cooling fan. Reset the running time signal after fan replacement.

Replacement fans are available from ABB. Do not use other than ABB specified spare parts.

### ■ Replacing the door fan (frames R6...R9)

Applicability: For drives with option +F250, +L537, +B055, +Q951, +Q963, Q971 or +G300.

---




**WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

---

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Unplug the power supply wires.
4. Undo the two mounting screws of the fan.
5. Install the new fan in reverse order.

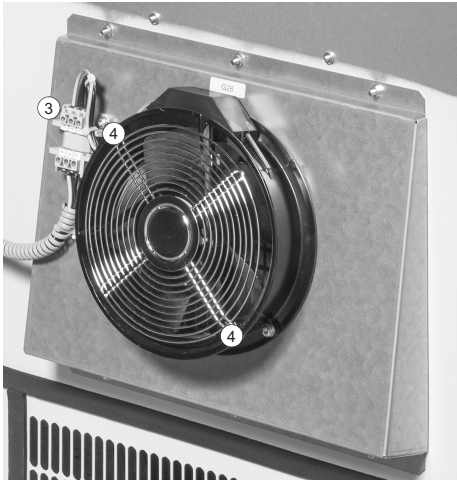

### ■ Replacing the cabinet fan (frames R6...R9)

Applicability: For drives without any of these options +F250, +L537, +B055, +Q951, +Q963, +Q971 and +G300

---


**WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

---

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
  2. Open the cabinet door.
-

3. Unplug the power supply wires.
4. Remove the shroud.
5. Undo the mounting screws and nuts of the fan.
6. Install the new fan in reverse order.

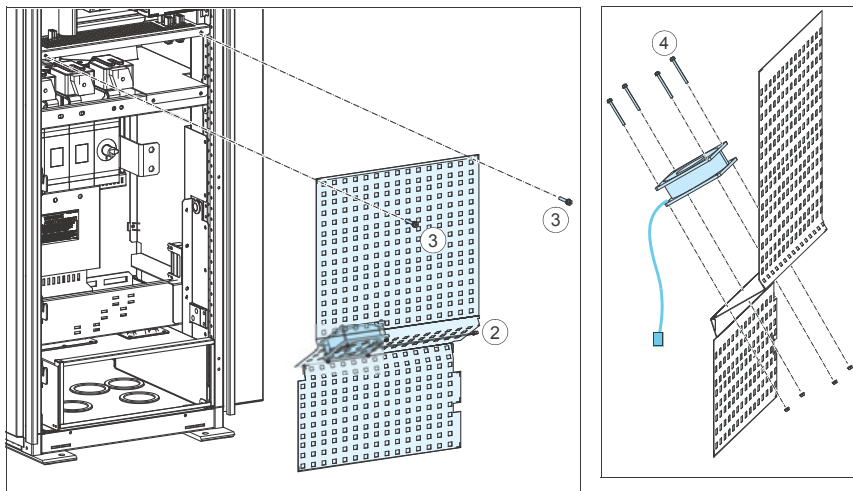


## ■ Replacing the door fan (frames R10 and R11)




### **WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Unplug the connector of the fan power supply at the front of the mounting plate.
4. Pull the mounting plate outwards somewhat and unplug the connectors at the back of the mounting plate.
5. Remove the mounting plate.
6. Undo the fan assembly mounting screws.
7. Remove the fan and the fan grating from the mounting plate.
8. Install the new fan in reverse order.

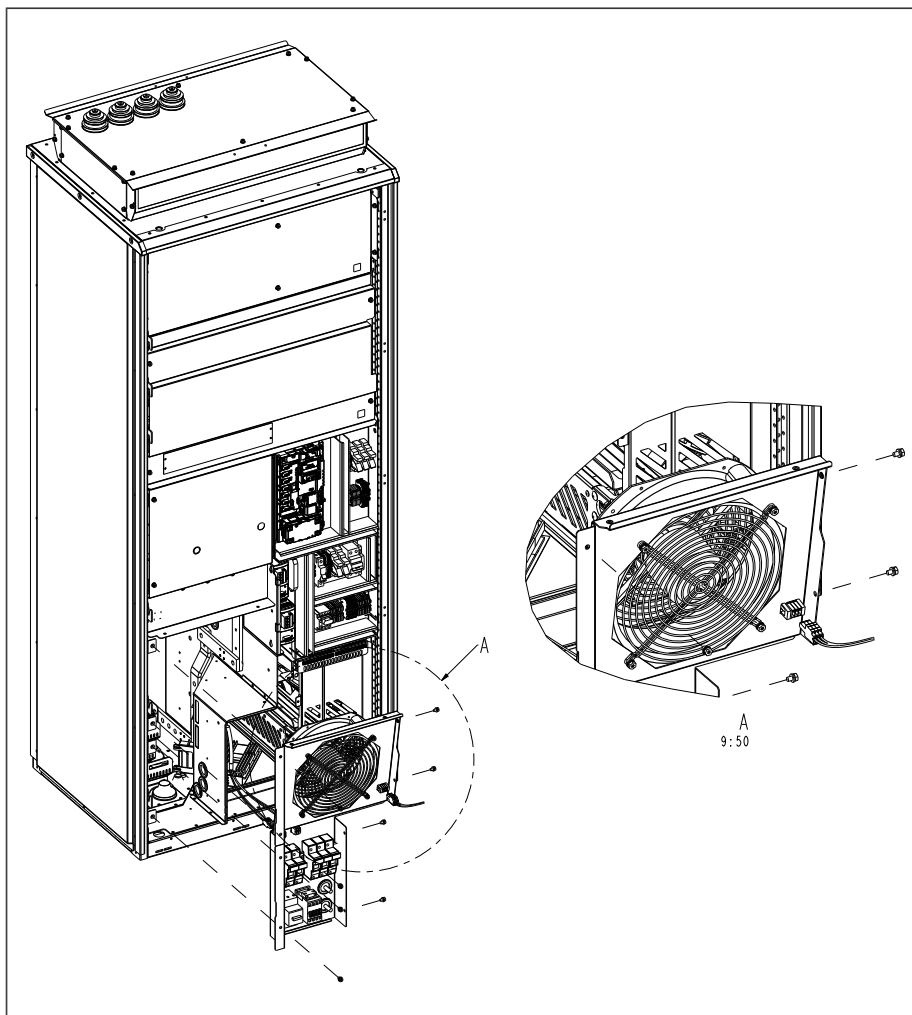

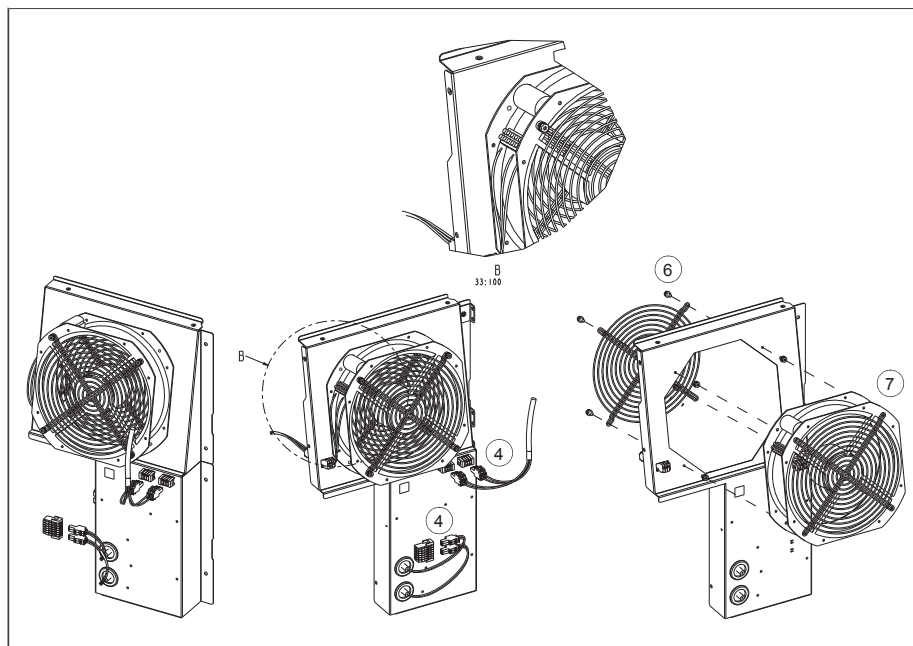


### ■ Replacing the cabinet fan (frames R10 and R11, IP54 / UL Type 12)



#### **WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Undo the fastening screws (a) of the fan mounting plate.
4. Pull the mounting plate outwards and unplug the power supply cable (b) of the fan behind the mounting plate.
5. Remove the fan mounting plate.
6. Undo the mounting screws and nuts of the fan, and take it out of the mounting plate.
7. Install the new fan in reverse order.

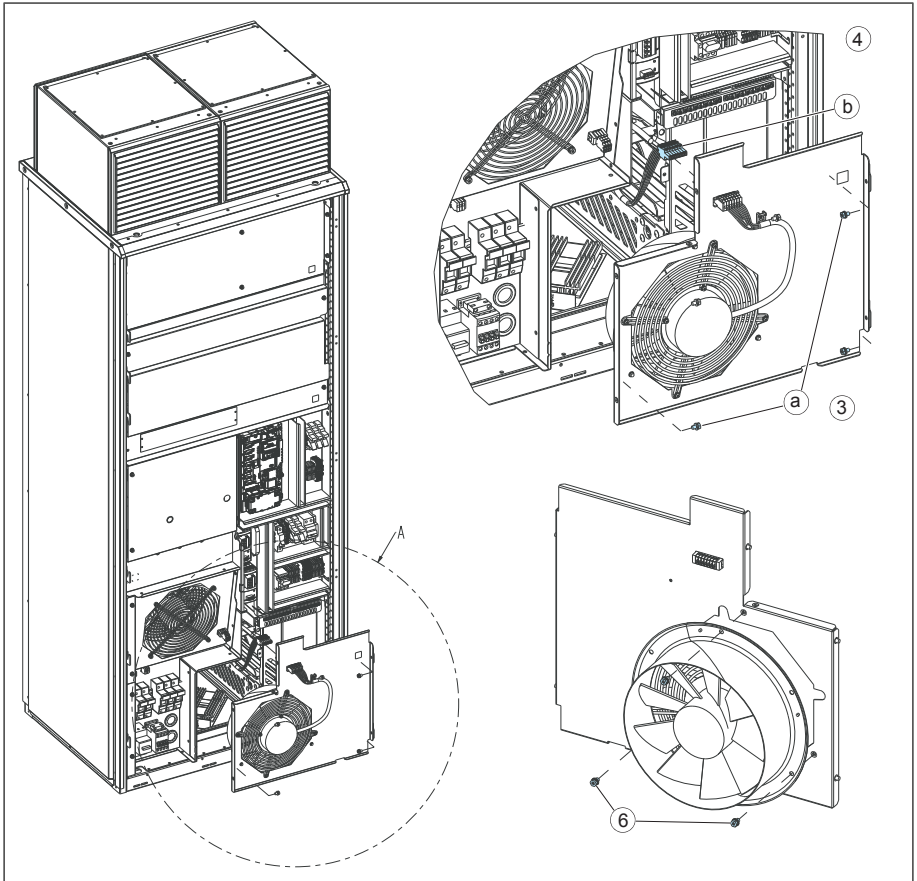

### ■ Replacing the drive module main fans (frames R6...R8)




#### **WARNING!**

Obey the instructions in chapter *Safety instructions*. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. Remove the drive module from the cabinet as described in section *Replacing the drive module (frames R6...R9) (page 172)*.
4. Remove the two mounting screws of the fan mounting plate at the bottom of the drive module.

5. Unplug the fan power supply wires from the drive.
6. Pull the fan mounting plate down from the side edge.
7. Unplug the fan power supply wires from the drive.
8. Lift the fan mounting plate off.
9. Remove the fan from the mounting plate.
10. Install the new fan in reverse order.
11. Reset the fan on-time counter in parameter group 5 of the drive control program.

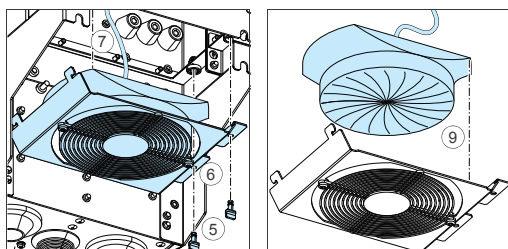

## ■ Replacing the drive module main fans (frame R9)



### WARNING!

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Remove the drive module from the cabinet as described in section [Replacing the drive module \(frames R6...R9\) \(page 172\)](#).
4. Undo the two mounting screws of the fan mounting plate at the bottom of the drive module.
5. Turn the mounting plate downwards.
6. Unplug the fan power supply wires from the drive.
7. Remove the fan mounting plate.
8. Remove the fans by removing the two mounting screws.
9. Install the new fans in reverse order.
10. Reset the fan on-time counter in parameter group 5 of the drive control program.




### ■ Replacing the drive module main fans (frames R10 and R11)



#### **WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Remove the drive module out of the cabinet as described in section [Replacing the drive module \(frames R10 and R11\) \(page 180\)](#).
4. Open the support legs of the pedestal.
5. Undo the two screws that fasten the fan assembly plate.
6. Tilt the fan assembly plate down.
7. Disconnect the power supply wires of the fans.
8. Remove the fan assembly from the drive module.
9. Undo the fastening screws of the fan(s) and remove the fan(s) from the assembly plate.
10. Install the new fan(s) in reverse order.
11. Reset the fan on-time counter in parameter group 5 of the drive control program.

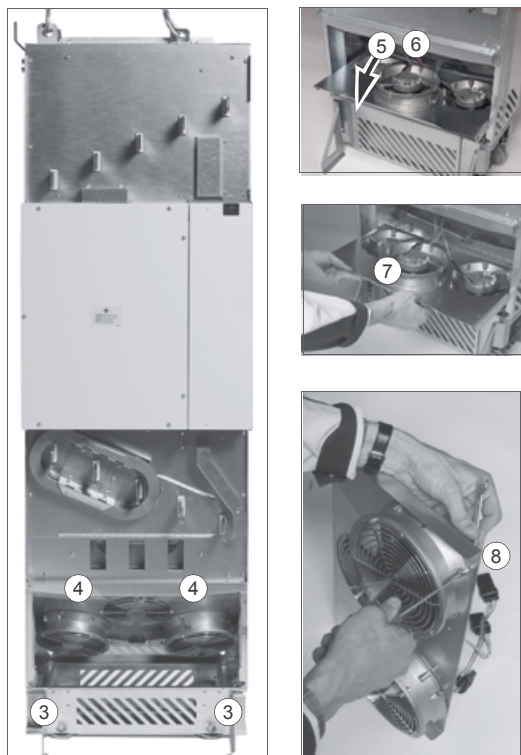

## ■ Replacing the auxiliary cooling fan of the drive module (frames R6...R9)




### **WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Unplug fan power supply wires from the drive.
4. Release the retaining clips.
5. Lift the fan off.
6. Install the new fan in reverse order.

**Note:** Make sure that the arrow on the fan points up.



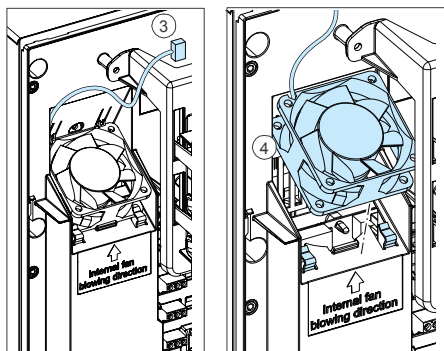


## ■ Replacing the circuit board compartment cooling fans (frames R10 and R11)

**WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Remove the drive module out of the cabinet as described in section [Replacing the drive module \(frames R10 and R11\) \(page 180\)](#).
4. Undo the fastening screw of the fan enclosure.
5. Unplug the power supply cable of the fan.
6. Install the new fan in reverse order.
7. Reset the counter (if used) in parameter *05.04 Fan on-time counter*, in the control program.

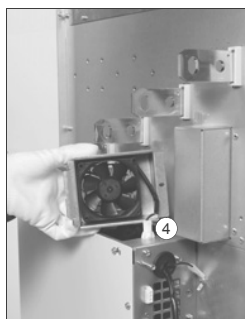

## Replacing the drive module (frames R6...R9)

This replacing procedure requires: preferably two persons, a set of screw drivers with extension bar and a torque wrench, chains for securing the module during the installation. The drawings below show a cabinet of frame size R7. The procedure is the same for the other frame sizes.

**WARNING!**

Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

Handle the drive module carefully:


- Use safety shoes with a metal toe cap to avoid foot injury.
- Lift the drive module only by the lifting lugs.

- 
1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
  2. Open the cabinet door.
  3. To attach the sliding rails:
    - 3 a) Remove the sliding rails (2 pcs) from the left-hand side cabinet frame.
    - 3 b) Undo the four screws from the top horizontal studs.
    - 3 c) Attach the left-hand side sliding rail to the horizontal stud with the removed screws
    - 3 d) Attach the right-hand side sliding rail to the horizontal stud with the removed screws.


**WARNING!**

Check that the stopping screws (3e) at the ends of the studs are in place, so that the drive module cannot slide off the rail.


---

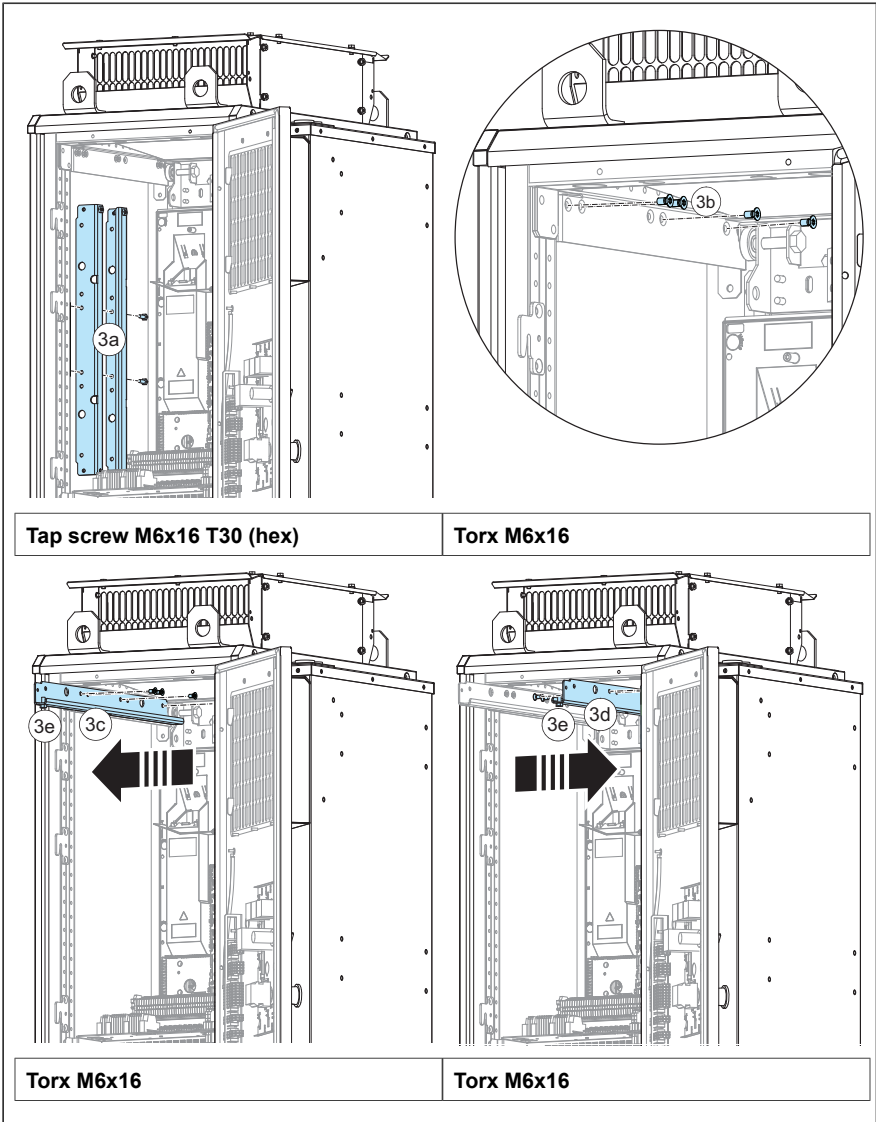


4. Unplug the wires connected to the mounting plate connectors (if present).
5. Remove the mounting plate (four screws).
6. Remove the shroud (two screws).
7. Remove the shroud on the power cable connection terminals.

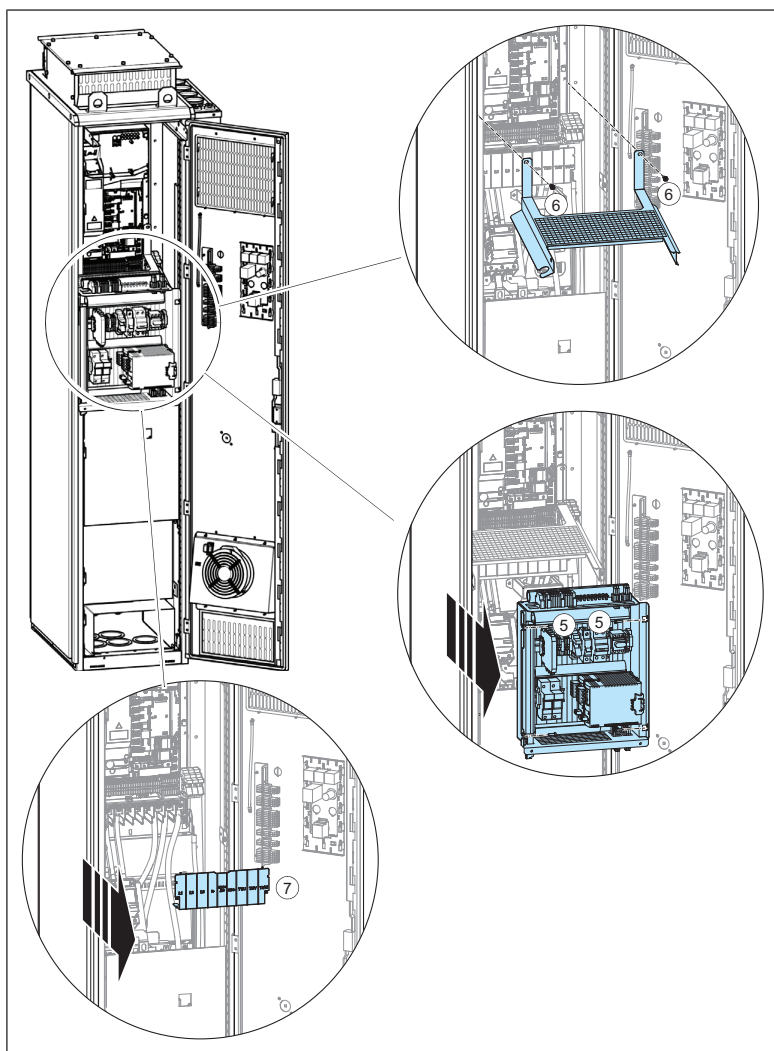


8. Disconnect the option modules from the control unit.
9. For drives with additional I/O terminal block (option +L504), disconnect the upper terminals and remove any fastening. Move the wires aside before you lift the module out. **Note:** Mark the wires for reconnection!

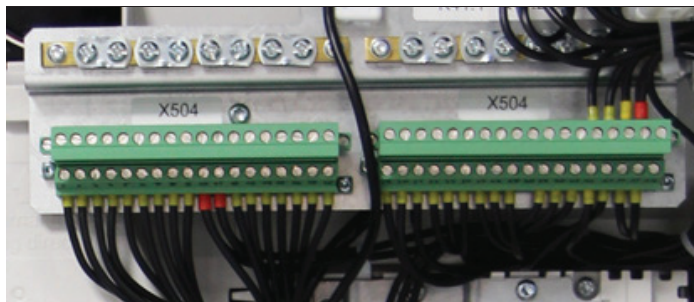


10. For drives without additional I/O terminal block (option +L504), disconnect the customer-installed wires from the control unit. **Note:** Mark the wires for reconnection!
11. For drives with line contactor (option +F250), disconnect the input power cables from the output of the contactor.

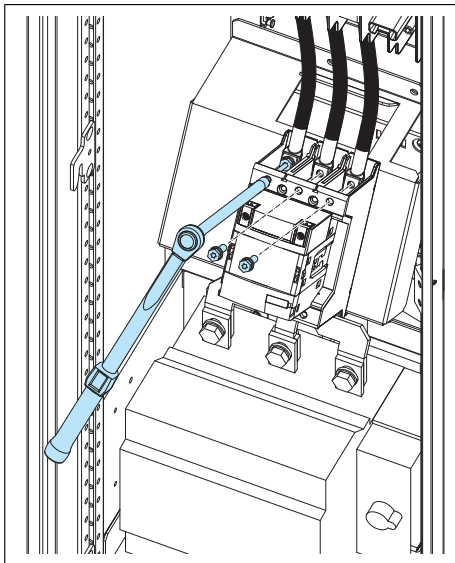

12. Disconnect the input power cable conductors and motor cable conductors from the drive module terminals.
-

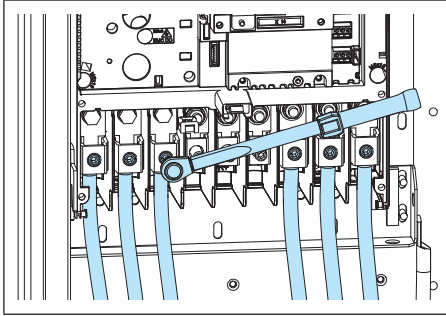


13. Secure the drive module with chains from the lifting eyes.
  14. Undo the mounting screws of the flange.
  15. Slide the drive module forwards along the sliding bars.
  16. Lift the module out of the cabinet with a lifting device.
-

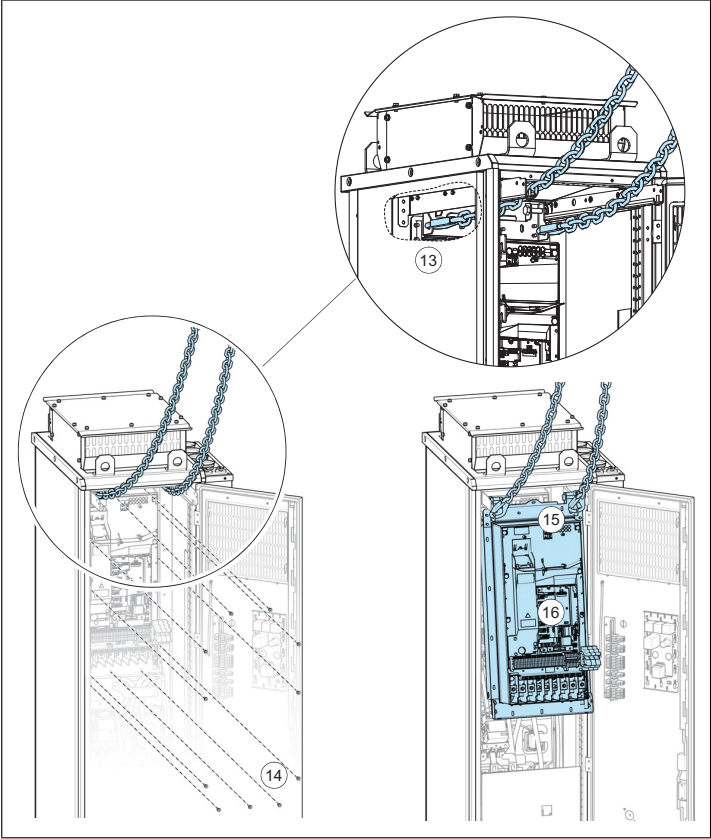

17. Remove the flange.



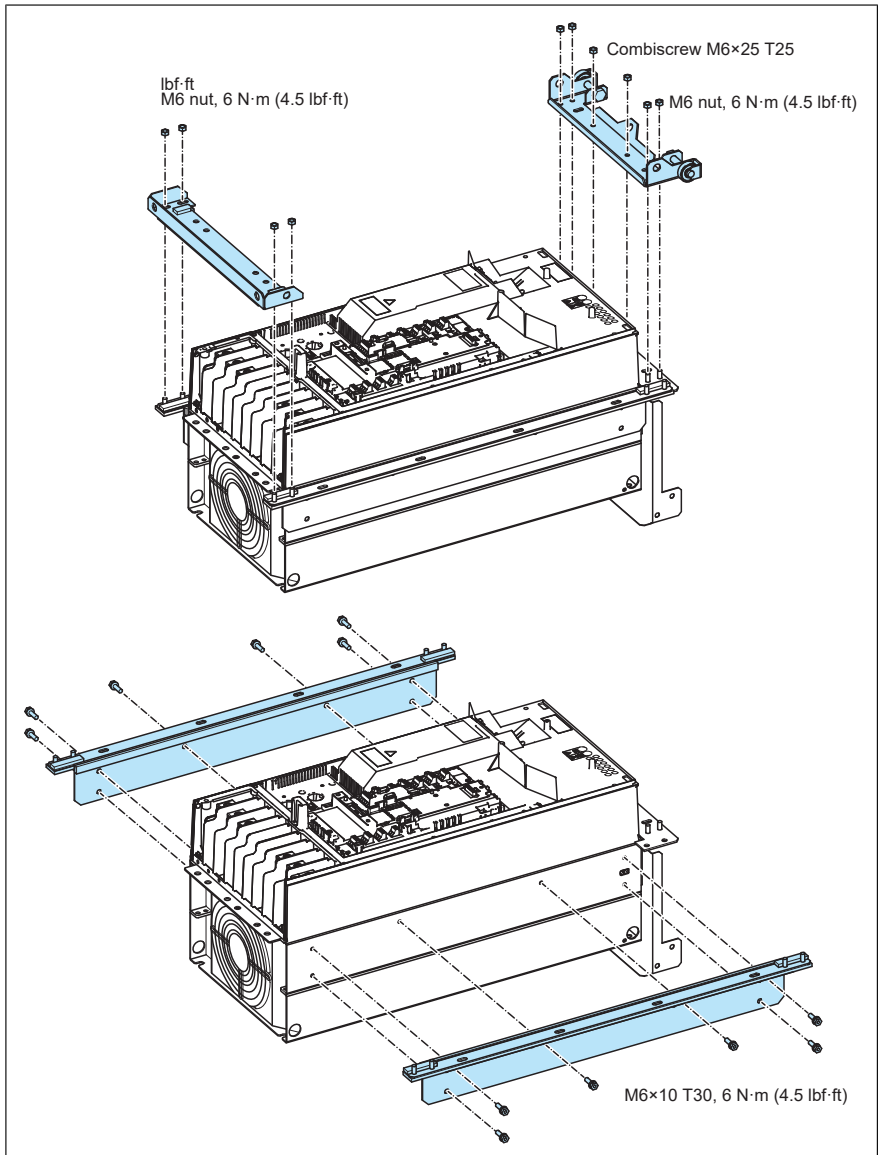

18. Install the new module in reverse order.

## Replacing the drive module (frames R10 and R11)

---



### **WARNING!**


Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

---


This replacing procedure requires: preferably two persons, extraction/installation ramp, a set of screw drivers and a torque wrench with an extension bar of 500 mm (20 in), chains for securing the module during the installation.

The drawings show frame R10. The details in frame R11 are slightly different.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
  2. Open the cabinet door.
  3. Remove the shrouds.
  4. Unplug the quick connectors at the top and bottom of the control unit mounting plate.
  5. Disconnect the PE conductor of the auxiliary control voltage transformer.
-

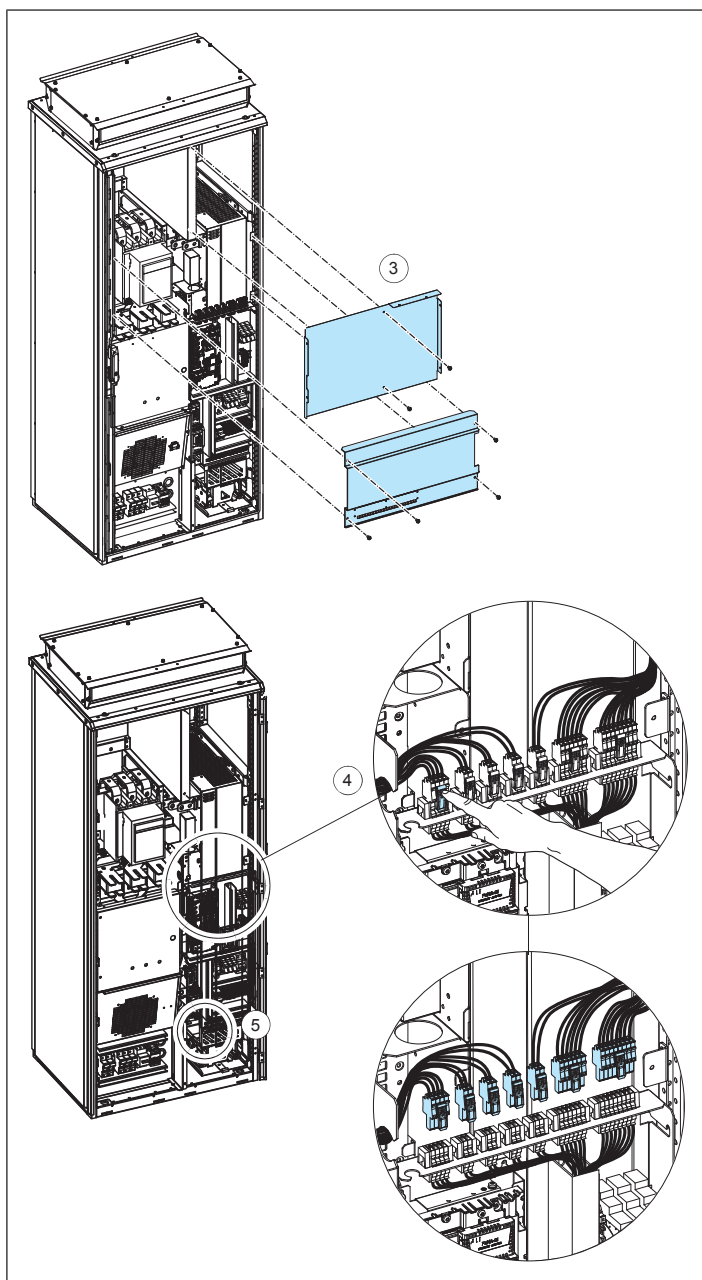


6. Remove the mounting plate.

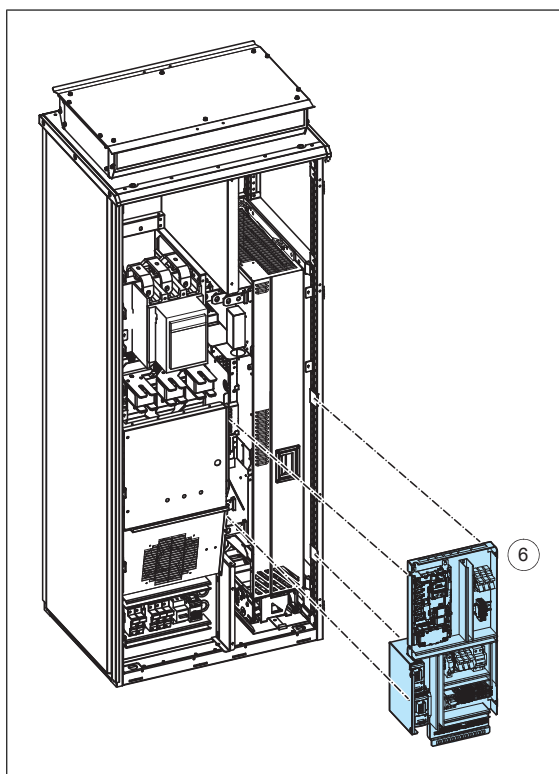


7. Disconnect the drive module input busbars with a torque wrench with an extension bar of 500 mm (20 in). Combi screw M12, 70 N·m (52 lbf·ft).


8. Disconnect the drive module output busbars. M12, 70 N·m (52 lbf·ft).

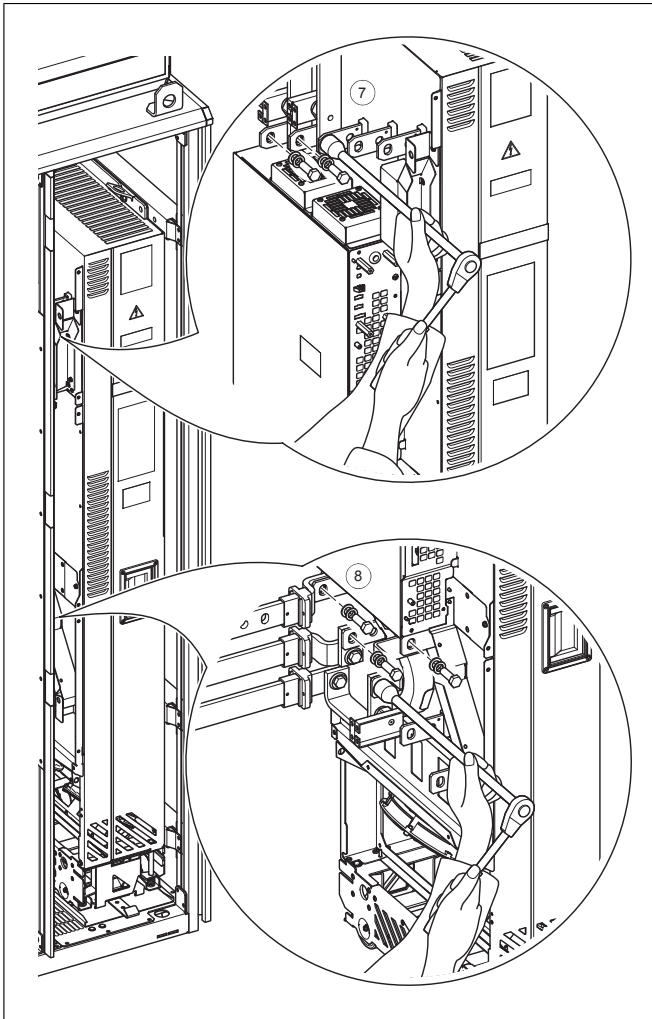


9. Remove the shroud. Undo the screws that attach the drive module to the cabinet at the top and behind the front support legs.

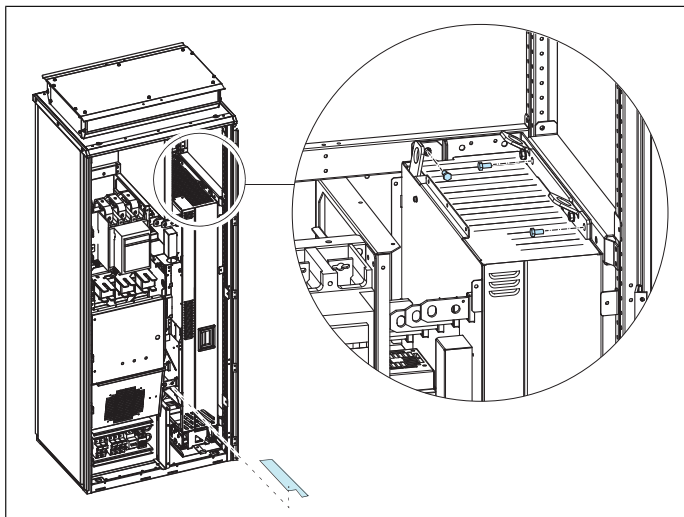

10. Attach the extraction ramp to the cabinet base with two screws.

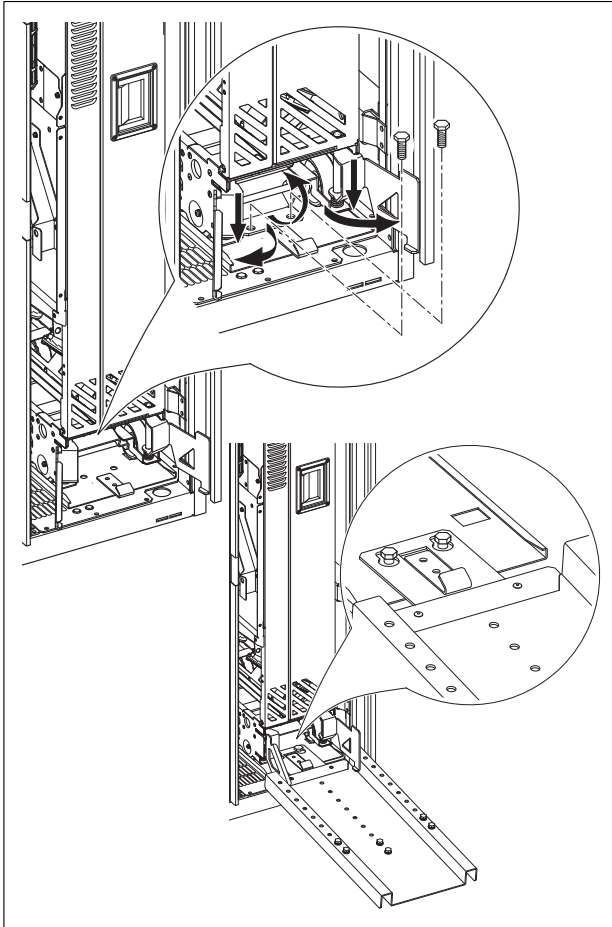

11. Attach the drive module lifting lugs to the cabinet lifting lug with chains.
  12. Pull the drive module carefully out of the cabinet preferably with help from another person.
  13. Install the new module in reverse order.
-

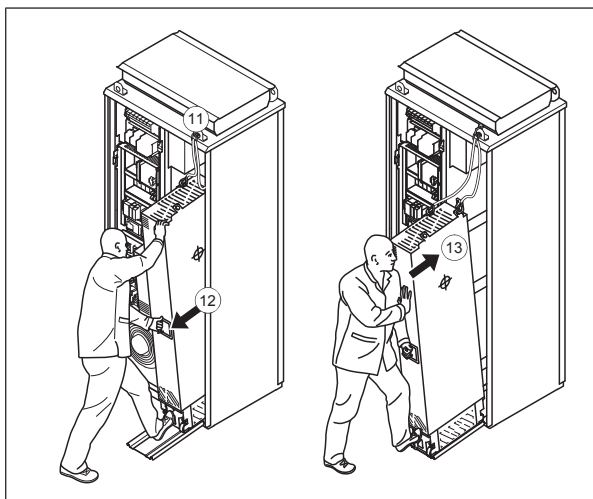

## Replacing the drive module (frames R10 and R11, IP54 / UL Type 12)



### **WARNING!**


Obey the instructions in chapter [Safety instructions](#). If you ignore them, injury or death, or damage to the equipment can occur.

This replacing procedure requires: preferably two persons, extraction/installation ramp, a set of screw drivers and a torque wrench with an extension bar of 500 mm (20 in), chains for securing the module during the installation.


The drawings show frame R10. The details in frame R11 are slightly different.

1. Stop the drive and do the steps in section [Electrical safety precautions \(page 20\)](#) before you start the work.
2. Open the cabinet door.
3. Remove the shrouds and the additional IP54 fan.
4. Unplug the quick connectors at the top and bottom of the control unit mounting plate.
5. Disconnect the PE conductor of the auxiliary control voltage transformer.



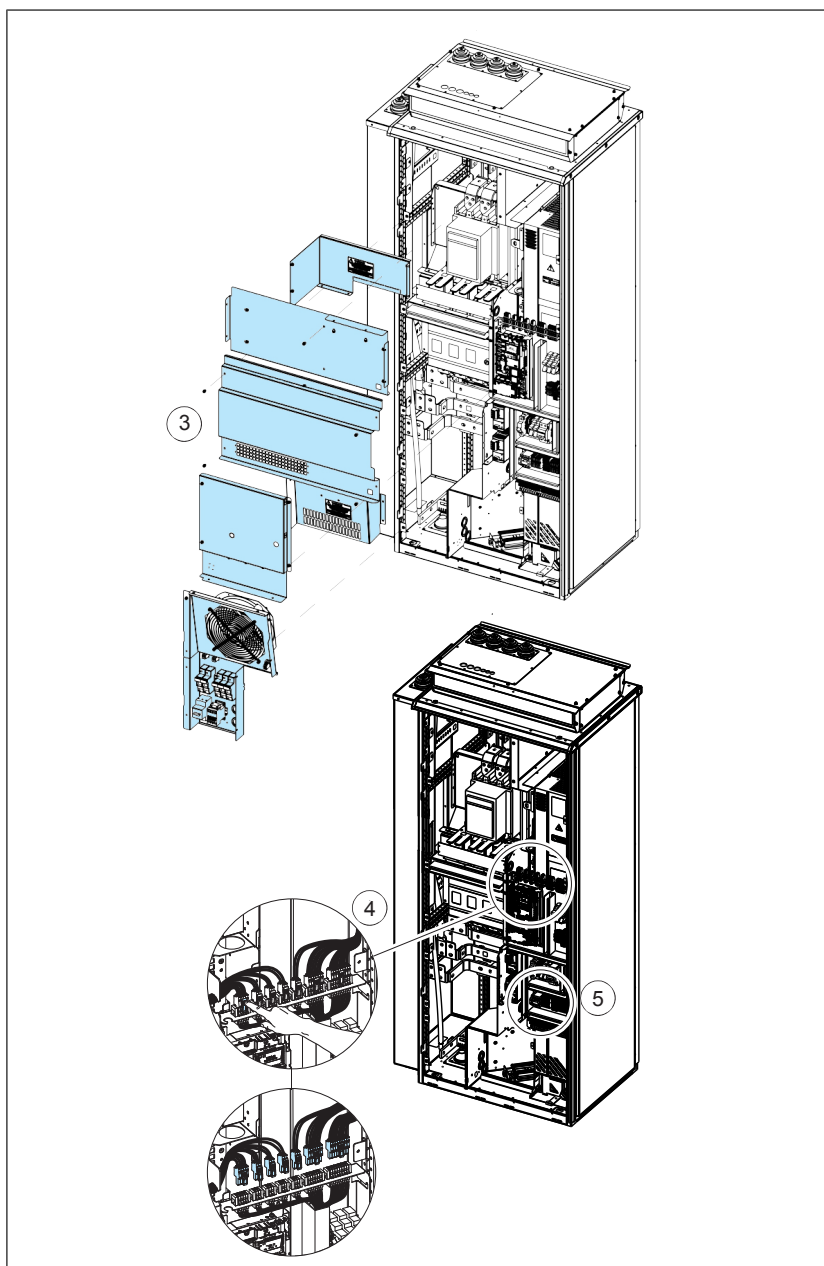


6. Remove the mounting plate.

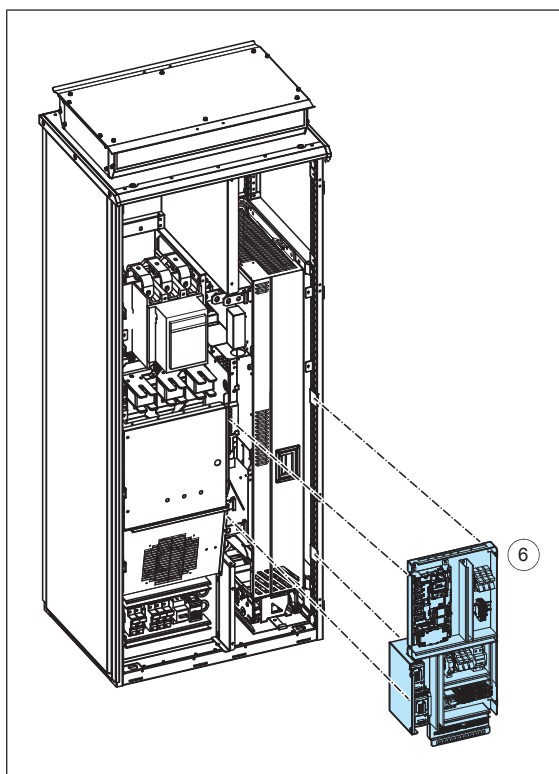


7. Disconnect the drive module input busbars with a torque wrench with an extension bar of 500 mm (20 in). Combi screw M12, 70 N·m (52 lbf·ft).


8. Disconnect the drive module output busbars. M12, 70 N·m (52 lbf·ft).

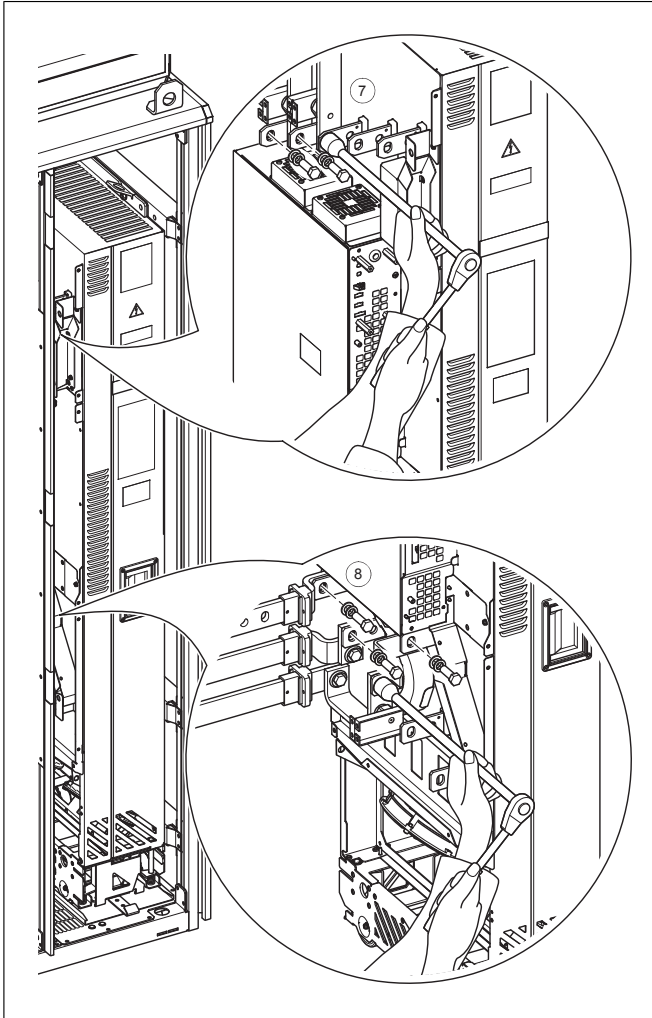

9. Remove the shroud. Undo the screws that attach the drive module to the cabinet at the top and behind the front support legs.

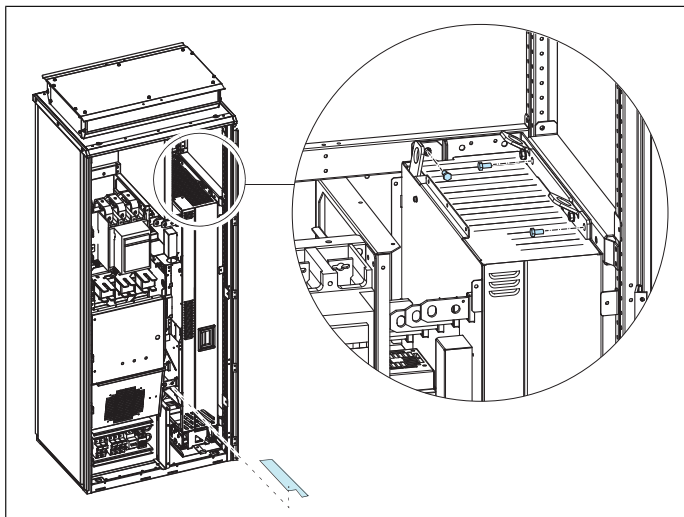


10. Attach the extraction ramp to the cabinet base with two screws.

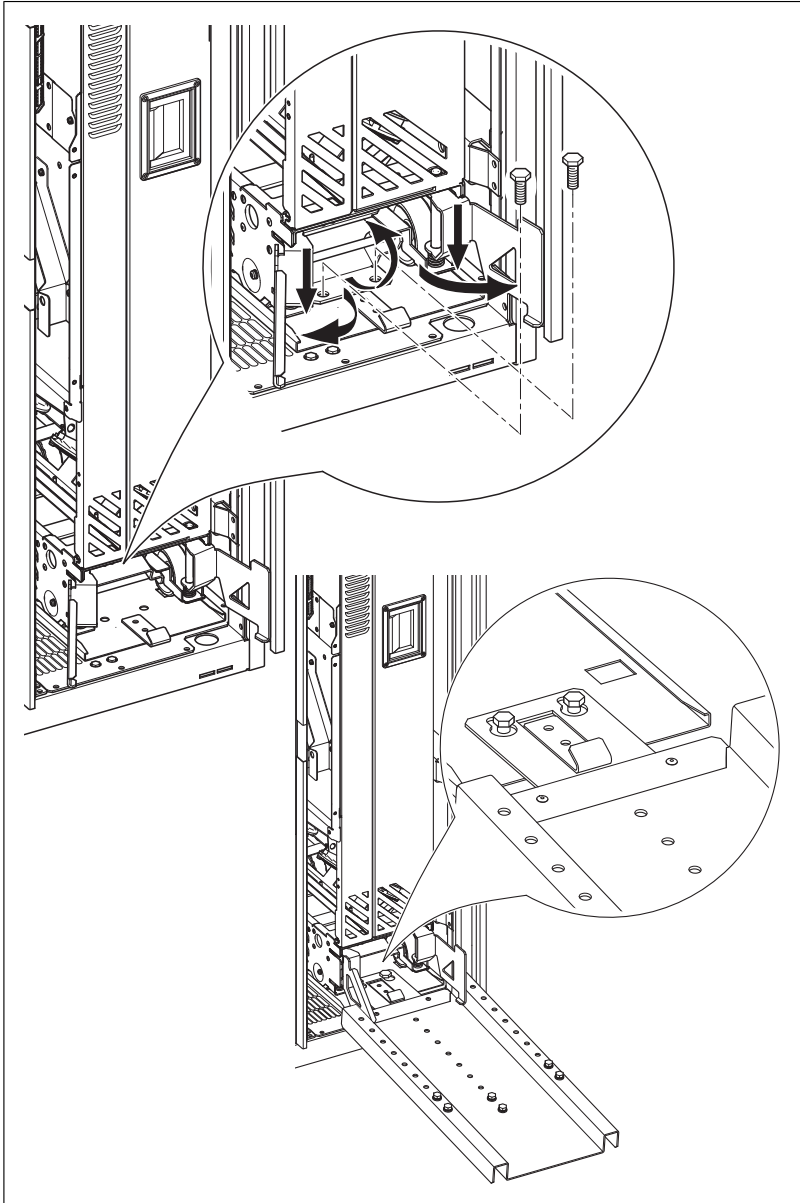

11. Attach the drive module lifting lugs to the cabinet lifting lug with chains.
-

- 12 Pull the drive module carefully out of the cabinet preferably with help from another person.
- 13 Install the new module in reverse order.

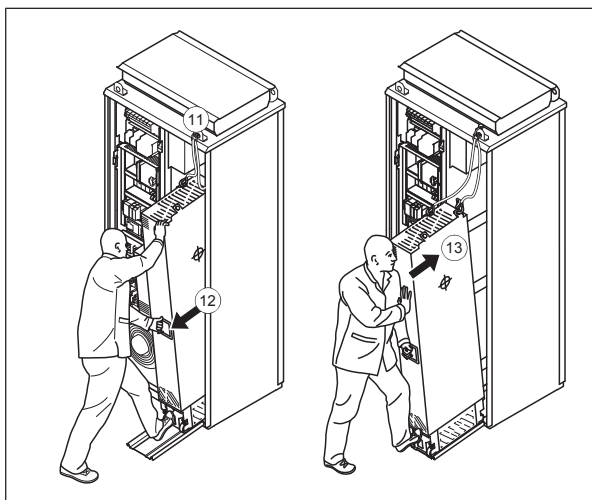

## Capacitors

The DC link of the drive contains several electrolytic capacitors. Operating time, load, and surrounding air temperature have an effect on the life of the capacitors. Capacitor life can be extended by decreasing the surrounding air temperature.

Capacitor failure is usually followed by damage to the unit and an input cable fuse failure, or a fault trip. If you think that any capacitors in the drive have failed, contact ABB.

### ■ Reforming the capacitors

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more. The manufacturing date is on the type designation label. For information on reforming the capacitors, see *Capacitor reforming instructions* (3BFE64059629 [English]) in the ABB Library (<https://library.abb.com/en>).

## Fuses

### ■ Replacing AC fuses (frames R6 and R7)



#### **WARNING!**

Obey the instructions in chapter *Safety instructions*. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. Remove the shrouding from in front of the switch fuse.
4. Replace the fuses with the fuse handle which is in the cabinet.
5. Reinstall the shrouding removed earlier and close the cabinet door.


### ■ Replacing AC fuses



#### **WARNING!**

Obey the instructions in chapter *Safety instructions*. If you ignore them, injury or death, or damage to the equipment can occur.

1. Stop the drive and do the steps in section *Electrical safety precautions (page 20)* before you start the work.
2. Open the cabinet door.
3. Remove the shrouding from in front of the fuses.
4. Slacken the nuts of the headless screws of the fuses so that you can slide out the fuse blocks. Make a note of the order of the washers on the screws.
5. Remove the screws, nuts and washers from the old fuses and attach them to the new fuses. Make sure to keep the washers in the original order.

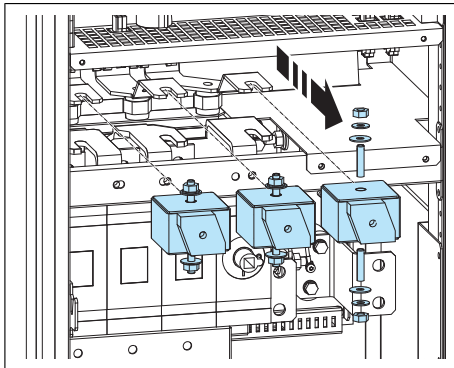

6. Insert the new fuses into their slots in the cabinet.
7. Tighten the screws to torque 5 N·m (3 lbf·ft) maximum.
8. Tighten the nuts to torque as follows:
  - Cooper-Bussmann fuses: 50 N·m (37 lbf·ft) if size 3; 40 N·m (30 lbf·ft) if size 2

- Mersen (Ferraz-Shawmut): 46 N·m (34 lbf·ft) if size 33; 26 N·m (19 lbf·ft) if size 32
  - Other fuses: Refer to the fuse manufacturer's instructions.
9. Reinstall the shrouding removed earlier and close the cabinet door.

## Control panel

For detailed information on the control panel, see *ACx-AP-x assistant control panels user's manual* ([3AUA0000085685](#) [English]).

### ■ Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

### ■ Replacing the battery

The instructions below describe how to replace the battery that powers the real-time clock of the control panel.

1. Turn the lid on the back of the control panel counter-clockwise until the lid opens.
2. Remove the battery gently.
3. Replace the battery with a new CR2032 battery. The battery holder has grip nails. First slide the battery and then press on the other side. The battery will snap in.
4. Make sure that the battery polarity shows positive on the upside.
5. Put the lid back and tighten it by turning it clockwise.
6. Dispose of the old battery according to local disposal rules or applicable laws.





# 12

## Technical data

### Contents of this chapter

This chapter contains the technical specifications of the drive, for example, the ratings, sizes and technical requirements, provisions for fulfilling the requirements for CE and other markings.

### Ratings

#### ■ IEC ratings

The nominal ratings for the drives with 50 Hz and 60 Hz supply are given below. The symbols are described in section [Definitions \(page 197\)](#).

IEC RATINGS										
ACS580-07...	Frame size	Input rating	Output ratings							
			Nominal ratings				Light-duty use		Heavy-duty use	
		$I_1$	$I_{\max}$	$I_2$	$S_n$	$P_N$	$I_{Ld}$	$P_{Ld}$	$I_{Hd}$	$P_{Hd}$
		A	A	A	kVA	kW	A	kW	A	kW
$U_n = 400\text{ V}$										
0145A-4	R6	145	178	145	100	75	138	75	105	55
0169A-4	R7	169	247	169	117	90	161	90	145	75
0206A-4	R7	206	287	206	143	110	196	110	169	90
0246A-4	R8	246	350	246	170	132	234	132	206	110
0293A-4	R8	293	418	293	203	160	278	160	246*	132
0363A-4	R9	363	498	363	251	200	345	200	293	160

IEC RATINGS										
ACS580-07...	Frame size	Input rating	Output ratings							
			Nominal ratings					Light-duty use		Heavy-duty use
			$I_1$	$I_{max}$	$I_2$	$S_n$	$P_N$	$I_{Ld}$	$P_{Ld}$	$I_{Hd}$
			A	A	A	kVA	kW	A	kW	A
0430A-4	R9	430	542	430	298	250	400	200	363**	200
0505A-4	R10	505	560	505	350	250	485	250	361	200
0585A-4	R10	585	730	585	405	315	575	315	429	250
0650A-4	R10	650	730	650	450	355	634	355	477	250
0725A-4	R11	725	1020	725	502	400	715	400	566	315
0820A-4	R11	820	1020	820	568	450	810	450	625	355
0880A-4	R11	880	1100	880	610	500	865	500	725***	400

### ■ UL (NEC) ratings

UL (NEC) RATINGS										
ACS580-07...	Frame size	Input rating	Output ratings							
			Nominal ratings				Light-duty use		Heavy-duty use	
		$I_1$	$I_{\max}$	$I_2$	$S_n$	$P_n$	$I_{Ld}$	$P_{Ld}$	$I_{Hd}$	$P_{Hd}$
		A	A	A	kVA	hp	A	hp	A	hp
$U_n = 480\text{ V}$										
0124A-4	R6	124	178	124	100		124	100	96	75
0156A-4	R7	156	247	156	117		156	125	124	100
0180A-4	R7	180	287	180	143		180	150	156	125
0240A-4	R8	240	350	240	170		240	200	180	150
0260A-4	R8	260	418	260	203		260	200	240*	150
0361A-4	R9	361	542	361	251		361	300	302	250
0414A-4	R9	414	542	414	298		414	350	361**	300
0505A-4	R10	483	560	505	350	400	483	400	361	300
0585A-4	R10	573	730	585	405	450	573	450	414	350
0650A-4	R10	623	730	650	450	500	623	500	477	400
0725A-4	R11	705	850	725	502	600	705	600	566	450
0820A-4	R11	807	1020	820	568	700	807	700	625	500
0880A-4	R11	807	1020	880	610	700	807	700	625	500

## ■ Definitions

$U_n$	Nominal voltage of the drive. For the input voltage range, see section <a href="#">Electrical power network specification (page 237)</a> .
$I_1$	Nominal rms input current
$I_2$	Nominal output current (available continuously with no over-loading)
$S_n$	Apparent power (no overload)
$P_N$	Typical motor power in no-overload use
$I_{Ld}$	Continuous rms output current allowing 10% overload for 1 minute every 5 minutes.
$P_{Ld}$	Typical motor power in light-duty use
$I_{max}$	Maximum output current. Available for two seconds at start, then as long as allowed by drive temperature.
$I_{Hd}$	Continuous rms output current allowing 50% overload for 1 minute every 10 minutes. * Continuous rms output current allowing 30% overload for 1 minute every 10 minutes. ** Continuous rms output current allowing 25% overload for 1 minute every 10 minutes. *** Continuous rms output current allowing 40% overload for 1 minute every 10 minutes
$P_{Hd}$	Typical motor power in heavy-duty use

**Note 1:** The ratings apply at an ambient temperature of 40 °C (104 °F).

**Note 2:** To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current.


The DriveSize dimensioning tool available from ABB is recommended for selecting the drive, motor and gear combination.

## Output derating

### ■ Ambient temperature derating

#### Drive types other than -0414A-4 and -0430A-4

In the temperature range +40...50 °C (+104...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

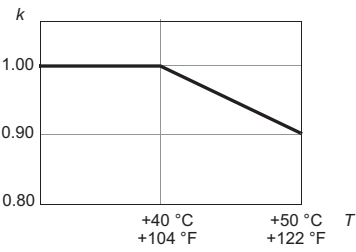


For example:

Temperature	Derated current	
40 °C (104 °F)	$I_{Ld}$	$I_{Hd}$
45 °C (113 °F)	$0.95 \cdot I_{Ld}$	$0.95 \cdot I_d$
50 °C (122 °F)	$0.90 \cdot I_{Ld}$	$0.90 \cdot I_{Hd}$

Drive types -0414A-4 and -0430A-4

In the temperature range +35...50 °C (+95...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

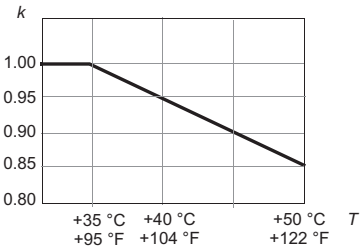


■ Altitude derating

At altitudes from 1000 to 2000 m (3300 to 6561 ft) above sea level, the derating is 1% for every 100 m (328 ft). Multiply the output current given in [Ratings \(page 195\)](#) by the coefficient value given in this table.

Frame	Coefficient			
	1000 m 3281 ft	2000 m 6562	3000 m 9842 ft	4000 m 13123 ft
R6	1.00	0.90	0.80	0.70
R7	1.00	0.90	0.80	0.70
R8	1.00	0.90	0.80	0.70

Frame	Coefficient			
	1000 m 3281 ft	2000 m 6562	3000 m 9842 ft	4000 m 13123 ft
R9	1.00	0.90	0.80	0.70
R10	1.00	0.90	0.80	0.70
R11	1.00	0.90	0.80	0.70

If ambient temperature is below +40 °C (+104 °F), the derating can be reduced by 1.5% for every 1 °C reduction in temperature. Curves with derating factors from 1.00 to 0.80 are shown below. For a more accurate derating, use the DriveSize PC tool. A few altitude derating curves are shown below.

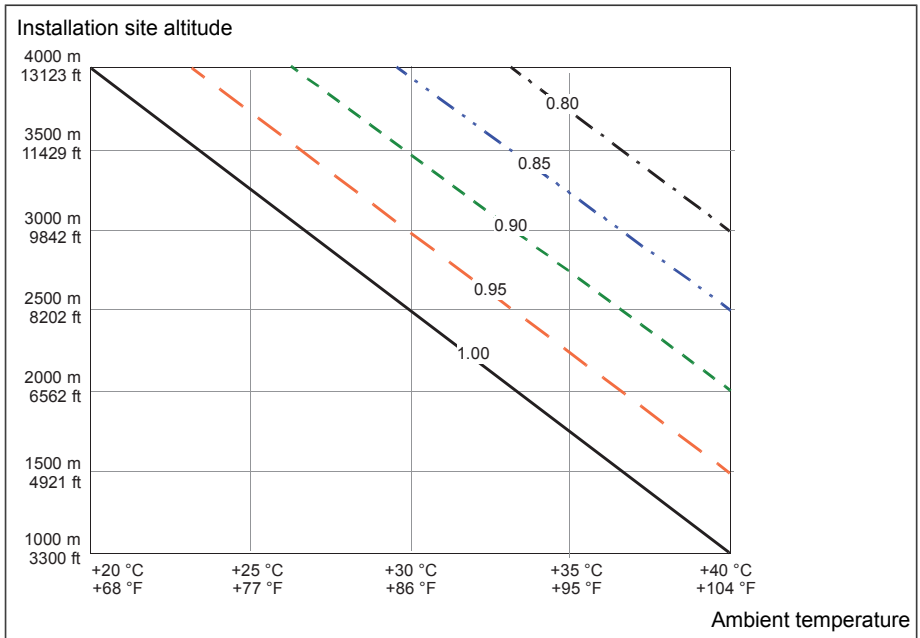

### ■ Deratings for special settings in the drive control program

If you change the minimum switching frequency with parameter 97.02 *Minimum switching frequency*, multiply the output current given in [Ratings \(page 195\)](#) by the coefficient value given in this table.

Frame size	1.5 kHz	2 kHz	4kHz	8 kHz
R6	1.00	0.97	0.84	0.66

Frame size	1.5 kHz	2 kHz	4kHz	8 kHz
R7	1.00	0.98	0.89	0.71
R8	1.00	0.96	0.82	0.61
R9	1.00*	0.95*	0.79*	0.58*
R10	1.00	0.92	0.78	0.58
R11	1.00	0.92	0.78	0.58
R11	1.00	0.92	0.78	0.58
R11	1.00	0.92	0.78	0.58

\* current derating for -0414A-4 and -0430A-4 at 35 C

**Note:** Changing the value of parameter 97.01 *Switching frequency reference* does not require derating.

## Fuses (IEC)

The standard drive is equipped with aR fuses listed below.

ACS580-07...	Input current (A)	Ultrarapid (aR) fuses (one fuse per phase)					
		(A)	A <sup>2</sup> s	V	Type (Bussmann)	Type (Mersen)	Size
U <sub>n</sub> = 400 V							
0145A-4	145	250	31000	690	170M3816D	J320375C	1
0169A-4	169	250	31000	690	170M3816D	J320375C	1
0206A-4	206	315	52000	690	170M3817D	N320379C	1
0246A-4	246	400	79000	690	170M5408	H300065A	2
0293A-4	293	500	155000	690	170M5410	S1046930K	2
0363A-4	363	630	210000	690	170M6410	X300078C	3
0430A-4	430	700	300000	690	170M6411	Y300079C	3
0505A-4	505	800	465000	690	170M6412	W1046956F	3
0585A-4	585	900	670000	690	170M6413	X1046957F	3
0650A-4	650	1000	945000	690	170M6414	Y1046958F	3
0725A-4	725	1250	1950000	690	170M6416	A1046960F	3
0820A-4	820	1250	1950000	690	170M6416	A1046960F	3

ACS580-07...	Input current (A)	Ultrarapid (aR) fuses (one fuse per phase)					
		(A)	A <sup>2</sup> s	V	Type (Bussmann)	Type (Mersen)	Size
0880A-4	880	1400	2450000	690	170M6417	B1046961F	3

**Notes:**

- 1 Fuses with a higher current rating than specified must not be used.
- 2 Fuses from other manufacturers can be used if they meet the ratings and the melting curve of the fuse does not exceed the melting curve of the fuse mentioned in the table.

## Fuses (UL)

The drive with option +C129 and option +F289 is equipped with standard fuses listed below for internal circuit protection. The fuses restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive. The drive also requires external fuses for branch circuit protection per NEC, see section [Fuses for branch circuit protection \(page 203\)](#).

ACS580-07...	Input current A	Fuse (one fuse per phase)						
		A	V	Type (Bussmann)	Type (Mersen)	UL class / Size	Type with option +F289	Size (option +F289)
U <sub>n</sub> = 480 V – UL (NEC) types								
0124A-4	124	250	600	DFJ-250	B235889A (HSJ 250)	J	170M3416 / P300002C	1
0156A-4	156	300	600	DFJ-300	C235890A (HSJ 300)	J	170M3416 / P300002C	1
0180A-4	180	300	600	DFJ-300	C235890A (HSJ 300)	J	170M4410 / G1046920K	1
0240A-4	240	400	690	170M5408	H300065A	2	170M4410 / H300065A	2
0260A-4	260	500	690	170M5410	S1046930K	2	170M5408 / S1046930K	2
0361A-4	361	630	690	170M6410	X300078C	3	170M5410 / X300078C	3
0414A-4	414	700	690	170M6411	Y300079C	3	170M6411 / Y300079C	3
0505A-4	483	800	690	170M6412	W1046956F	3	170M6412 / W1046956F	3
0585A-4	573	900	690	170M6413	X1046957F	3	170M6413 / X1046957F	3
0650A-4	623	1000	690	170M6414	Y1046958F	3	170M6414 / Y1046958F	3
0725A-4	705	1250	690	170M6416	A1046960F	3	170M6416 / A1046960F	3
0820A-4	807	1250	690	170M6416	A1046960F	3	170M6416 / A1046960F	3
0880A-4	807	1400	690	170M6417	B1046961F	3	170M6417 / B1046961F	3



## Fuses for branch circuit protection

The drive is suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes at 480 V maximum when the input cable is protected with UL class T or L fuses. The fuses for branch circuit protection per NEC must be selected according to the table below. Obey local regulations.

ACS580-07...	Input current A	Fuse (one fuse per phase)				
		A	V	Manufacturer	Type	UL class
U <sub>n</sub> = 480 V – UL (NEC) types						
0124A-4	124	200	600	Bussmann	JJS-200	T
0156A-4	156	225	600	Bussmann	JJS-225	T
0180A-4	180	300	600	Bussmann	JJS-300	T
0240A-4	240	350	600	Bussmann	JJS-350	T
0260A-4	260	400	600	Bussmann	JJS-400	T
0361A-4	361	500	600	Bussmann	JJS-500	T
0414A-4	414	600	600	Bussmann	JJS-600	T
0505A-4	483	600	600	Bussmann	JJS-600	T
0585A-4	573	800	600	Ferraz	A4BY800	L
0650A-4	623	800	600	Ferraz	A4BY800	L
0725A-4	705	800	600	Ferraz	A4BY800	L
0820A-4	807	900	600	Ferraz	A4BY900	L
0880A-4	807	1000	600	Ferraz	A4BY1000	L

### Notes:

- 1 Fuses with a higher current rating than specified must not be used.
- 2 Fuses from other manufacturers can be used if they meet the ratings and the melting curve of the fuse does not exceed the melting curve of the fuse mentioned in the table.

## Dimensions and weights


Frame size	Height	Width	Depth	Weight
	mm	mm	mm	kg
R6	2145	430	673	210
R7	2145	430	673	220
R8	2145	530	673	255

Frame size	Height	Width	Depth	Weight
	mm	mm	mm	kg
R9	2145	530	673	275
R10	2145	830	698	410
R10 (option +B055)	2315	830	698	410
R11	2145	830	698	440
R11 (option +B055)	2315	830	698	440


ACS580-07...	Height	Width	Depth	Weight
	in.	in.	in.	lb
R6	84.43	16.93	26.50	463
R7	84.43	16.93	26.50	485
R8	84.43	20.87	26.50	562
R9	84.43	20.87	26.50	606
R10	84.43	32.68	27.48	904
R10 (option +B055)	91.14	32.68	27.48	904
R11	84.43	32.68	27.48	970
R11 (option +B055)	91.14	32.68	27.48	970

Free space requirements

Free space requirements for cooling are given below.

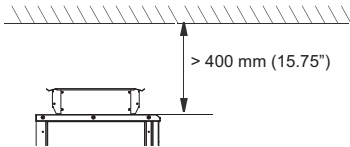Front		Side		Above *	
mm	in.	mm	in.	mm	in.
150	5.91	-	-	400	15.75
<div><p>* measured from the base plate of the cabinet top.</p></div>					

Free space for door opening:

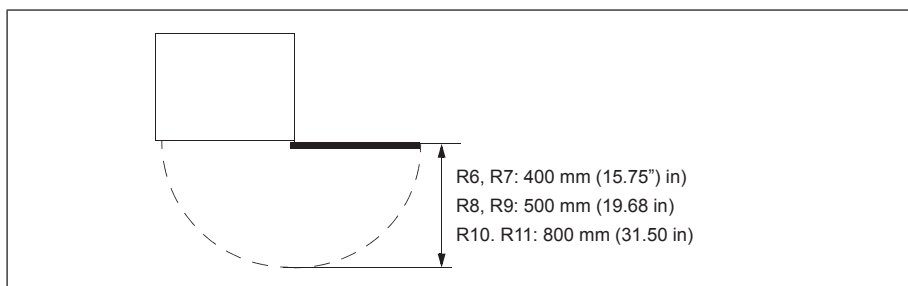

## Maximum allowed plinth height for the extraction/installation ramp

The maximum plinth height for the extraction/installation ramp delivered with the drive is 50 mm (1.97 in).

## Typical power cable sizes

The table below gives typical copper and aluminum cable types with concentric copper shield for the drives with nominal current. For the cable sizes accepted by the drive cabinet cable entries and connection terminals, see [Terminal and entry data for the power cables \(page 207\)](#).

ACS580-07...	Frame size	IEC 1)		US 2)
		Cu cable type	Al cable type	Cu cable type
		mm <sup>2</sup>	mm <sup>2</sup>	AWG/kcmil per phase
U <sub>n</sub> = 400 V				
0145A-4	R6	3×95	3×120	3/0
0169A-4	R7	3×120	3×150	250 MCM
0206A-4	R7	3×150	3×240	300 MCM
0246A-4	R8	2×(3×70)	2×(3×95)	2×2/0
0293A-4	R8	2×(3×95)	2×(3×120)	2×3/0
0363A-4	R9	2×(3×120)	2×(3×185)	2×250 MCM
0430A-4	R9	2×(3×150)	2×(3×240)	2×300 MCM
0505A-4	R10	3×(3×95)	3×(3×150)	2×500 MCM or 3×250 MCM
0585A-4	R10	3×(3×120)	4×(3×150)	3×300 MCM
0650A-4	R10	3×(3×150)	4×(3×150)	3×300 MCM
0725A-4	R11	3×(3×185)	4×(3×185)	3×500 MCM or 4×300 MCM
0820A-4	R11	3×(3×240)	4×(3×240)	3×600 MCM or 4×400 MCM

ACS580-07...	Frame size	IEC <sup>1)</sup>		US <sup>2)</sup>
		Cu cable type	Al cable type	Cu cable type
		mm <sup>2</sup>	mm <sup>2</sup>	AWG/kcmil per phase
0880A-4	R11	3×(3×240)	4×(3×240)	3×600 MCM or 4×400 MCM
$U_n = 480 \text{ V}$				
0124A-4	R6	3×95	3×120	3/0
0156A-4	R7	3×120	3×150	250 MCM
0180A-4	R7	3×150	3×240	300 MCM
0240A-4	R8	2×(3×70)	2×(3×95)	2×2/0
0260A-4	R8	2×(3×95)	2×(3×120)	2×3/0
0361A-4	R9	2×(3×120)	2×(3×185)	2×250 MCM
0414A-4	R9	2×(3×150)	2×(3×240)	2×300 MCM
0505A-4	R10	3x(3x95)	3x(3x150)	2×500/3×250 MCM
0585A-4	R10	3x(3x120)	4x(3x150)	3×300 MCM
0650A-4	R10	3x(3x150)	4x(3x150)	3×300 MCM
0725A-4	R11	3x(3x185)	4x(3x185)	3x500/4x300 MCM
0820A-4	R11	3x(3x240)	4x(3x240)	3×600/4x400 MCM
0880A-4	R11	3x(3x240)	4x(3x240)	3x600/4x400 MCM

1. The cable sizing is based on max. 9 cables laid on a cable ladder side by side, three ladder type trays one on top of the other, ambient temperature 30 °C, PVC insulation, surface temperature 70 °C (EN 60204-1 and IEC 60364-5-52/2001). For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive.
2. The cable sizing is based on NEC Table 310-16 for copper wires, 75 °C (167 °F) wire insulation at 40 °C (104 °F) ambient temperature. Not more than three current-carrying conductors in raceway or cable or earth (directly buried). For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive.

## Losses, cooling data and noise

ACS580-07...	Air flow				Heat dissipation	Noise
	IP21, IP42 (UL Type 1)		IP54 (UL Type 12)			
	m <sup>3</sup> /h	cfm	m <sup>3</sup> /h	cfm	W	dB(A)
U <sub>n</sub> = 480 V						
0145A-4	685	403	585	344	2487	67
0169A-4	700	412	600	353	2497	67
0206A-4	700	412	600	353	3314	67
0246A-4	800	470	700	412	3806	65
0293A-4	800	470	700	412	4942	65

ACS580-07...	Air flow				Heat dissipation	Noise
	IP21, IP42 (UL Type 1)		IP54 (UL Type 12)			
	m <sup>3</sup> /h	cfm	m <sup>3</sup> /h	cfm	W	dB(A)
0363A-4	1400	824	1300	765	5868	68
0430A-4	1400	824	1300	765	7600	68
0505A-4	1900	1118	1900	1118	8353	72
0585A-4	1900	1118	1900	1118	9471	72
0650A-4	1900	1118	1900	1118	11200	72
0725A-4	2400	1413	2400	1413	11386	72
0820A-4	2400	1413	2400	1413	13725	72
0880A-4	2620	1542	2620	1542	15300	71
U <sub>n</sub> = 480 V - NEC types						
0124A-4	685	403	585	344	2487	67
0156A-4	700	412	600	353	2497	67
0180A-4	700	412	600	353	3314	67
0240A-4	800	470	700	412	3806	65
0260A-4	800	470	700	412	4942	65
0361A-4	1400	824	1300	765	5868	68
0414A-4	1400	824	1300	765	7600	68
0505A-4	1900	1118	1900	1118	8353	72
0585A-4	1900	1118	1900	1118	9471	72
0650A-4	1900	1118	1900	1118	11200	72
0725A-4	2400	1413	2400	1413	11386	72
0820A-4	2400	1413	2400	1413	13725	72
0880A-4	2620	1542	2620	1542	15300	71

## Terminal and entry data for the power cables

There are two (in frames R6 to R9) or four (in frames R10 and R11) 60 mm (2.36 in) diameter holes in the entry plate for the input power cables and two (in frames R6 to R9) or four (in frames R10 and R11) 60 mm (2.36 in) diameter holes for the motor cables.

### ■ IEC – Standard configuration

Input and motor cable terminal bolt sizes, accepted wire sizes (per three phases) and tightening torques are given below.

Frame size	Input and motor cable connection terminals						PE (grounding) terminals	
	L1, L2, L3			T1/U2, T2/V2, T3/W2				
	Max. wire size mm <sup>2</sup>	Bolt size	Tightening torque N·m	Min. wire size <sup>1)</sup> mm <sup>2</sup>	Max. wire size mm <sup>2</sup>	Tightening torque N·m	Bolt size mm <sup>2</sup>	Tightening torque N·m
R6	3×150	M10	20...40	3×25	3×150	30	M10	30...44
R7	2×(3×240)	M10	20...40	2×(3×95)	2×(3×240)	40	M10	30...44
R8	2×(3×150)	M10	20...40	2×(3×50)	2×(3×150)	40	M10	30...44
R9	2×(3×240)	M12	50...75	2×(3×95)	2×(3×240)	70	M10	30...44
R10	4×(3×150)	M12	50...75	-	4×(3×150)	50...75	M10	30...44
R11	4×(3×240)	M12	50...75	-	4×(3×240)	50...75	M10	30...44

<sup>1)</sup> **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

#### ■ IEC – With option +E205

Input and motor cable terminal bolt sizes, maximum accepted wire sizes (per three phases) and tightening torques are given below.

Frame size	L1, L2, L3, U2, V2, W2			PE (grounding)	
	Max. wire size mm <sup>2</sup>	Bolt size	Tightening torque N·m	Bolt size mm <sup>2</sup>	Tightening torque N·m
R6	3×120	M10	20...40	M10	30...44
R7	3×240	M10	20...40	M10	30...44
R8	2×(3×120)	M10	20...40	M10	30...44
R9	2×(3×240)	M12	50...75	M10	30...44
R10	4×(3×150)	M12	50...75	M10	30...44
R11	4×(3×240)	M12	50...75	M10	30...44

#### ■ US – Standard configuration

Input and motor cable terminal bolt sizes, accepted wire sizes (per three phases) and tightening torques are given below.

Frame size	L1, L2, L3			T1/U2, T2/V2, T3/W2			PE (grounding)	
	Max. wire size AWG	Bolt size	Tightening torque lbf-ft	Min. wire size 1) AWG	Max. wire size AWG	Tightening torque lbf-ft	Bolt size	Tightening torque lbf-ft
R6	3×300 MCM	M10 (3/8")	22.1	3	3×300 MCM	22.1	M10 (3/8")	29.5
R7	3×500 MCM	M10 (3/8")	22.1	3/0	3×500 MCM	22.1	M10 (3/8")	29.5
R8	2×(3×300 MCM)	M10 (3/8")	22.1	2×1/0 / 2×3/0 2)	2×(3×300 MCM)	22.1	M10 (3/8")	29.5
R9	2×(3×500 MCM)	M12 (7/16")	51.6	2×3/0	2×(3×500 MCM)	51.6	M10 (3/8")	29.5
R10	4×(3×300 MCM)	M12 (7/16")	51.6	-	4×(3×300 MCM)	51.6	M10 (3/8")	29.5
R11	4×(3×500 MCM)	M12 (7/16")	51.6	-	4×(3×500 MCM)	51.6	M10 (3/8")	29.5

1) **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

2) -01-246A-4: 2×1/0, -01-293A-4: 2×3/0


### ■ US – With option +E205

Input and motor cable terminal bolt sizes, maximum accepted wire sizes (per three phases) and tightening torques are given below.

Frame size	L1, L2, L3, U2, V2, W2			PE (grounding)	
	Max. wire size AWG	Bolt size	Tightening torque lbf-ft	Bolt size	Tightening torque lbf-ft
R6	3×300 MCM	M10 (3/8 in)	22.1	M10 (3/8 in)	30...44
R7	3×500 MCM	M10 (3/8 in)	22.1	M10 (3/8 in)	30...44
R8	2×(3×300 MCM)	M12 (7/16 in)	51.6	M10 (3/8 in)	30...44
R9	2×(3×500 MCM)	M12 (7/16 in)	51.6	M10 (3/8 in)	30...44
R10	4×(3×300 MCM)	M12 (7/16 in)	51.6	M10 (3/8 in)	30...44
R11	4×(3×500 MCM)	M12 (7/16 in)	51.6	M10 (3/8 in)	30...44


Connection drawings

**Note:** With a combination of bottom and top entry and exit options, look the connection points from the bottom entry and exit and top entry and exit drawings.

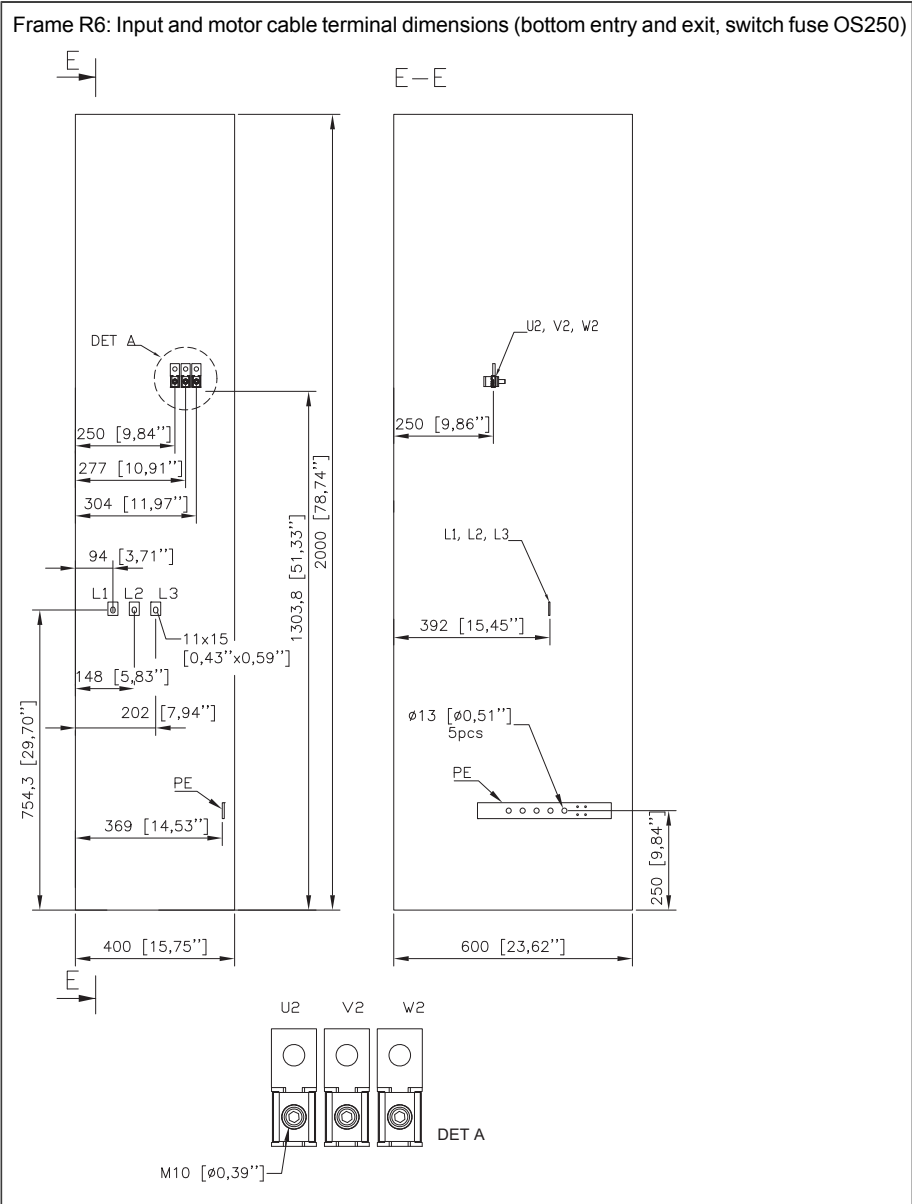





Frame R6: Input and motor cable terminal dimensions (bottom entry and exit, switch fuse OS400)

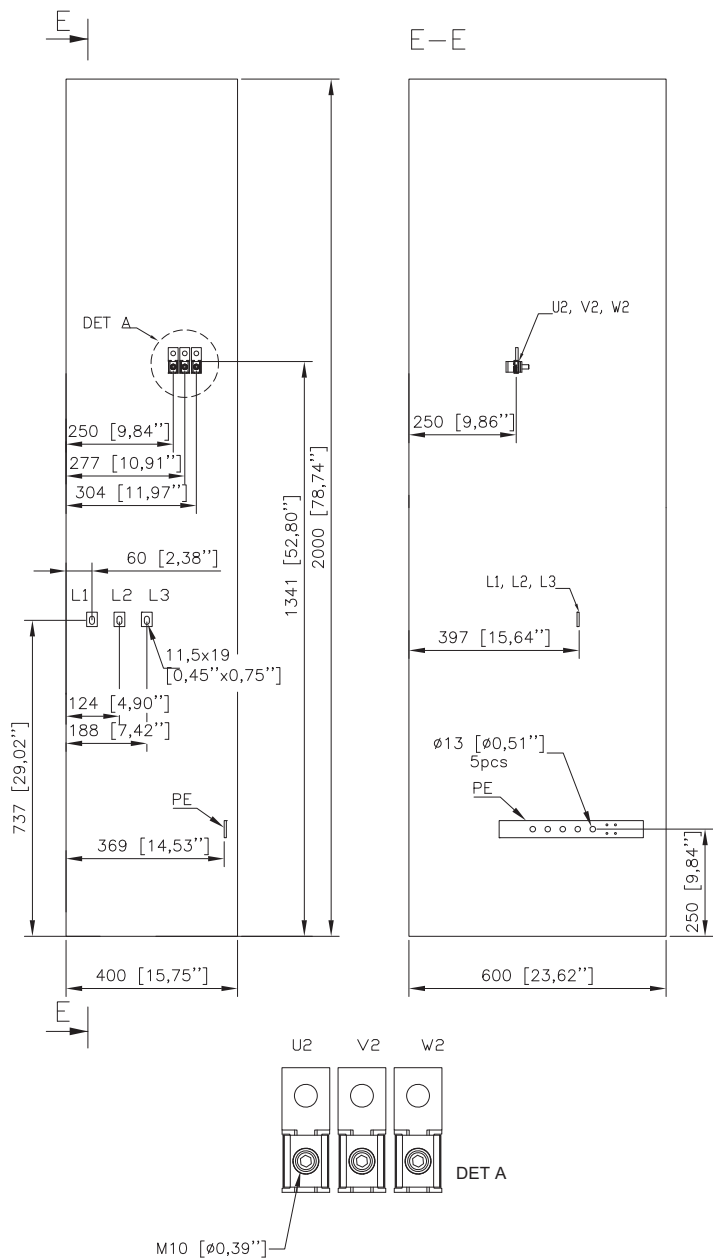


Frame R6: Input and motor cable terminal dimensions (option +F289)

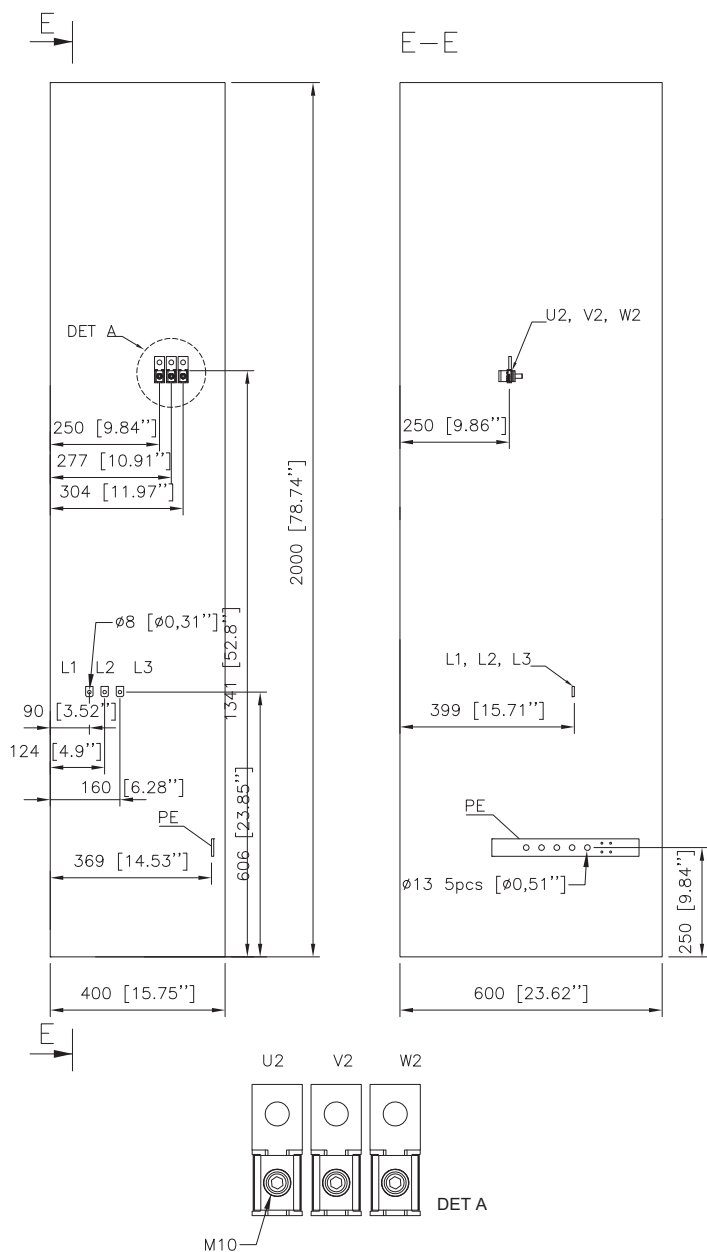

Frames R6 and R7: Input and motor cable terminal dimensions (bottom entry and exit, switch fuse OS250, du/dt filter [option +E205])

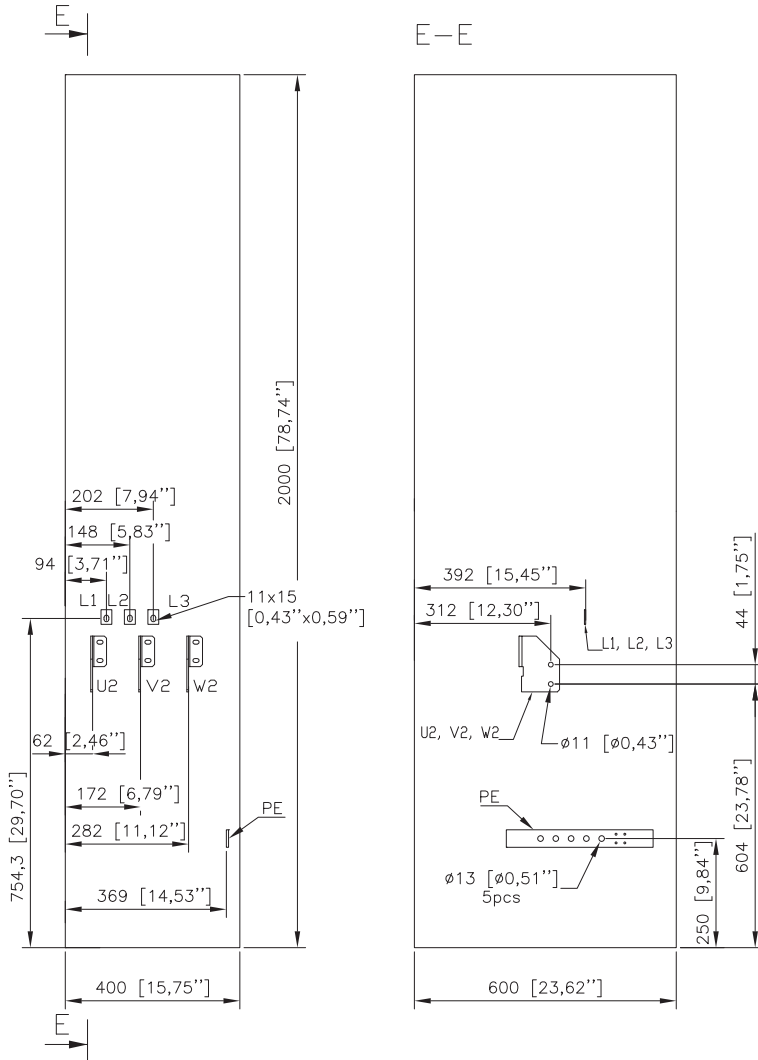


Frames R6 and R7: Input and motor cable terminal dimensions (bottom entry and exit, switch fuse OS400, du/dt filter [option +E205])

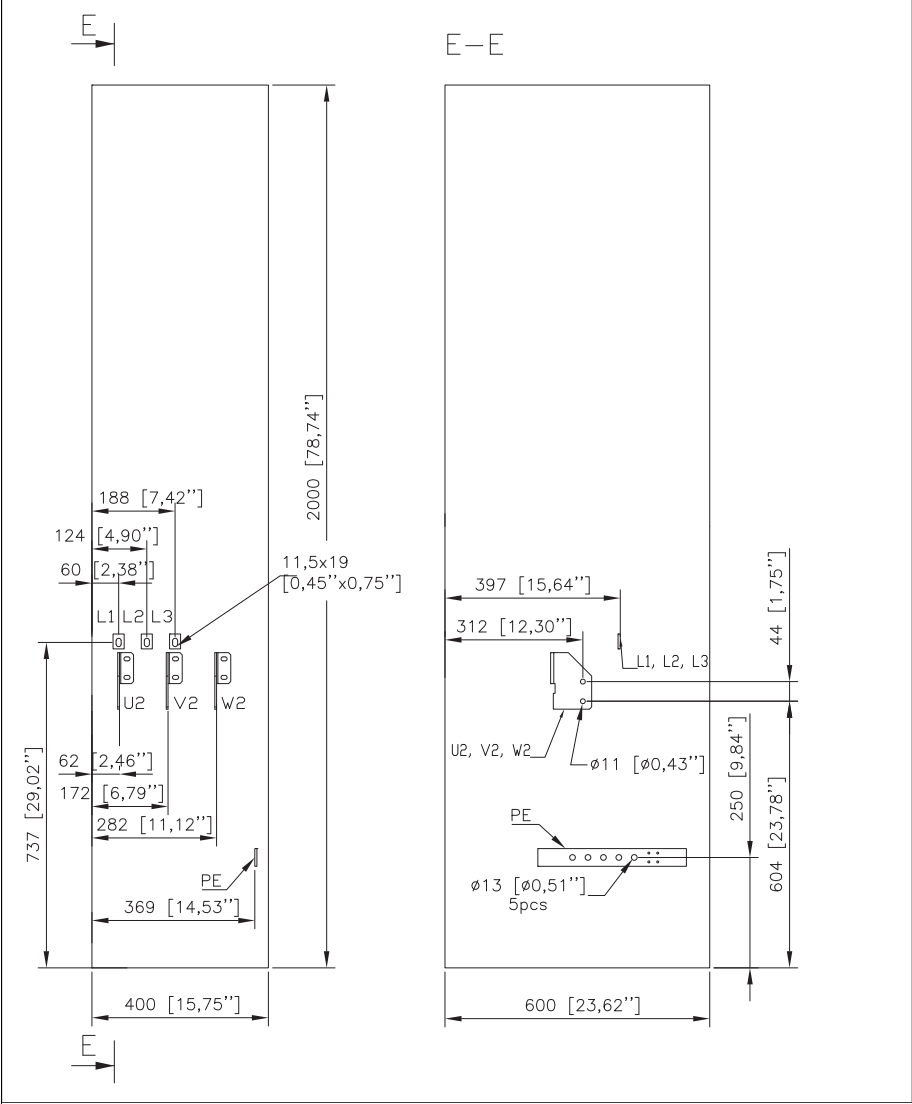





Frame R7: Input and motor cable terminal dimensions (bottom entry and exit, switch fuse OS250)

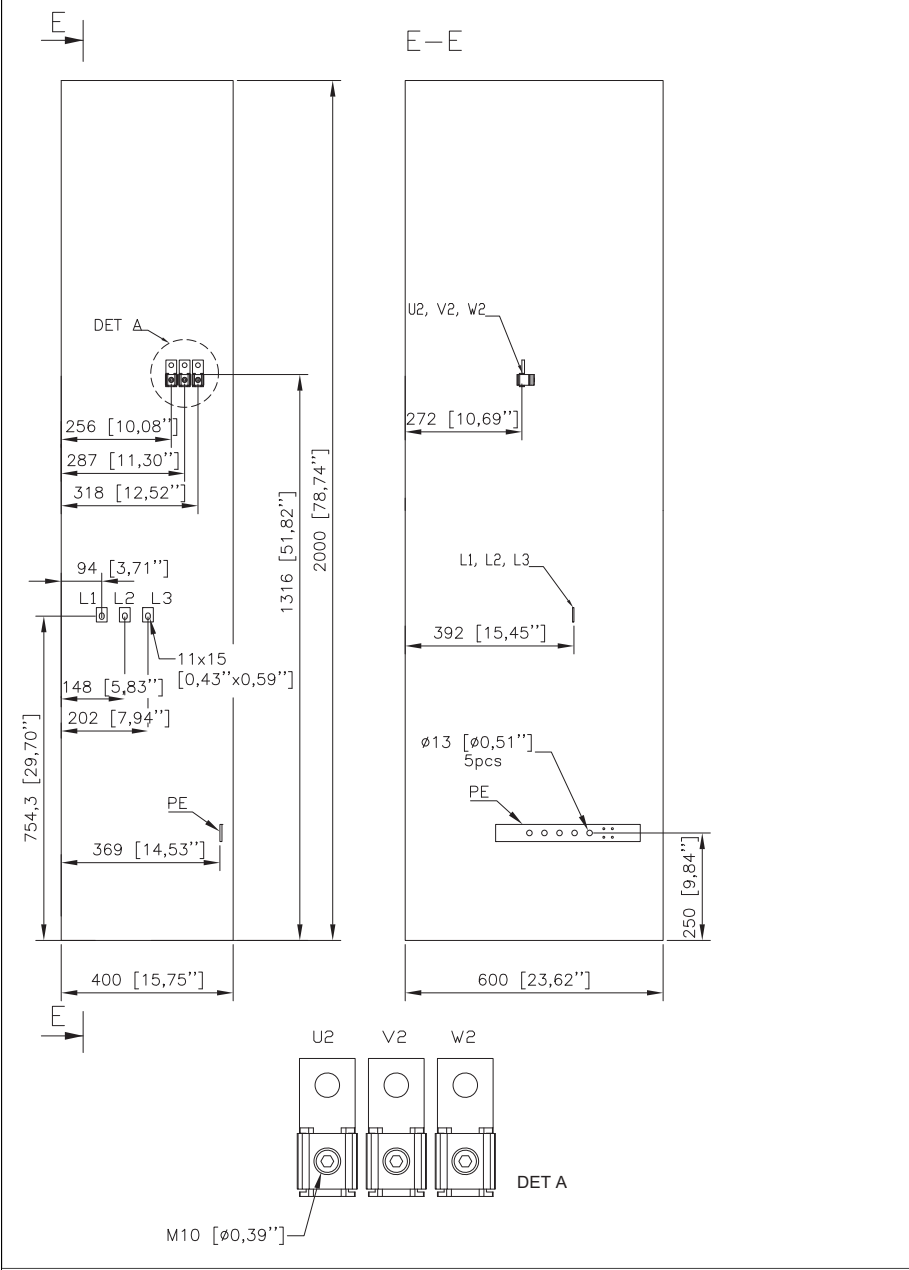


Frame R7: Input and motor cable terminal dimensions (bottom entry and exit, switch fuse OS400)

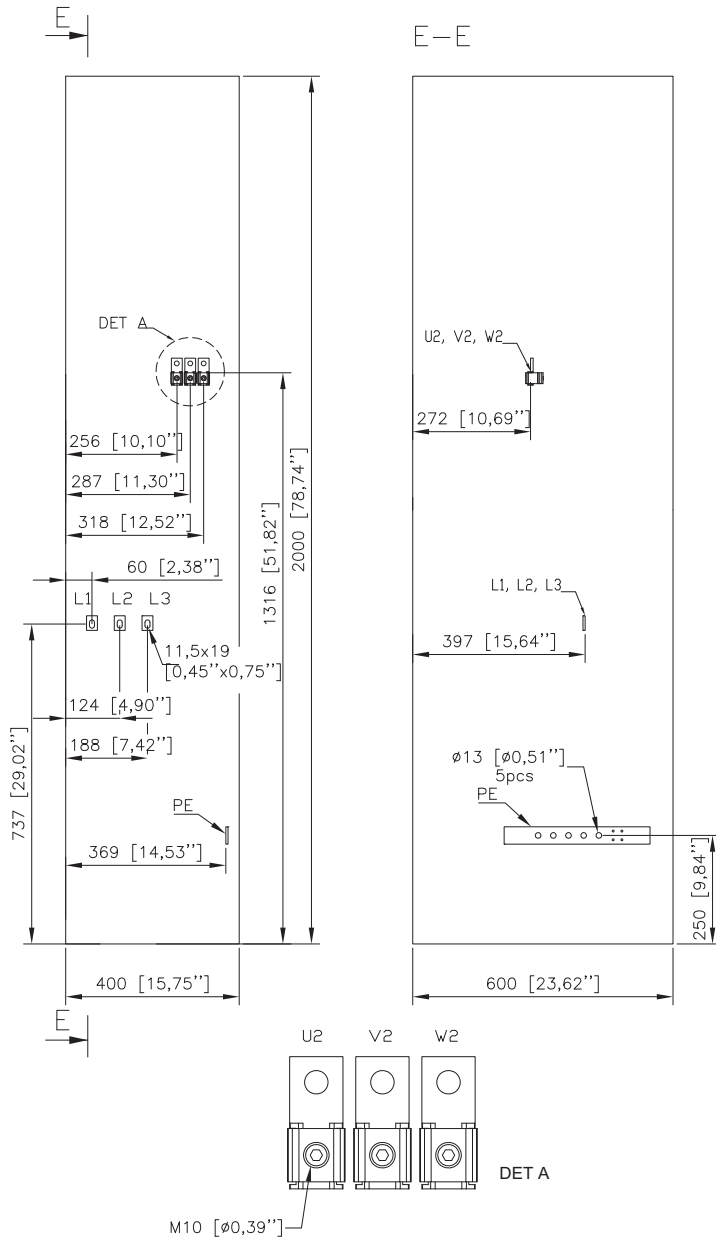

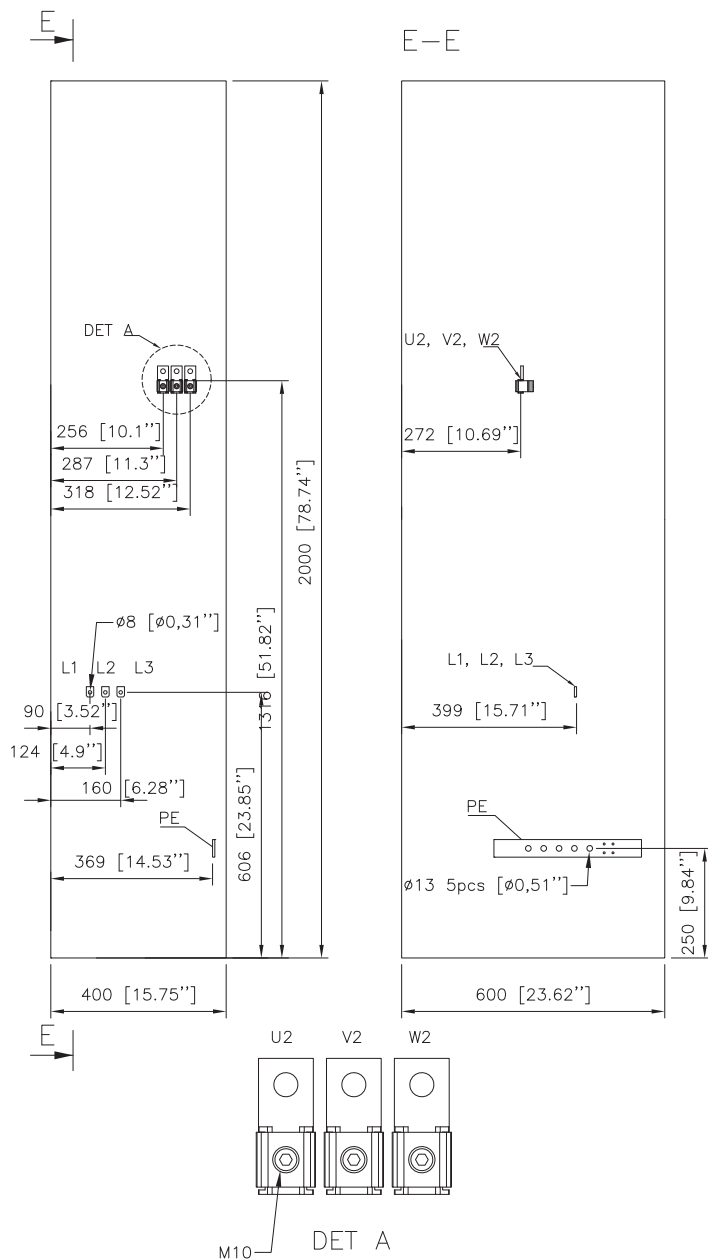





Frames R6 and R7: Input and motor cable terminal dimensions (top entry and exit, options +H351 and +H353)

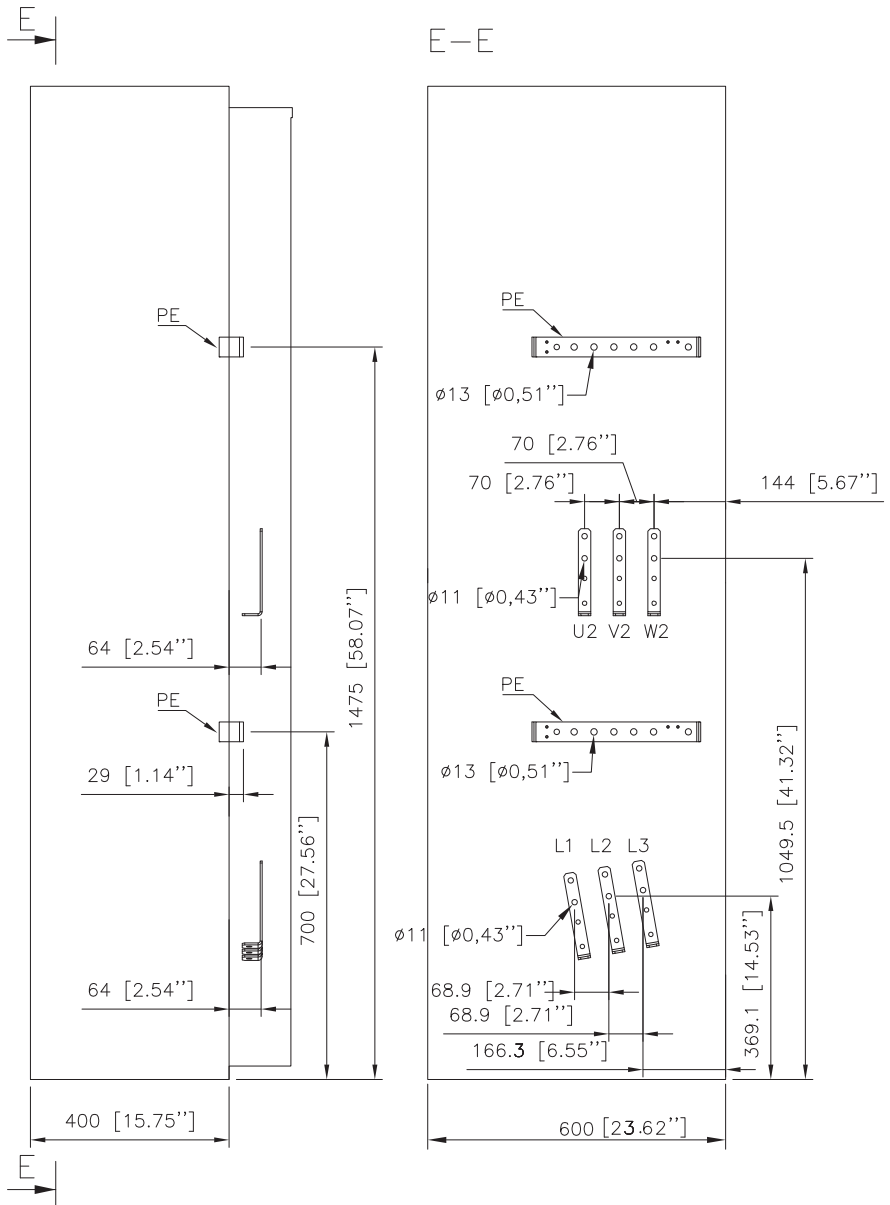


Frame R8: Input and motor cable terminal dimensions (bottom entry and exit, switch-disconnector OT400)

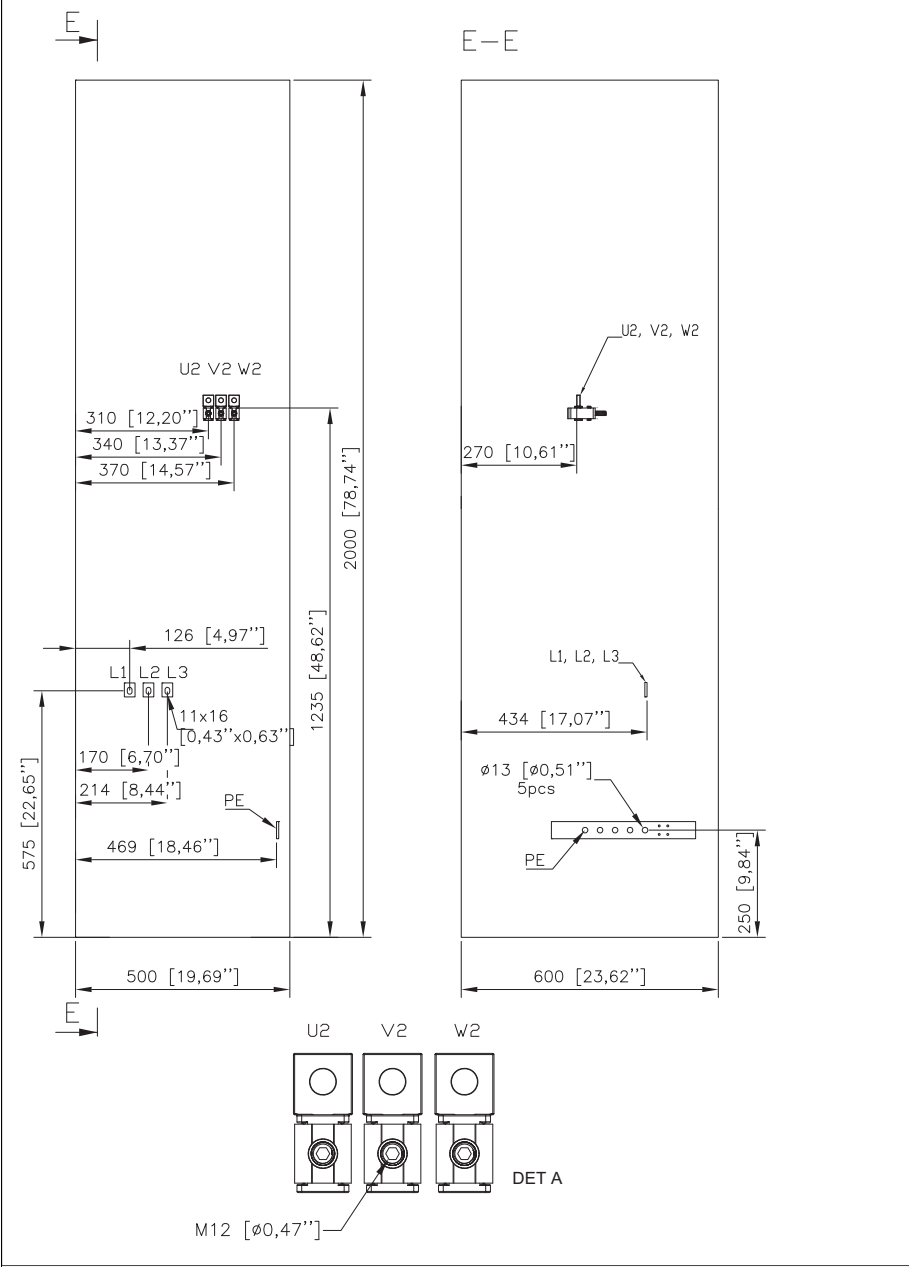


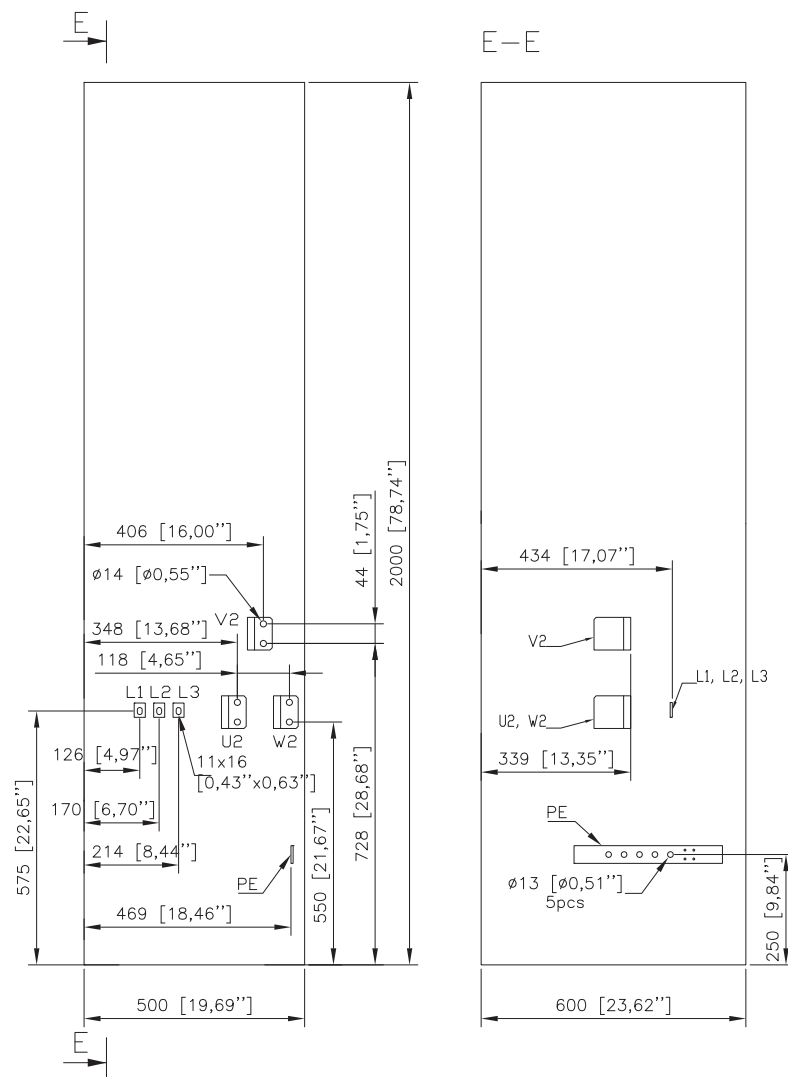


Frame R8: Input and motor cable terminal dimensions (bottom entry and exit, option +F289)

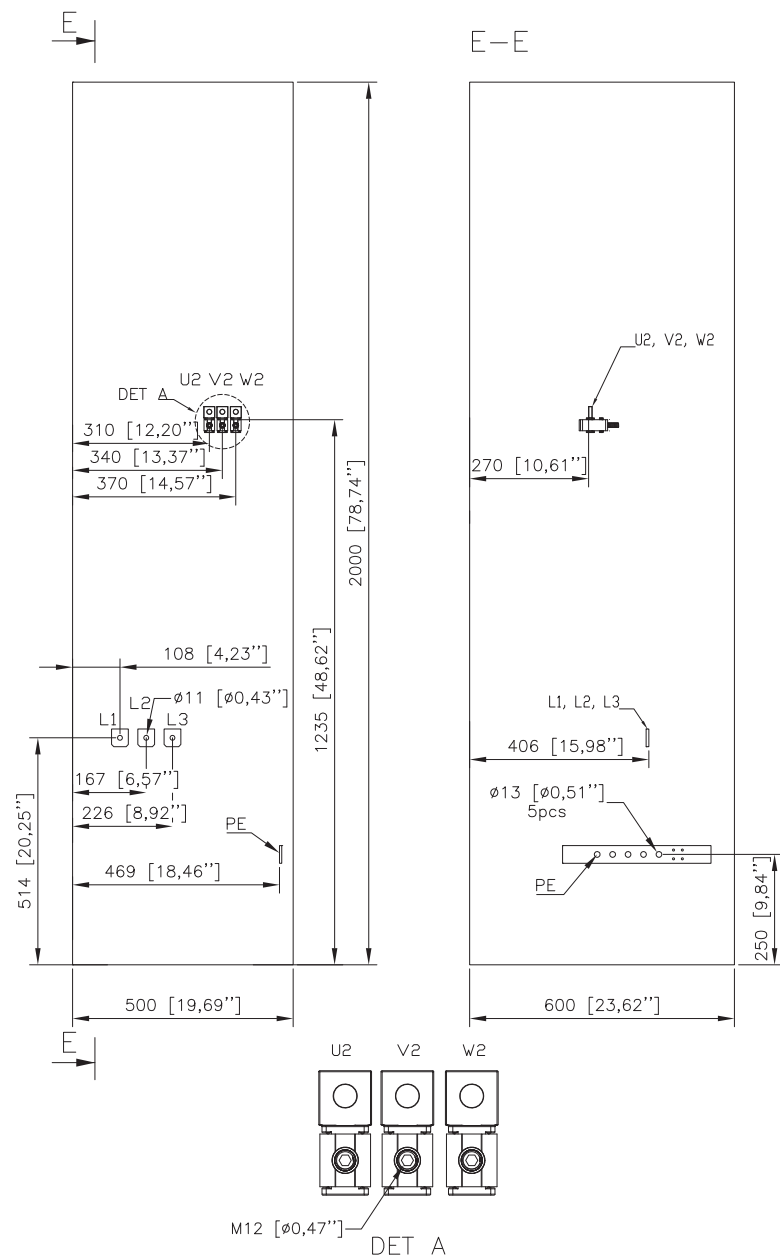


Frame R9: Input and motor cable terminal dimensions (bottom entry and exit, switch-disconnector OT630)

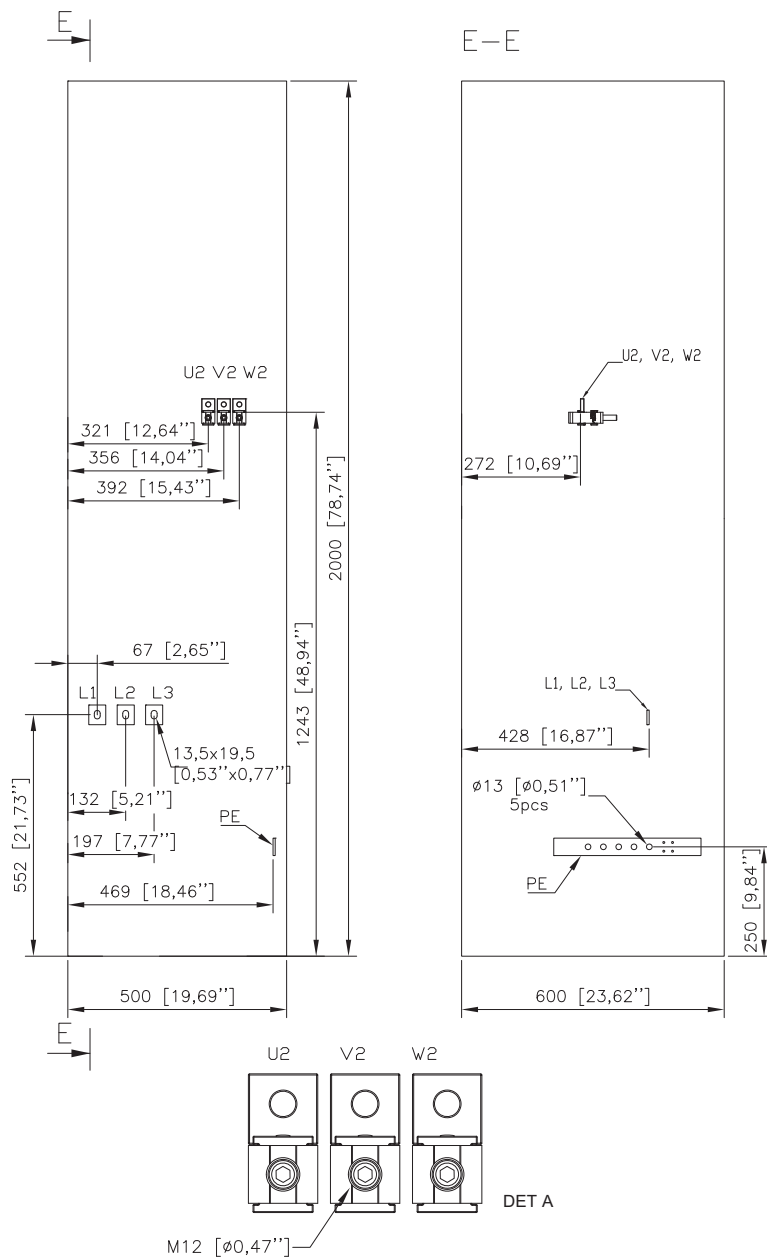


Frame R9: Input and motor cable terminal dimensions (bottom entry and exit, switch-disconnector OT630, du/dt filter [option +E205])

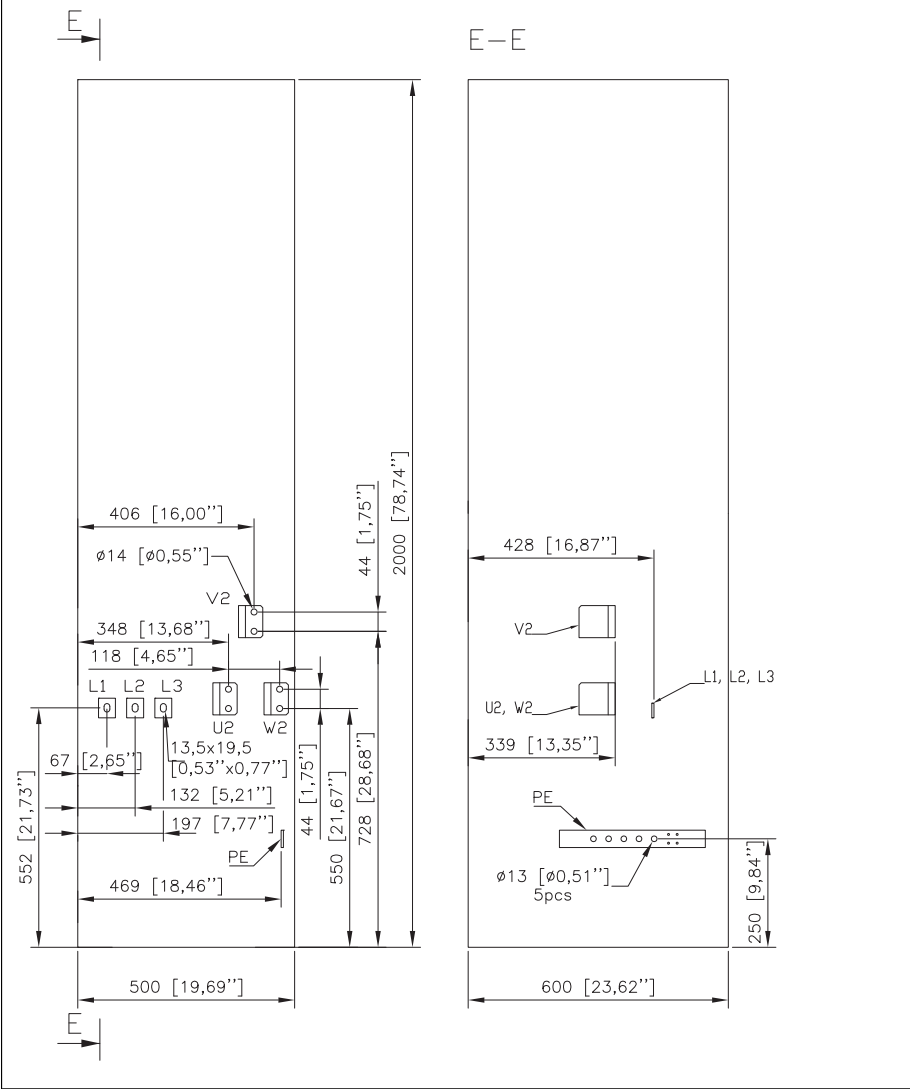

Frames R8 and R9: Input and motor cable terminal dimensions (top entry and exit, options +H351 and +H353)

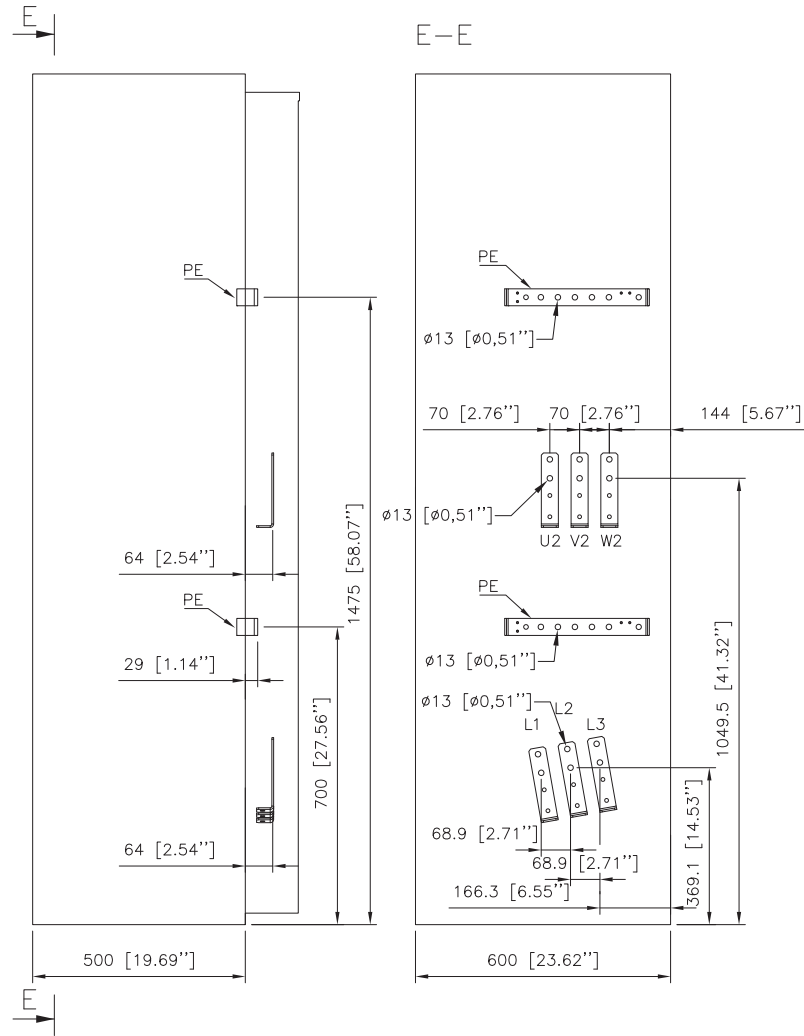


Frames R8 and R9: Input and motor cable terminal dimensions (bottom entry and exit, options +F289 and +E205)

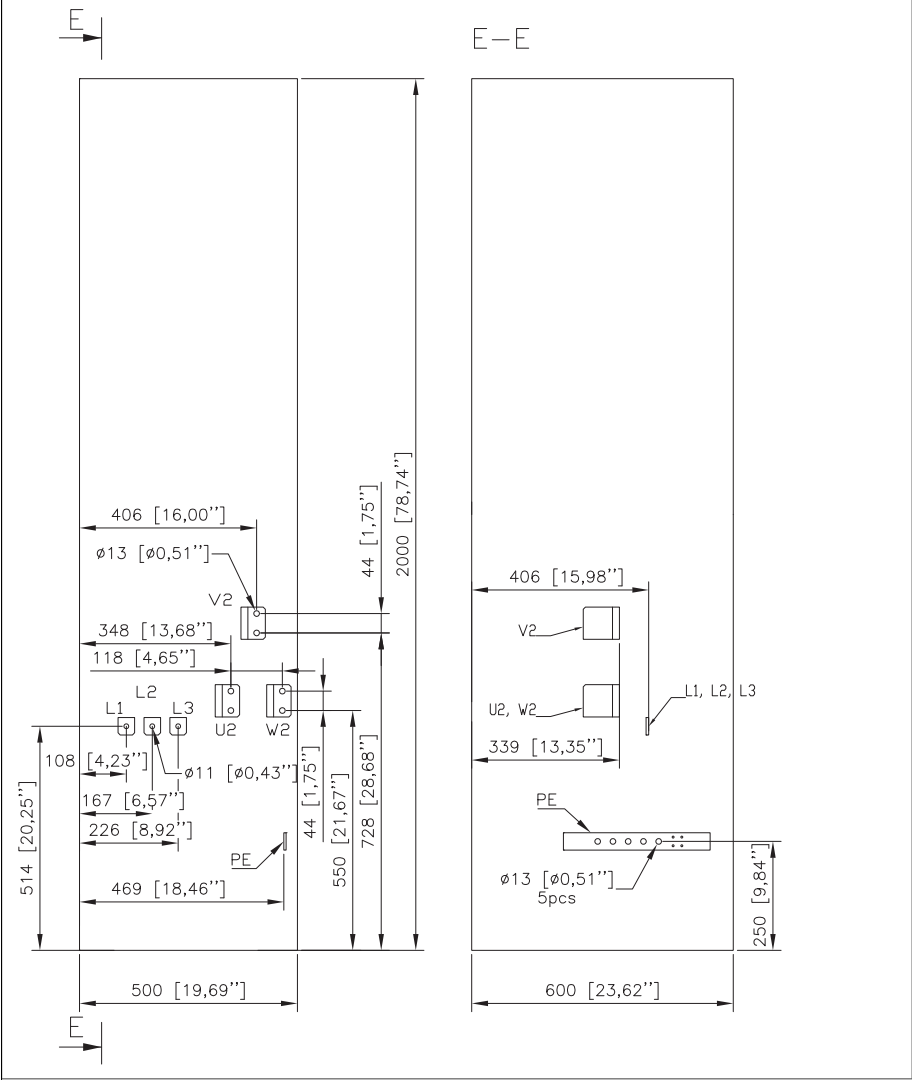





Frame R9: Input and motor cable terminal dimensions (option +F289)

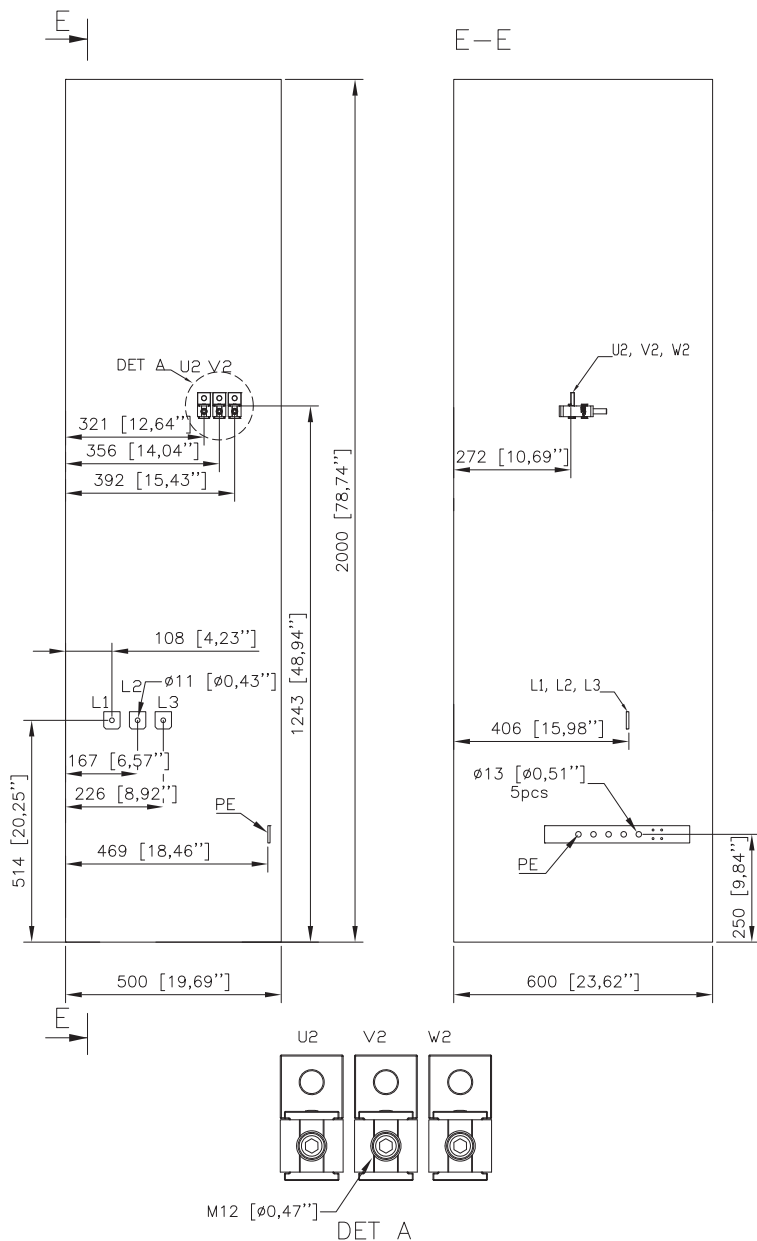


Frame R10: Input and motor cable terminal dimensions (bottom entry and exit)

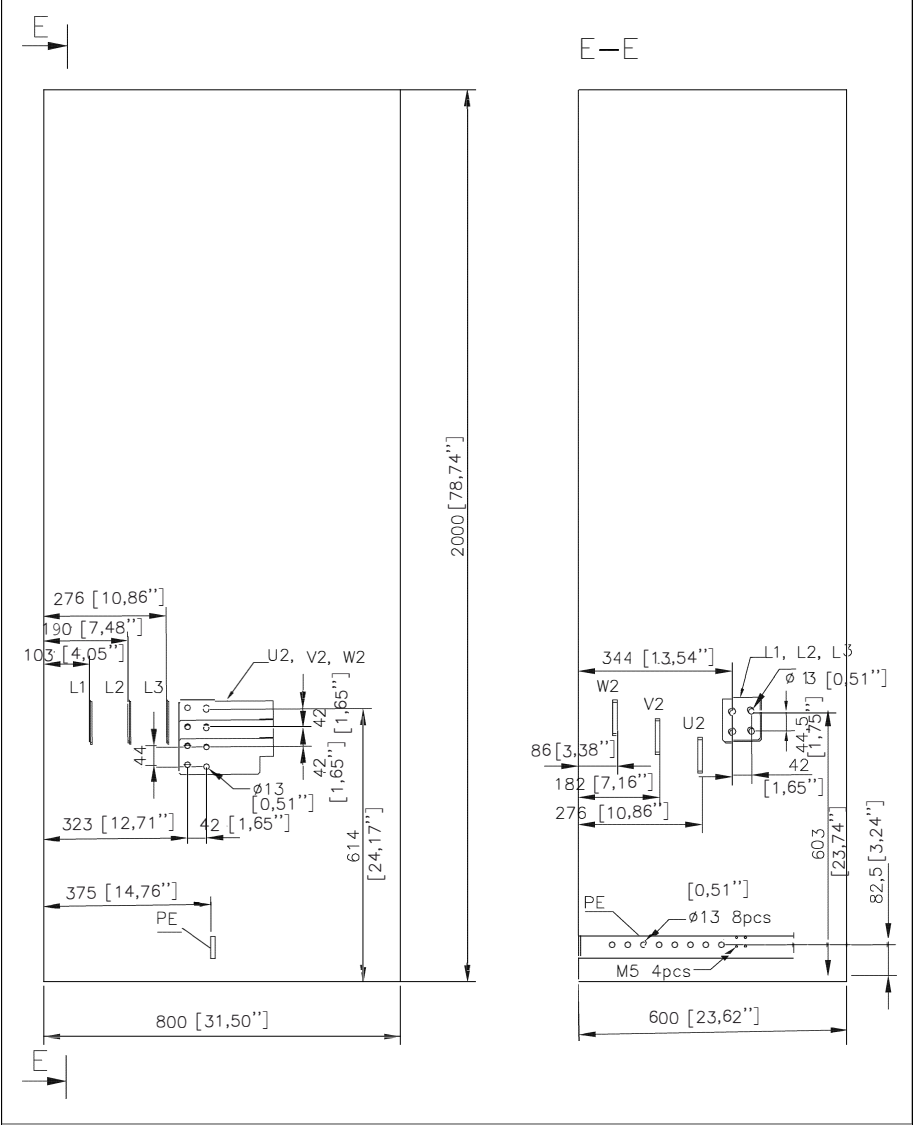


Frame R10: Input and motor cable terminal dimensions (bottom entry and exit, option +E205)

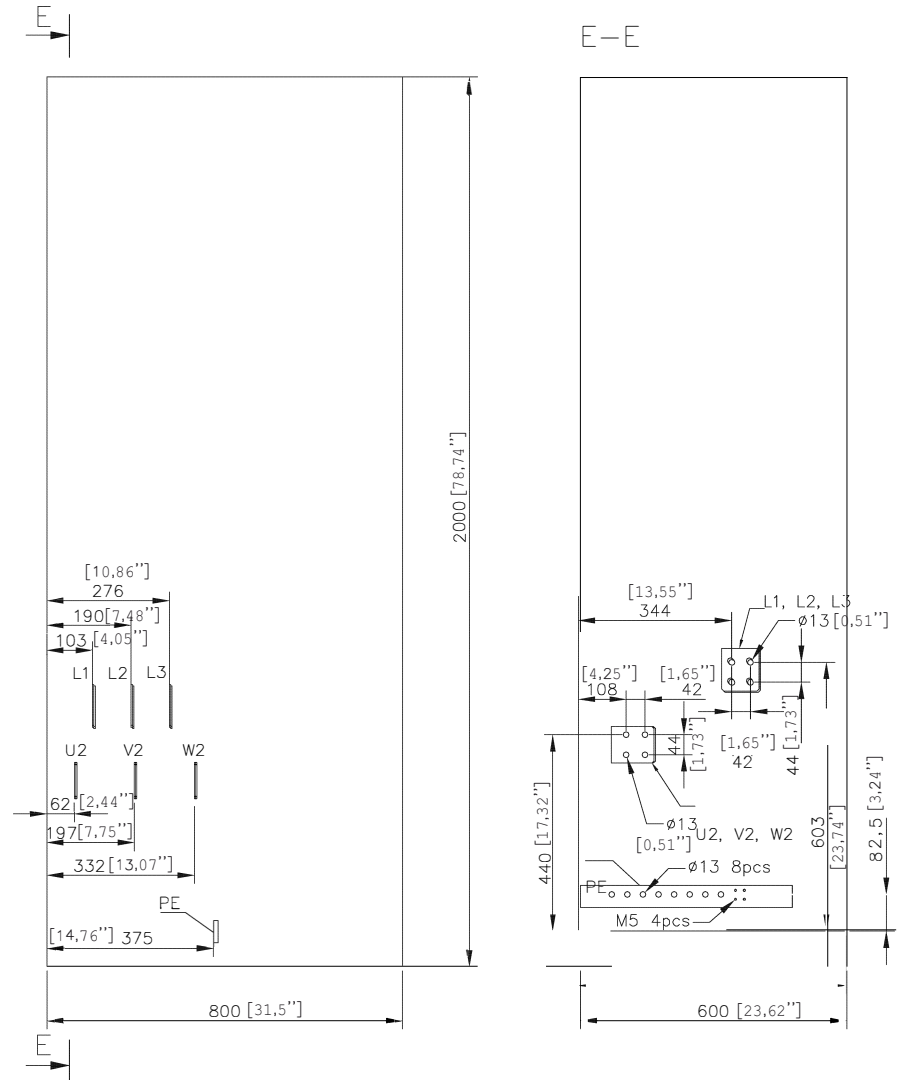


Frame R10: Input and motor cable terminal dimensions (top entry and exit)

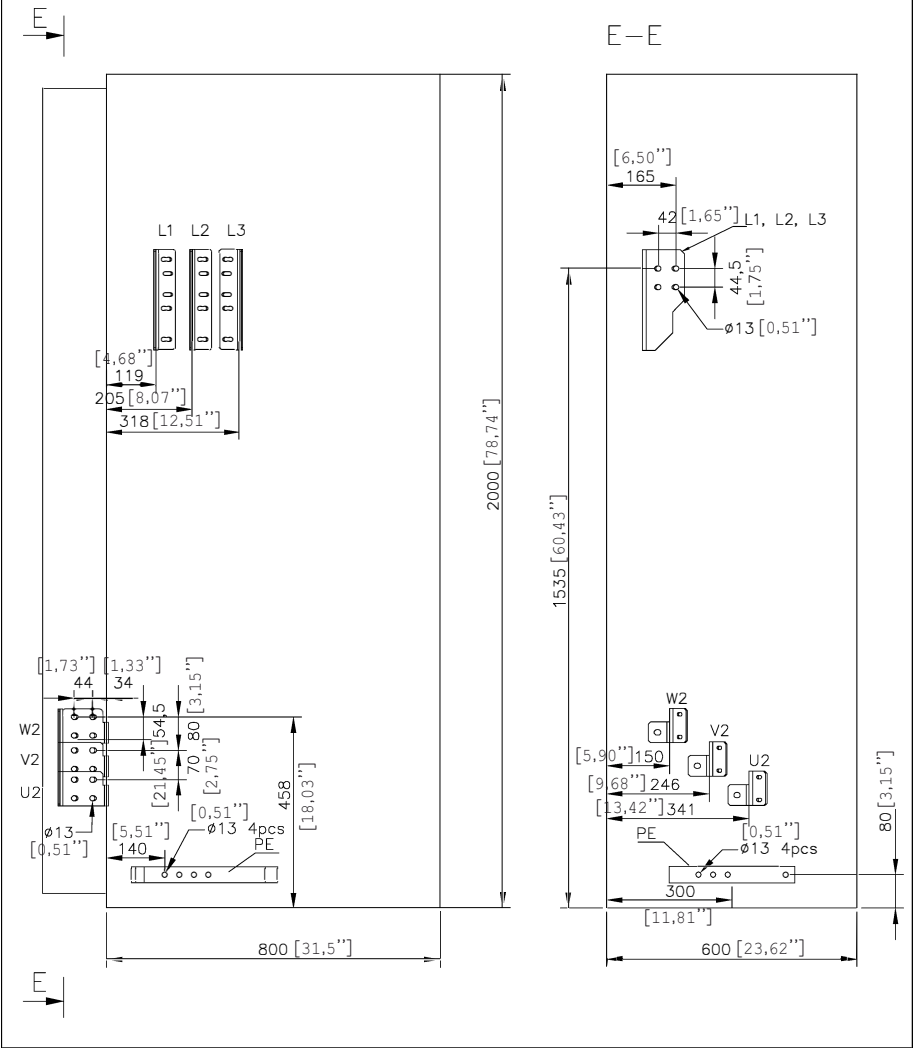


Frame R10: Input and motor cable terminal dimensions (top entry and exit, option +F289)

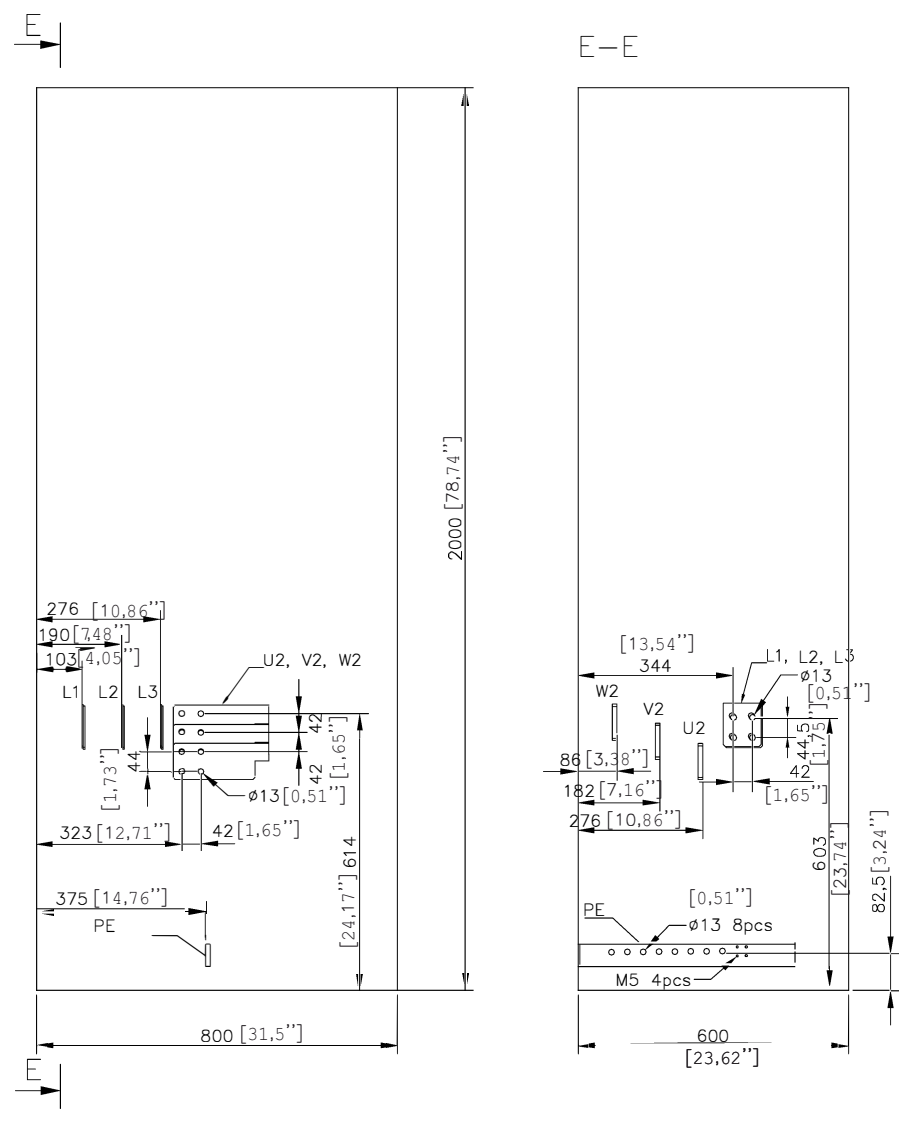



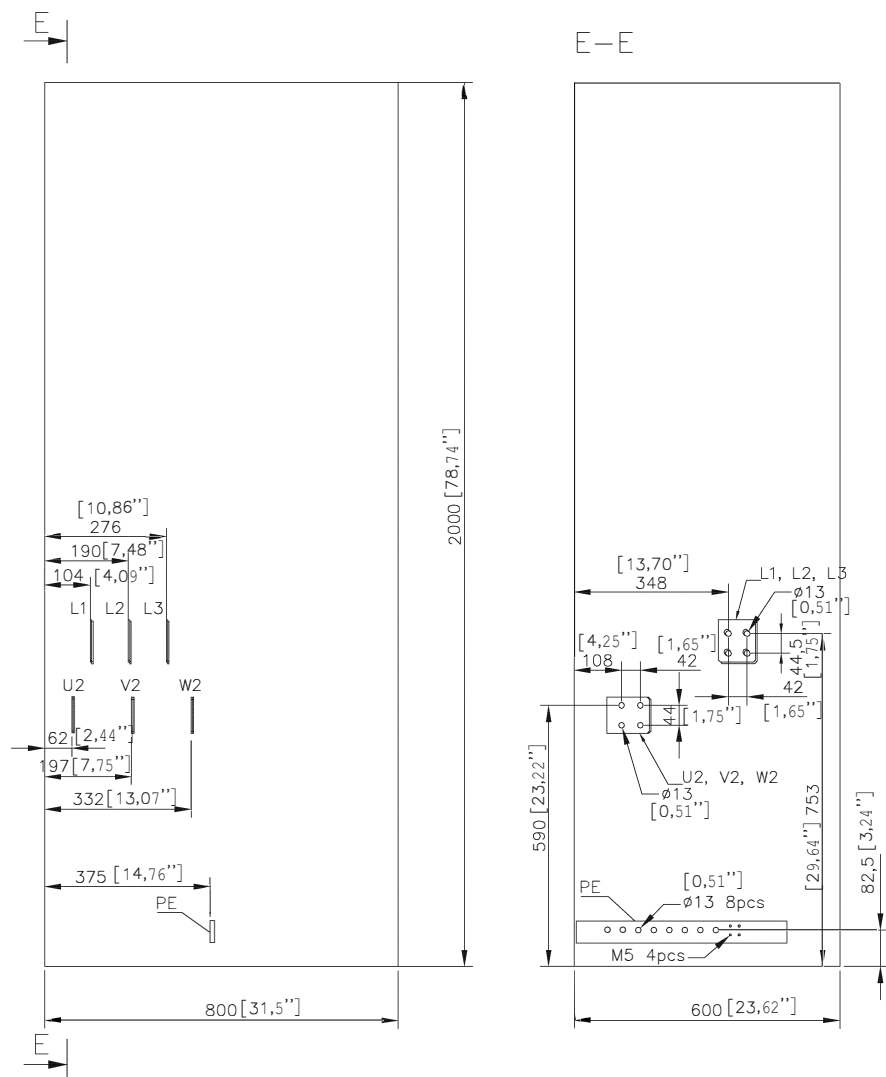


Frame R11: Input and motor cable terminal dimensions (top entry and exit)

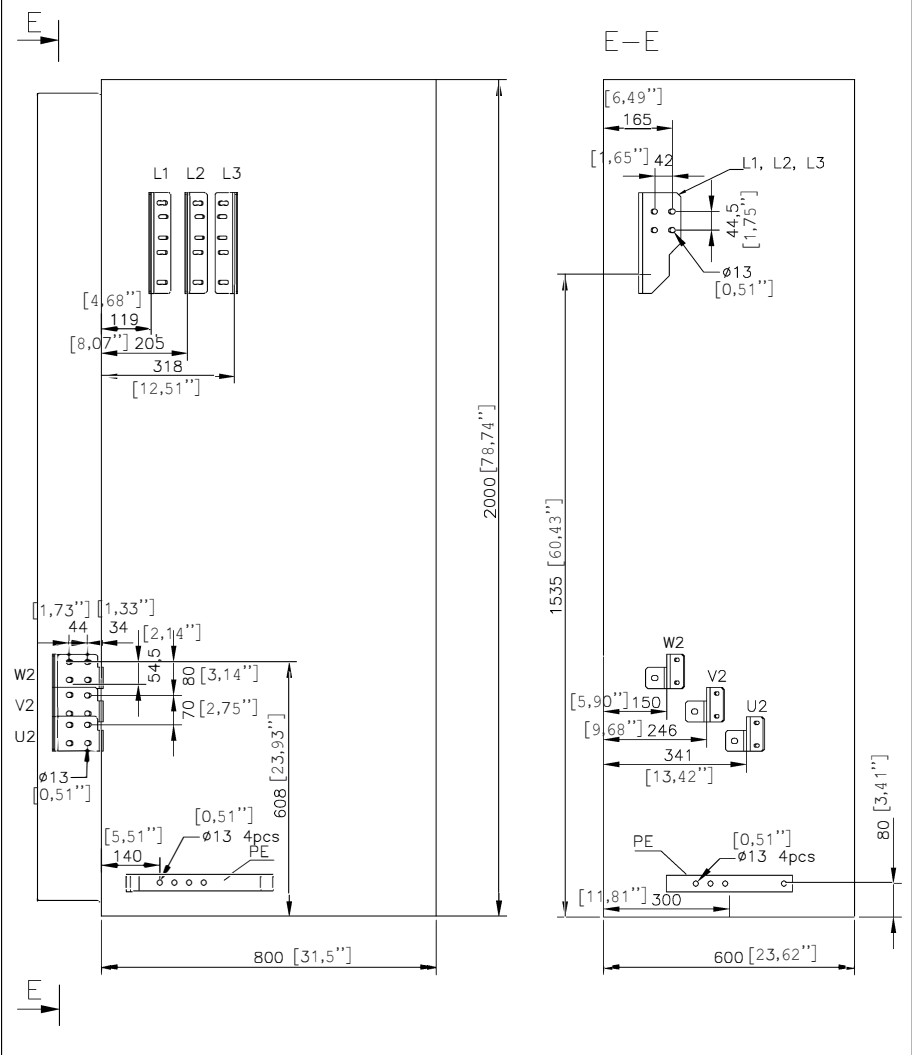



Frame R11: Input and motor cable terminal dimensions (top entry and exit, option +F289)

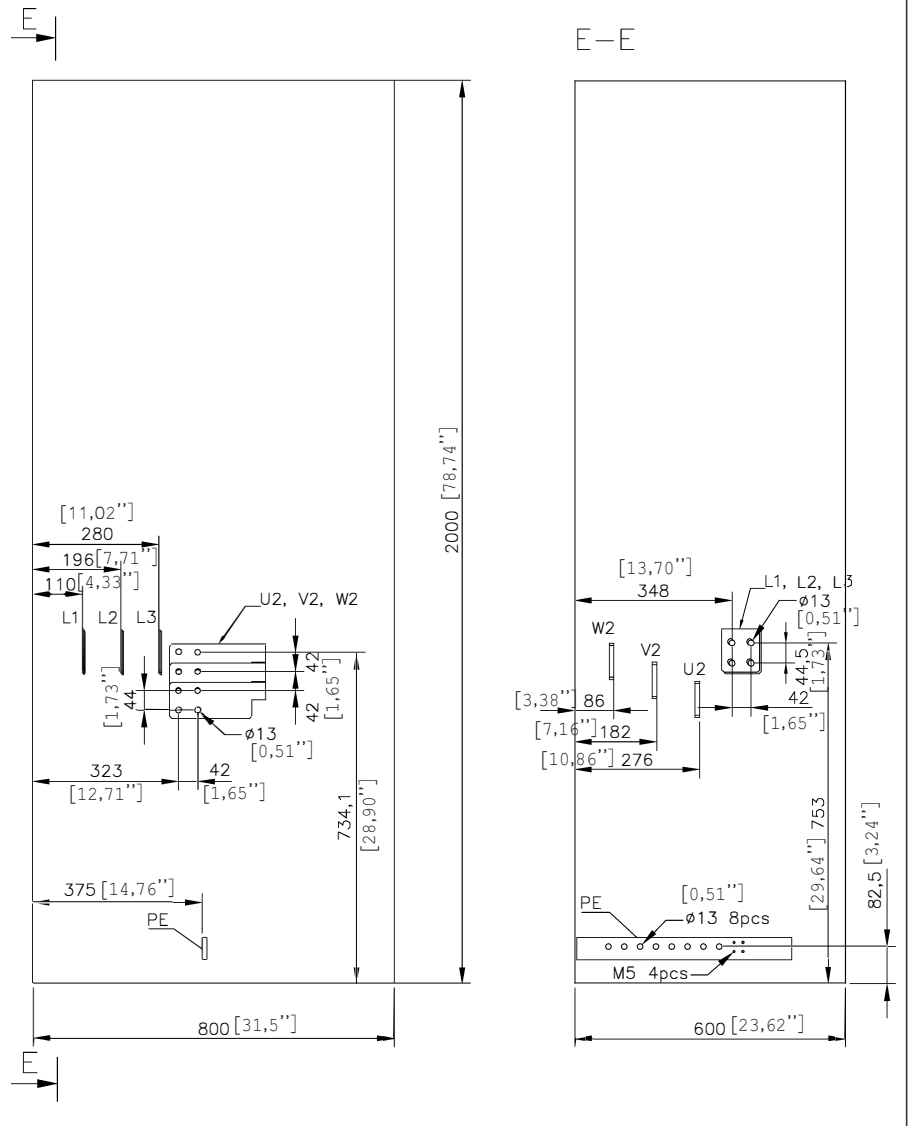

## Terminal and connection data for auxiliary control circuits

Maximum acceptable voltage and current values and wire sizes in terminal blocks are given below.

Terminal block	Maximum acceptable voltage and current values and wire sizes
X250	230V AC / 24V DC, 2A <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X289	230V AC / 24V DC, 2A <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X290	230V AC / 24V DC, 2A <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X300	230V AC, 4A <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X951	24V DC <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X969	24V DC <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X3	24V DC <ul style="list-style-type: none"> <li>• Solid wire 0,14...4 mm<sup>2</sup> (28...12 AWG)</li> <li>• Stranded wire 0,08...2,5 mm<sup>2</sup> (28...14 AWG)</li> </ul>
X504	230V AC / 24V DC, 2A <ul style="list-style-type: none"> <li>• Solid wire 0,2...2,5 mm<sup>2</sup> (24...12 AWG)</li> <li>• Stranded wire with ferrule 0,25...2,5 mm<sup>2</sup> (24...14 AWG)</li> <li>• stranded wire without ferrule 0,2 to 2,5 mm<sup>2</sup> (24 to 12 AWG).</li> </ul> Stripping length: 10 mm (0.5 in).
X601.1	480V AC, 20A <ul style="list-style-type: none"> <li>• Solid wire 0,75...16 mm<sup>2</sup> (18...6 AWG)</li> <li>• Stranded wire 0,75...16 mm<sup>2</sup> (18...6 AWG)</li> </ul>
X601.1	230V AC / 24V DC, 2A <ul style="list-style-type: none"> <li>• Solid wire 0,2...2,5 mm<sup>2</sup> (24...14 AWG)</li> <li>• Stranded wire 0,2...2,5 mm<sup>2</sup> (24...14 AWG)</li> </ul>

## Electrical power network specification

Voltage ( $U_1$ )	ACS580-07-xxxx-4 drives: 380...480 VAC 3-phase $\pm 10\%$ . This is indicated in the type designation label as typical input voltage levels 3~400/480 V AC.
Network type	TN (grounded) and IT (ungrounded) systems
Short-circuit withstand strength $I_{cc}$ (IEC/EN 61439-1)	Maximum allowable prospective short-circuit current is 65 kA when the input cable is protected with gG type fuses (IEC 60269) having maximum current rating as follows: <ul style="list-style-type: none"> <li>• 400 A for frames R6 to R8</li> <li>• 630 A for frame R9</li> <li>• 1000 A for R10</li> <li>• 1250 A for R11</li> </ul>
Short-circuit current protection (UL 508A)	The drive is suitable for use on a circuit capable of delivering not more than 100,000 rms symmetrical amperes at 480 V maximum when the input cable is protected with class T fuses.
Frequency ( $f_1$ )	50/60 Hz. Variation $\pm 5\%$ of nominal frequency.
Imbalance	Max. $\pm 3\%$ of nominal phase to phase input voltage
Fundamental power factor ( $\cos \phi_{i1}$ )	0.98 (at nominal load)

## Motor connection data

Motor types	Asynchronous AC induction motors, permanent magnet synchronous motors
Voltage ( $U_2$ )	0 to $U_1$ , 3-phase symmetrical. This is indicated in the type designation label as typical output voltage level 3 ~ 0... $U_1$ . $U_{\max}$ at the field weakening point.
Frequency ( $f_2$ )	0...500 Hz For drives with du/dt filter: 500 Hz
Current	See section <a href="#">Ratings (page 195)</a> .
Switching frequency	3 kHz (typically)
Maximum recommended motor cable length	300 m (984 ft). Longer cables cause a motor voltage decrease which limits the available motor power. The decrease depends on the motor cable length and characteristics. Note that a sine filter (optional) at the drive output also causes a voltage decrease. Contact ABB for more information. <b>Note:</b> With motor cables longer than 100 m (328 ft), the EMC Directive requirements may not be fulfilled.

## Control unit connection data

See chapter [Control unit \(page 139\)](#).

## Efficiency

Approximately 98% at nominal power level

## Protection classes

Degrees of protection (IEC/EN 60529)	IP21 (standard), IP42 (option +B054), IP54 (option +B055)
Enclosure types (UL50)	UL Type 1 (standard), UL Type 1 (option +B054), UL Type 12 (option +B055). For indoor use only.
Overvoltage category (IEC/EN 60664-1)	III, except for auxiliary power connections (fan, control, heating, lighting etc) which are category II.
Protective class (IEC/EN 61800-5-1)	I

## Ambient conditions

Environmental limits for the drive are given below. The drive is to be used in a heated, indoor, controlled environment.

	<b>Operation</b> installed for stationary use	<b>Storage</b> in the protective package	<b>Transportation</b> in the protective package
<b>Installation site altitude</b>	0 to 2000 m (6561 ft) above sea level. For altitudes over 2000 m, contact ABB. Output derated above 1000 m (3281 ft). See section <a href="#">Output derating</a>	-	-
<b>Air temperature</b>	-0 to +50 °C (32 to 122 °F). No condensation allowed. Output derated in the range +40 ... +50 °C (+104 ... +122 °F). See section <a href="#">Output derating</a>	-40 to +70 °C (-40 to +158 °F)	-40 to +70 °C (-40 to +158 °F)
<b>Relative humidity</b>	5 to 95%	Max. 95%	Max. 95%
	No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.		
<b>Contamination</b> (IEC 60721-3-x)	IEC/EN 60721-3-3:2002	IEC 60721-3-1:1997	IEC 60721-3-2:1997
Chemical gases	Class 3C2	Class 1C2	Class 2C2
Solid particles	Class 3S2. No conductive dust allowed.	Class 1S3. (packing must support this, otherwise 1S2)	Class 2S2
<b>Atmospheric pressure</b>	70 to 106 kPa 0.7 to 1.05 atmospheres	70 to 106 kPa 0.7 to 1.05 atmospheres	60 to 106 kPa 0.6 to 1.05 atmospheres
<b>Vibration</b> IEC 61800-5-1 IEC 60068-2-6:2007, EN 60068-2-6:2008 Environmental testing Part 2: Tests –Test Fc: Vibration (sinusoidal)	IEC/EN 60721-3-3:2002 10...57 Hz: max. 0.075 mm amplitude 57...150 Hz: 1 g	IEC/EN 60721-3-1:1997 10...57 Hz: max. 0.075 mm amplitude 57...150 Hz: 1 g	IEC/EN 60721-3-2:1997 2...9 Hz: max. 3.5 mm amplitude 9...20 Hz: 10 m/s <sup>2</sup> (32.8 ft/s <sup>2</sup> )

<b>Shock</b> IEC 60068-2-27:2008, EN 60068-2-27:2009 Environmental testing - Part 2-27: Tests - Test Ea and guidance: Shock	Not allowed	With packing max. 100 m/s2 (330 ft./s2), 11 ms	With packing max. 100 m/s2 (330 ft./s2), 11 ms
---	-------------	--	--

**Auxiliary circuit power consumption**

Cabinet heater (option +G300)	100 W
----------------------------------	-------

**Materials**

■ **Cabinet**

Enclosure	Zinc coated steel sheet
Busbars for user power connections	Tin-plated copper
Fire safety of materials (IEC 60332-1)	Insulating materials and non-metallic items: mostly self-extinctive

■ **Finish**

The cabinet has polyester thermosetting powder coating on visible surfaces, color RAL 7035 and RAL 9017.

■ **Package**

**Vertical package**

For frames R10 and R11:

Cabinets are attached to the pallet with screws and braced at the top to the package walls against swaying inside the package. Package elements are attached to each other with screws.

Standard package	Timber, polyethylene sheet (thickness 0.15 mm), stretch film (thickness 0.023 mm), PP tape, PET strap, sheet metal (steel). For land and air transport when planned storage time is less than 2 months, or, when storage can be arranged in clean and dry conditions, less than 6 months. Can be used when product will not be exposed to corrosive atmosphere during transport or storage.
------------------	---

Seaworthy package (option +P912)	Timber, plywood, VCI sheet film (PE, thickness 0.10 mm), VCI stretch film (PE, thickness 0.04 mm), VCI emitter bags, PP tape, PET strap, sheet metal (steel). For sea transport with or without containerization. For long storage periods in environments where roofed and humidity-controlled storage cannot be arranged.
Container package (option +P929)	Timber, VCI sheet film (PE, thickness 0.10 mm), VCI stretch film (PE, thickness 0.04 mm), VCI emitter bags, PP tape, PET strap, sheet metal (steel). For sea transport in containers. Recommended for land and air transport when storage time prior to installation exceeds 6 months or storage is arranged in partially weather-protected conditions.

## Horizontal package

For frames R6...R9:

Standard package	Timber pallet with plywood box or timber pallet with corrugated board hood and PET straps. For land and air transport when planned storage time is less than 2 months or when storage can be arranged in clean and dry conditions less than 6 months Two packages can be stacked and transported horizontally.
Seaworthy package (option +P912)	Plywood, wet strength heavy duty cardboard (or plywood with special request), VCI sheet film (PE, thickness 0.10 mm), VCI stretch film (PE, thickness 0.04 mm), VCI emitter bags, PP tape, PET strap, sheet metal (steel) For sea transport in containers For long storage periods in environments where roofed and humidity-controlled storage cannot be arranged. Two packages can be stacked and transported horizontally.

## Package dimensions and weights for drives without empty cubicles (without options +C196 ... +C201)

Frame size	Height	Width	Depth	Standard/Option	Material	Container type
	mm	mm	mm			
R6...R9	900	820	2520	Standard	Cardboard	20DC <sup>2</sup>
				+P912, +P929	Plywood	20DC <sup>3</sup>

<sup>2</sup> All containers are ok, this is the most common.

<sup>3</sup> All containers are ok, this is the most common.

Frame size	Height	Width	Depth	Stand-ard/Option	Material	Container type
	mm	mm	mm			
R10, R11	2550	1150	1100	Standard	Plastic and wood	At least 40HC <sup>4</sup>
R10, R11	2550	1430	1100	+P912, +P929	Plywood	At least 40HC <sup>5</sup> Plywood over the normal pack-aging.

Frame size	Height	Width	Depth	Stand-ard/Option	Material	Container type
	in	in	in			
R6...R9	35.43	32.28	99.21	Standard	Cardboard	20DC <sup>6</sup>
				+P912, +P929	Plywood	20DC <sup>7</sup>
R10, R11	100.39	45.27	43.30	Standard	Plastic and wood	At least 40HC <sup>8</sup>
R10, R11	100.39	56.30	43.30	+P912, +P929	Plywood	At least 40HC <sup>9</sup> Plywood over the normal pack-aging.

See also section [Package \(page 240\)](#).

■ **Package weights**

Frame size	Standard		+P912, +P929	
	kg	lb	kg	lb
R6	210	463	210	463
R7	220	485	220	485

- 4 Smaller containers do not have sufficient height
- 5 Smaller containers do not have sufficient height
- 6 All containers are ok, this is the most common.
- 7 All containers are ok, this is the most common.
- 8 Smaller containers do not have sufficient height
- 9 Smaller containers do not have sufficient height






Frame size	Standard		+P912, +P929	
	kg	lb	kg	lb
R8	255	562	255	562
R9	275	606	275	606
R10	410	904	440	970
R11	410	904	440	970

## Applicable standards

The drive complies with the standards below. The compliance with the European Low Voltage Directive is verified according to standard EN 61800-5-1.

EN 61800-5-1:2007	<i>Adjustable speed electrical power drive systems. Part 5-1: Safety requirements – electrical, thermal and energy</i>
IEC 60146-1-1:2009 EN 60146-1-1:2010	<i>Semiconductor converters – General requirements and line commutated converters – Part 1-1: Specification of basic requirements</i>
IEC 60204-1:2005 +A1:2008 EN 60204-1:2006 +AC:2010	<i>Safety of machinery. Electrical equipment of machines. Part 1: General requirements.</i> Provisions for compliance: The final assembler of the machine is responsible for installing emergency-stop device.
IEC 60529:1989 EN 60529:1991	<i>Degrees of protection provided by enclosures (IP code)</i>
IEC/EN 60664-1:2007	<i>Insulation coordination for equipment within low-voltage systems. Part 1: Principles, requirements and tests</i>
IEC/EN 61439-1:2011	<i>Low-voltage switchgear and control gear assemblies -- Part 1: General rules</i>
UL 50:2015	<i>Enclosures for Electrical Equipment, Non-Environmental Considerations, 13th edition</i>
UL 508C: 2016	<i>Standard for Safety, Power Conversion Equipment, fourth edition</i>
CSA C22.2 No. 14-13: 2013	<i>Industrial control equipment</i>
CSA 22.2 No. 274-13: 2013	<i>Adjustable speed drives</i>
IEC 61800-3:2004/A1:2011 EN 61800-3/A1:2012	<i>Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods</i>

## Markings

	<p>CE mark Product complies with the applicable European Union legislation. For fulfilling the EMC requirements, see the additional information concerning the drive EMC compliance (IEC/EN 61800-3).</p>
	<p>TÜV Safety Approved mark (functional safety) Product contains Safe Torque Off and possibly other (optional) safety functions which are certified by TÜV according to the relevant functional safety standards. Applicable to drives and inverters; not applicable to supply, brake or DC/DC converter units or modules.</p>
	<p>UL Listed mark for USA and Canada Product has been tested and evaluated against the relevant North American standards by the Underwriters Laboratories. Valid with rated voltages up to 600 V.</p>
	<p>RCM mark Product complies with Australian and New Zealand requirements specific to EMC, telecommunications and electrical safety. For fulfilling the EMC requirements, see the additional information concerning the drive EMC compliance (IEC/EN 61800-3).</p>
	<p>EAC (Eurasian Conformity) mark Product complies with the technical regulations of the Eurasian Customs Union. EAC mark is required in Russia, Belarus and Kazakhstan.</p>
	<p>Electronic Information Products (EIP) green mark The product complies with <i>the People's Republic of China Electronic Industry Standard</i> (SJ/T 11364-2014). The product does not contain toxic and hazardous substances or elements above the maximum concentration values, and it is an environmentally-friendly product which can be recycled.</p>
	<p>WEEE mark At the end of life the product should enter the recycling system at an appropriate collection point and not placed in the normal waste stream.</p>

## CE marking

A CE mark is attached to the drive to verify that the drive complies with the provisions of the European Low Voltage and EMC Directives. The CE marking also verifies that the drive, in regard to its safety functions (such as Safe torque off), conforms with the Machinery Directive as a safety component.

### ■ Compliance with the European Low Voltage Directive

The compliance with the European Low Voltage Directive has been verified according to standard EN 61800-5-1.

## ■ Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004) covers requirements stated for drives. See section [Compliance with the EN 61800-3:2004](#) below.

## ■ Compliance with the European Machinery Directive

The drive is an electronic product which is covered by the European Low Voltage Directive. However, the drive includes the Safe torque off function and can be equipped with other safety functions for machinery which, as safety components, are in the scope of the Machinery Directive. These functions of the drive comply with European harmonized standards such as EN 61800-5-2. For the declaration of conformity, see chapter [The Safe torque off function \(page 271\)](#).

---

## ■ Compliance with the EN 61800-3:2004

### Definitions

EMC stands for **E**lectromagnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

*First environment* includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

*Second environment* includes establishments connected to a network not supplying domestic premises.

*Drive of category C3:* drive of rated voltage less than 1000 V and intended for use in the second environment and not intended for use in the first environment.

*Drive of category C4:* drive of rated voltage equal to or above 1000 V, or rated current equal to or above 400 A, or intended for use in complex systems in the second environment.

### Category C2

The drive frames R6 to R9 comply with the standard with the following provisions:

1. The motor and control cables are selected as specified in the hardware manual.
2. The drive is installed according to the instructions given in the hardware manual.
3. Maximum motor cable length is 150 meters.



#### **WARNING!**

The drive may cause radio interference if used in a residential or domestic environment. The user is required to take measures to prevent interference, in addition to the requirements for CE compliance listed above, if necessary.

---

**Note:** Do not install a drive equipped with EMC filter on IT (ungrounded) systems. The supply network becomes connected to ground potential through the EMC filter capacitors which may cause danger or damage the unit.

### Category C3

The drive complies with the standard with the following provisions:

1. The motor and control cables are selected as specified in the hardware manual.
  2. The drive is installed according to the instructions given in the hardware manual.
  3. Maximum motor cable length is 100 meters.
-




**WARNING!**

A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

**Category C4**

The drive complies with the C4 category with these provisions:

1. It is ensured that no excessive emission is propagated to neighboring low-voltage networks. In some cases, the natural suppression in transformers and cables is sufficient. If in doubt, the supply transformer with static screening between the primary and secondary windings can be used.

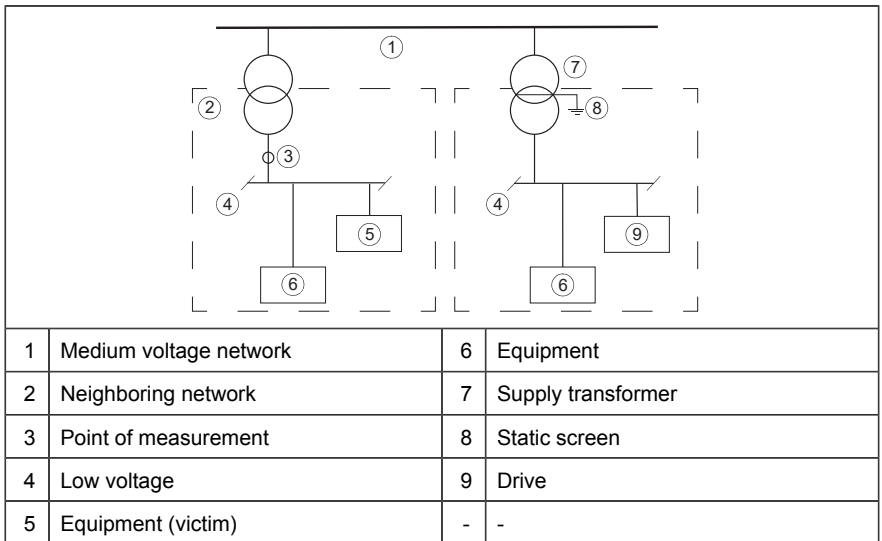

2. An EMC plan for preventing disturbances is drawn up for the installation. A template is available in *Technical guide No. 3 EMC compliant installation and configuration for a power drive system* ([3AFE61348280](#) (English)).
3. The motor and control cables are selected, and routed according to the electrical planning guidelines of the drive. The EMC recommendations are obeyed.
4. The drive is installed according to its installation instructions. The EMC recommendations are obeyed.

**WARNING!**

A drive of category C4 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

---

## UL marking

The drive is cULus listed with option +C129. The approval is valid with rated voltages up to 480 V.

UL checklist

### ■ UL and CSA checklist

---

**WARNING!**

Operation of this drive requires detailed installation and operation instructions provided in the hardware and software manuals. The manuals are provided in electronic format in the drive package or on the Internet. Keep the manuals with the drive at all times. Hard copies of the manuals can be ordered through the manufacturer.

---

- Make sure that the drive type designation label includes the applicable marking.
  - **DANGER - Risk of electric shock.** After disconnecting the input power, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you start working on the drive, motor or motor cable.
  - The drive is to be used in a heated, indoor controlled environment. The drive must be installed in clean air according to the enclosure classification. Cooling air must be clean, free from corrosive materials and electrically conductive dust.
  - The maximum surrounding air temperature is 40 °C at rated output current. The output current is derated for 40 ... 50 °C.
  - The drive is suitable for use in a circuit capable of delivering not more than 100 kA rms symmetrical amperes, 480 V maximum when protected by the UL fuses given elsewhere in this chapter. The ampere rating is based on tests done according to the appropriate UL standard.
  - The cables located within the motor circuit must be rated for at least 75 °C in UL-compliant installations.
  - The input cable must be protected with fuses or circuit breakers. These protective devices provide branch circuit protection in accordance with the national regulations (National Electrical Code (NEC) or Canadian Electrical Code). Obey also any other applicable local or provincial codes.
-

**WARNING!**

The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electric shock, current-carrying parts and other components of the device should be examined and replaced if damaged.

---

- The drive is equipped with UL listed fuses which provide branch circuit protection in accordance with the National Electrical Code (NEC) and Canadian Electrical Code.  
The fuses are listed elsewhere in this chapter.
- The drive provides motor overload protection. For adjustments, see the firmware manual.
- The drive overvoltage category according to IEC 60664-1 is III, except for auxiliary power connections (fan, control, heating, lighting, cooling unit pump etc) which are of category II.

## Design lifetime expectancy

The design lifetime expectancy of the drive and its overall components exceeds ten (10) years in normal operating environments. In some cases, the drive can last 20 years or more. To achieve a long lifetime of the product the manufacturer's instructions for sizing the drive, installation, operational conditions and preventive maintenance schedule shall be followed.

---

## Disclaimers

### ■ Generic disclaimer

The manufacturer shall have no obligation with respect to any product which (i) has been improperly repaired or altered; (ii) has been subjected to misuse, negligence or accident; (iii) has been used in a manner contrary to the manufacturer's instructions; or (iv) has failed as a result of ordinary wear and tear.

### ■ Cybersecurity disclaimer

This product is designed to be connected to and to communicate information and data via a network interface. It is Customer's sole responsibility to provide and continuously ensure a secure connection between the product and Customer network or any other network (as the case may be). Customer shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

---



13


# Dimension drawings

---


Example dimension drawings are shown below.




### Frames R6 and R7 (+B054: IP42, UL Type 1 Filtered)

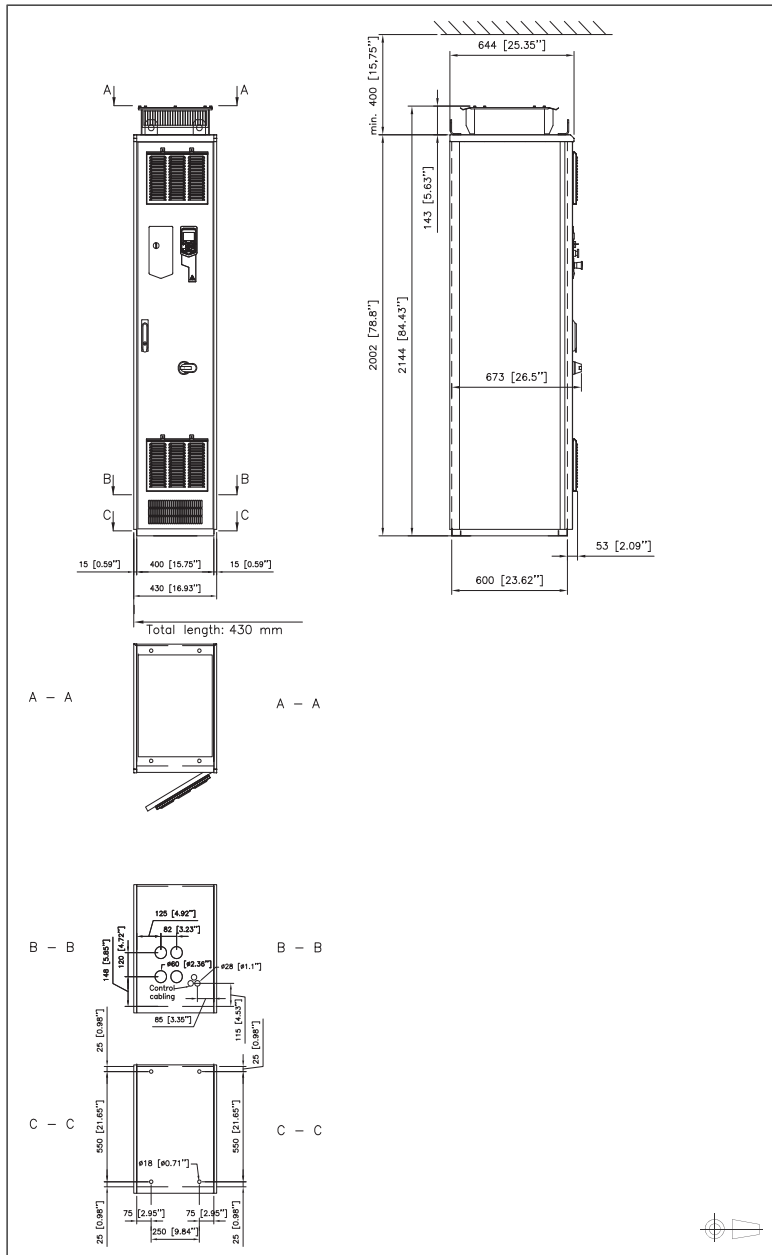


Frames R6 and R7 (+B055: IP54, UL Type 12)

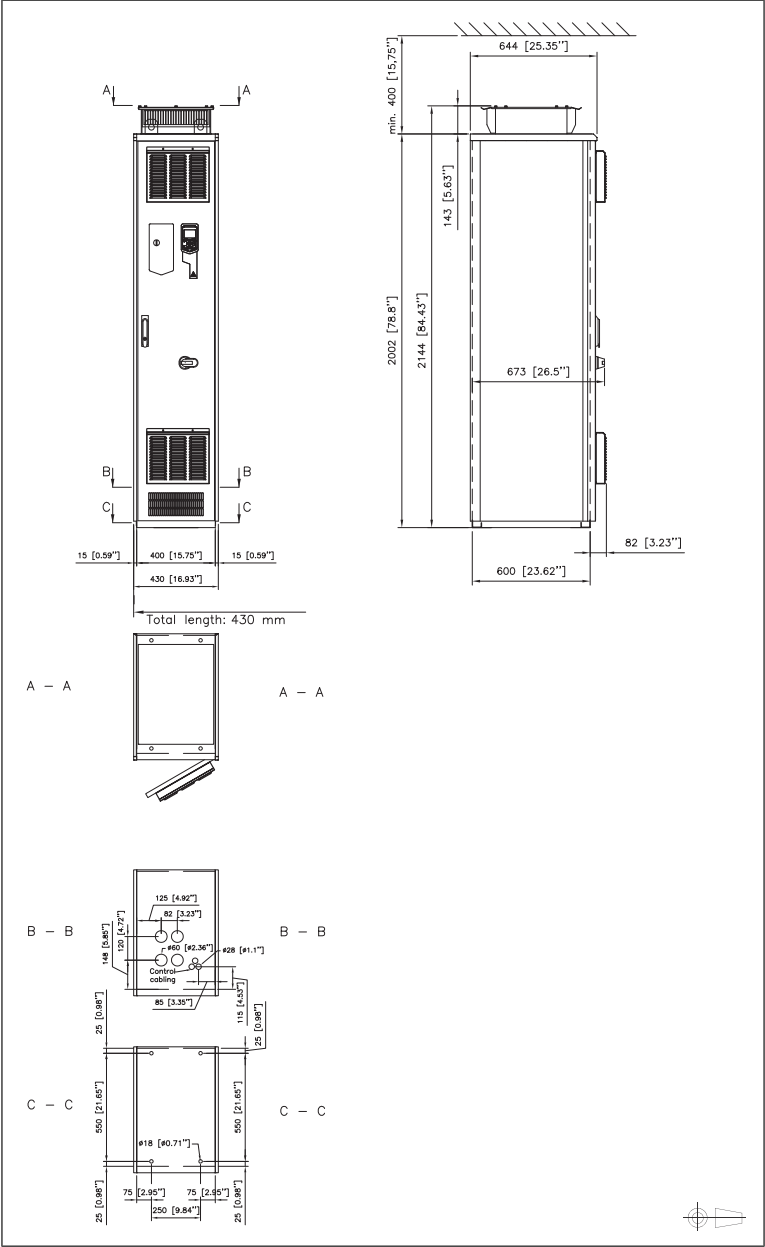


Frames R6 and R7 (+H351 and +H353: top entry and exit)

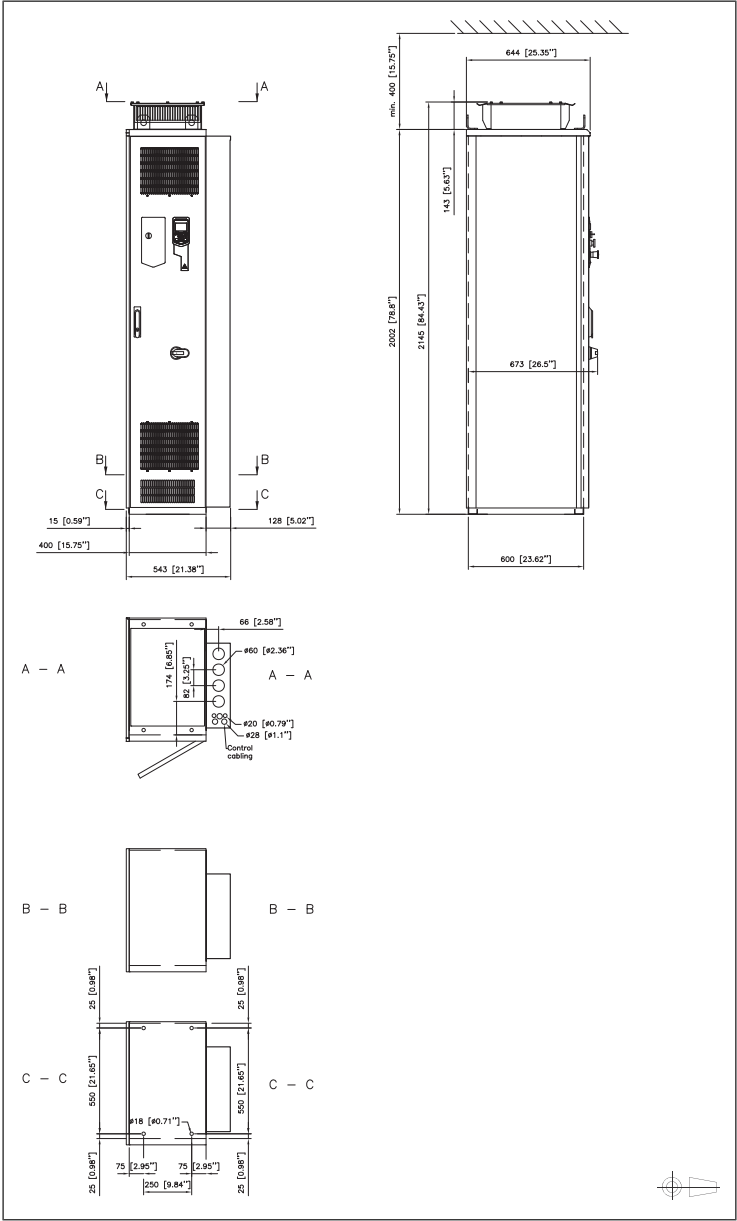

Frames R6 and R7 (+F289)

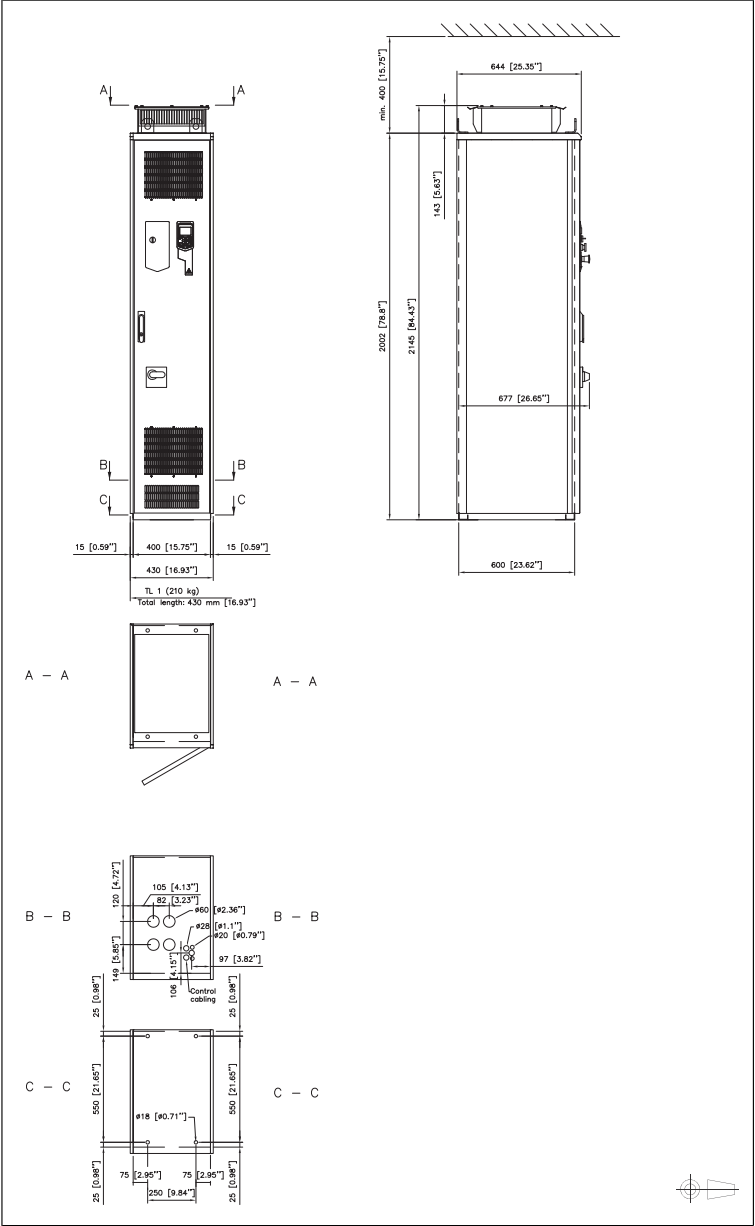


Frames R6 and R7 (+F289, +H351, +H353)

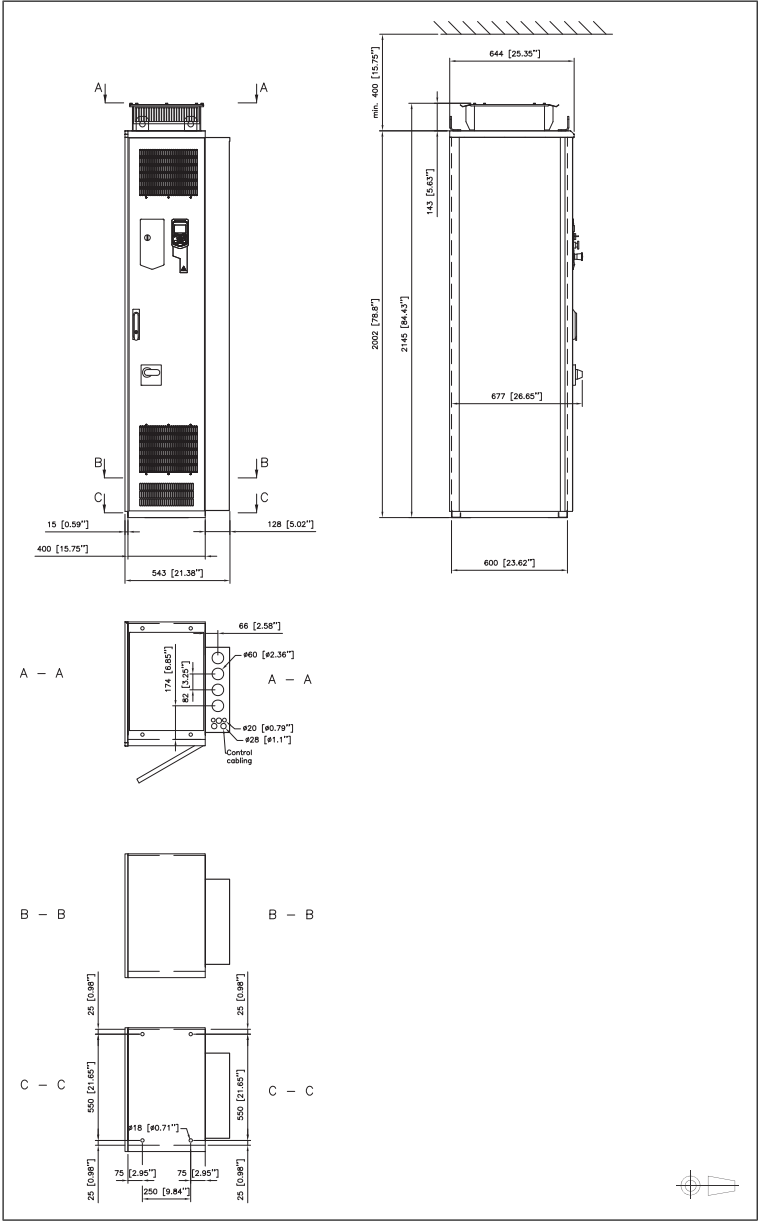






Frames R8 and R9 (+B054: IP42, UL Type 1 Filtered)

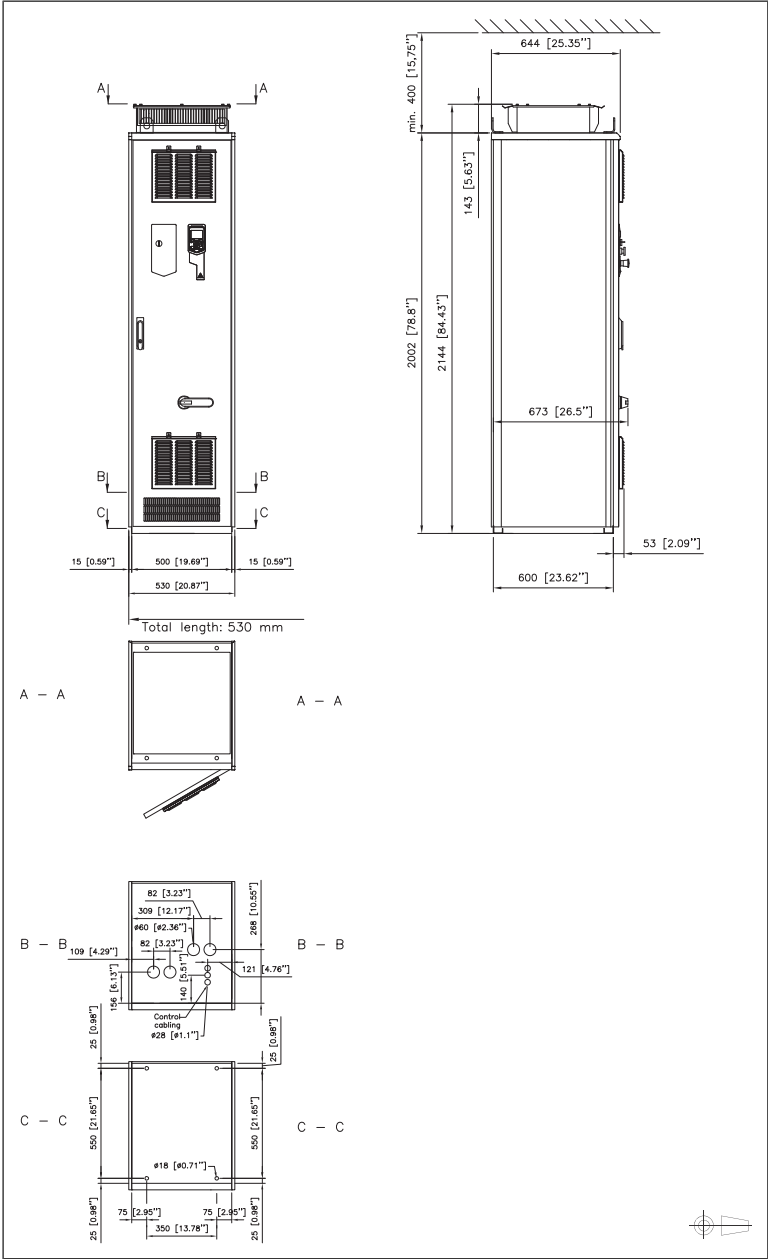





Frames R8 and R9 (+H351 and +H353: top entry and exit)

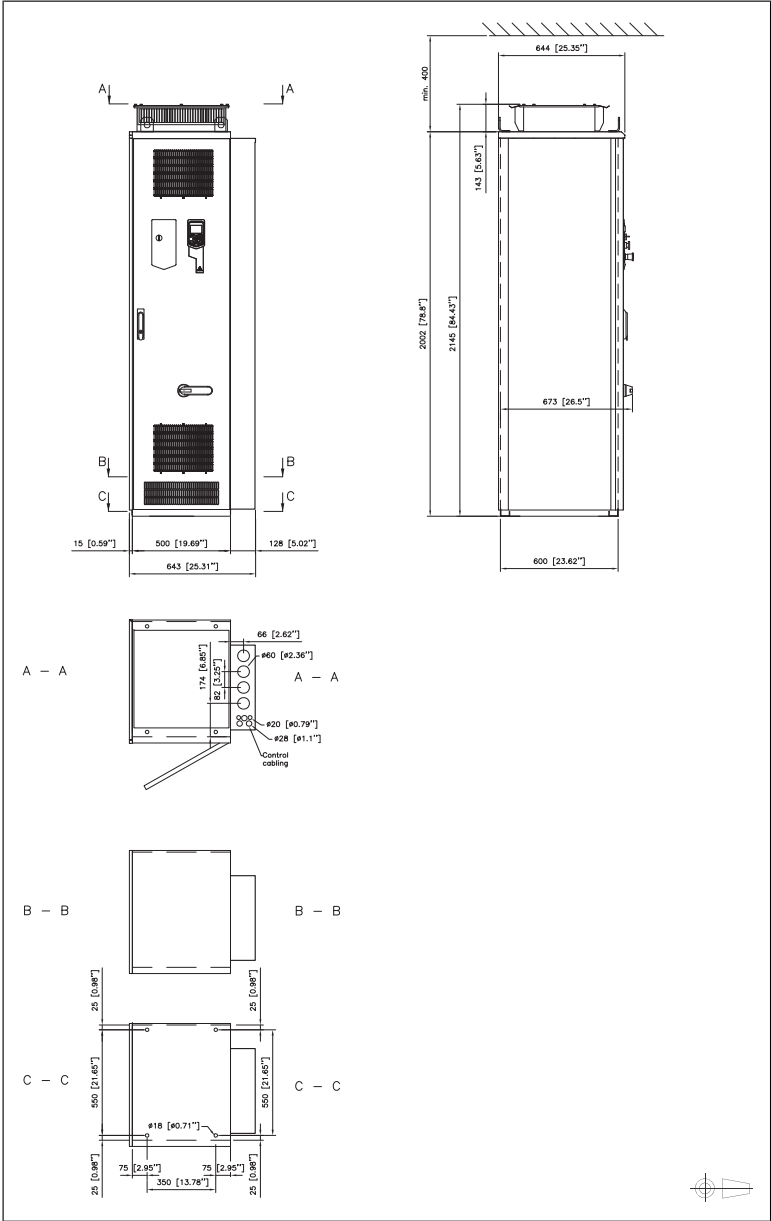


Frames R8 and R9 (+F289)

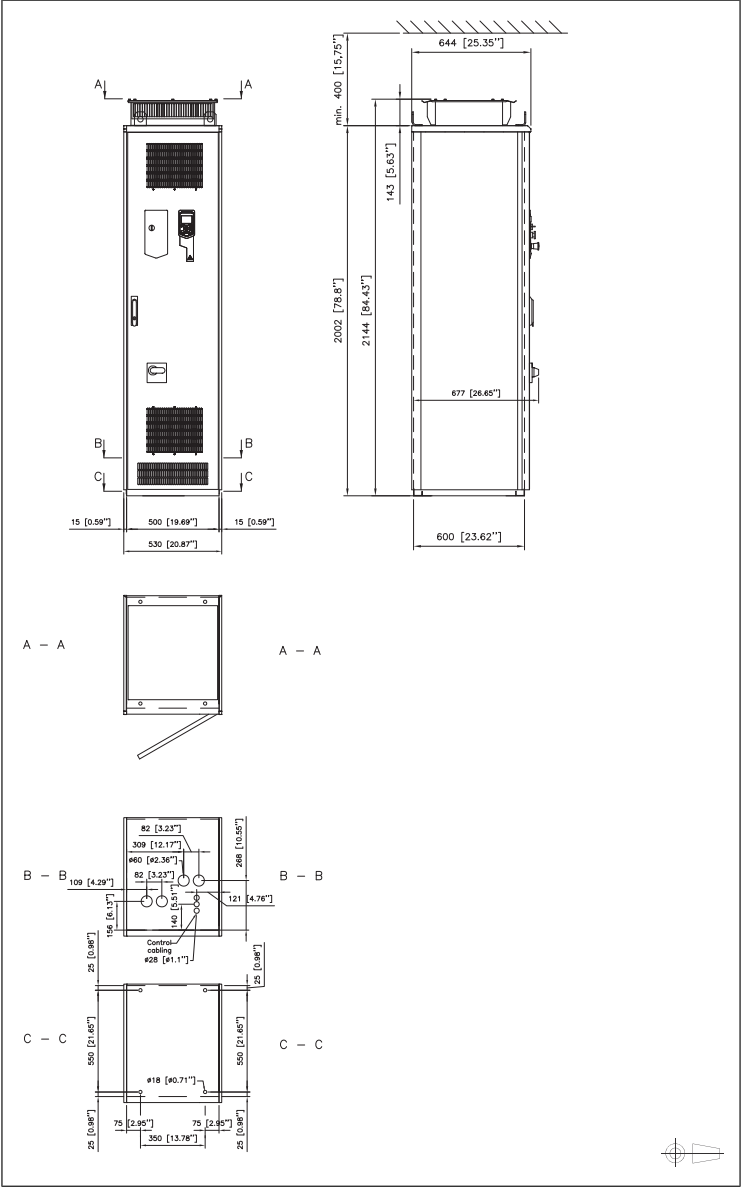


Frames R8 and R9 (+F289, +H351, +H353)

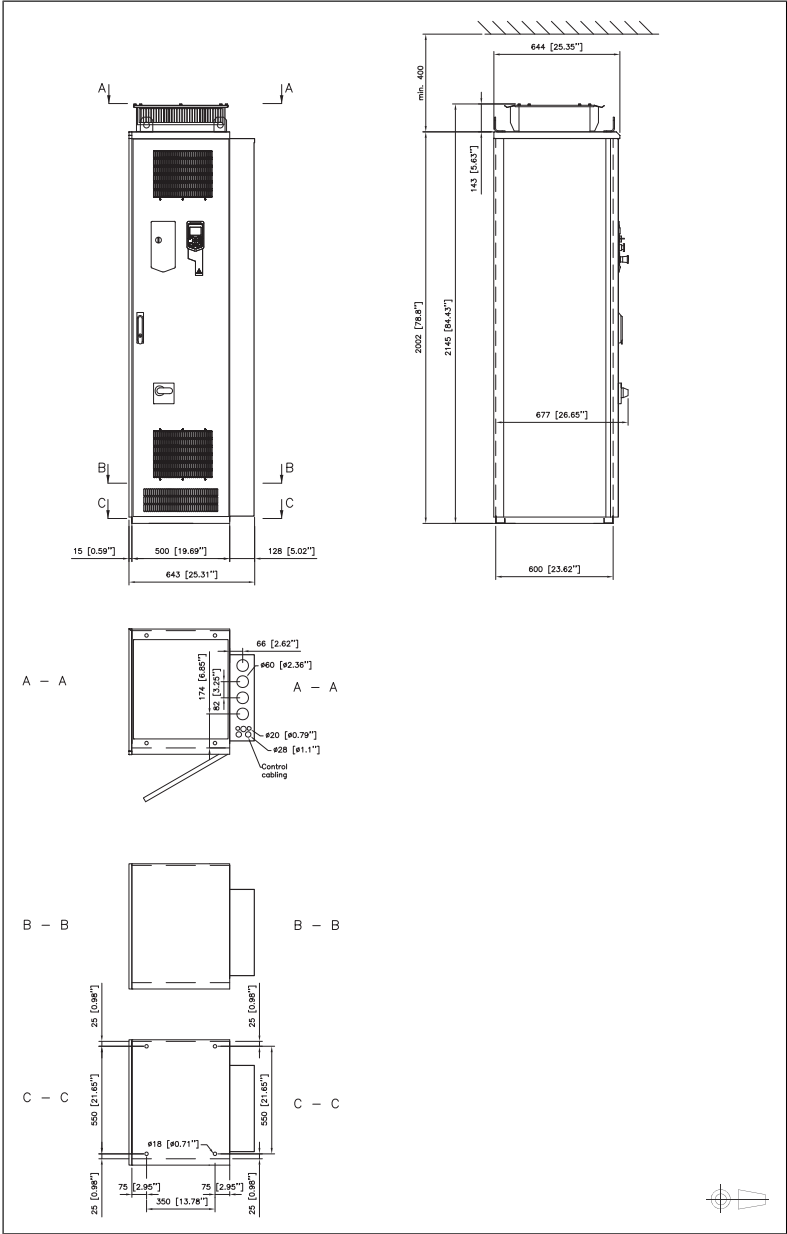

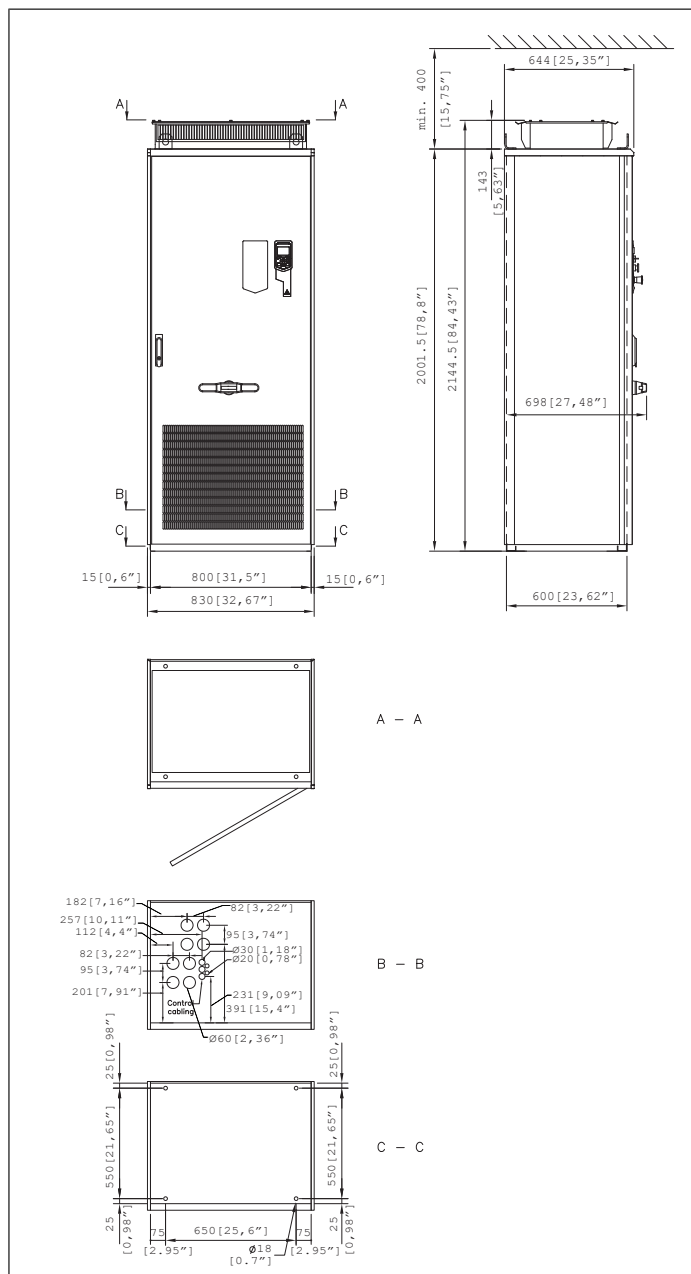




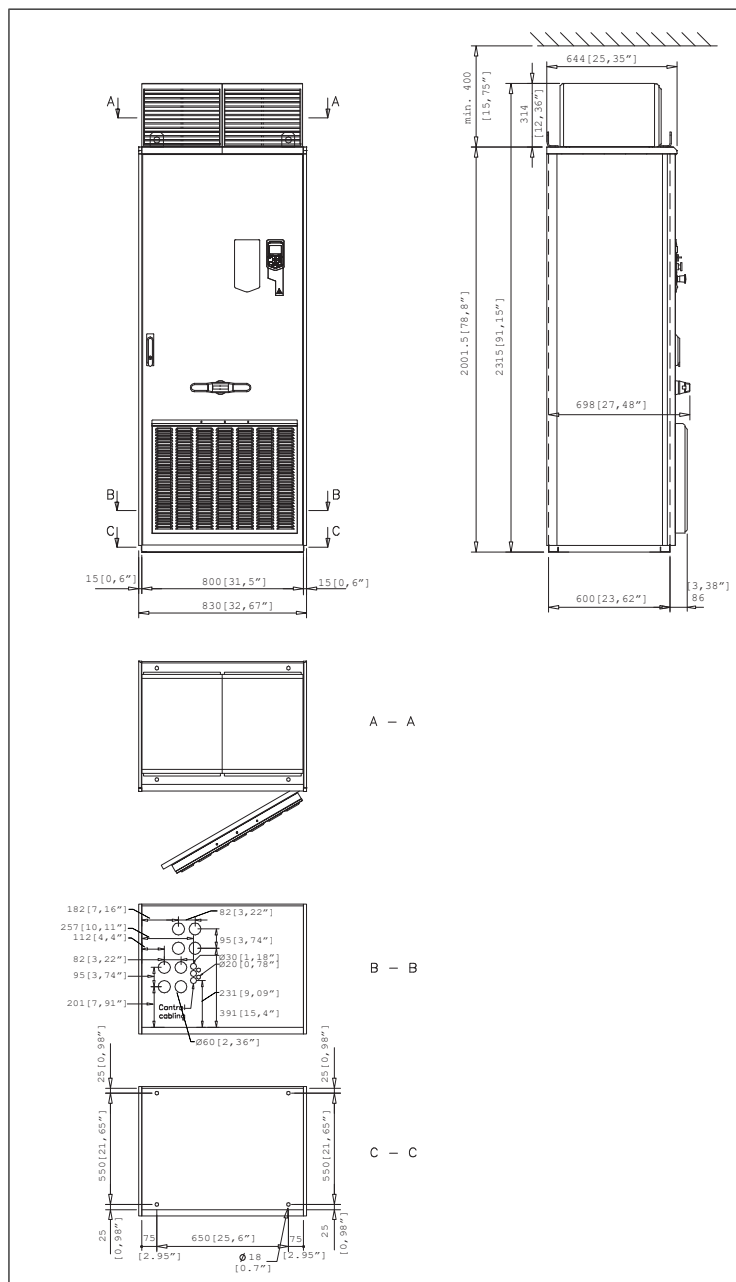






Frames R10 and R11 (+H351, +H353)

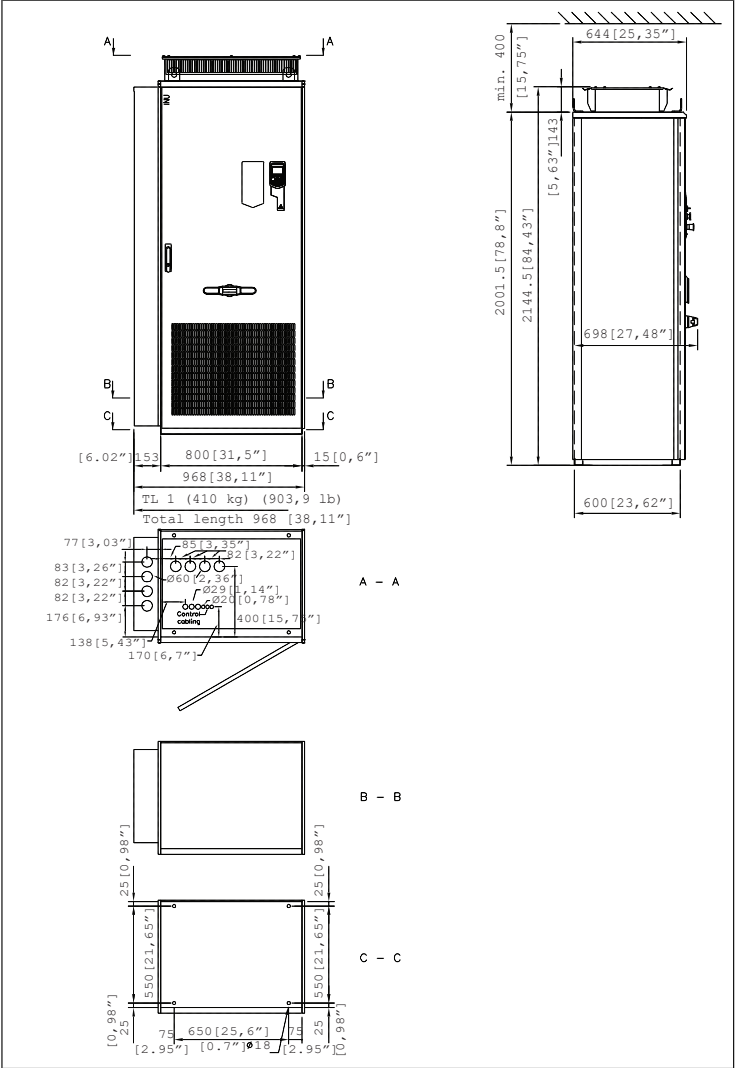

**Frames R10 and R11 (+B054: IP42, UL type 1 filtered, +H351, +H353)**

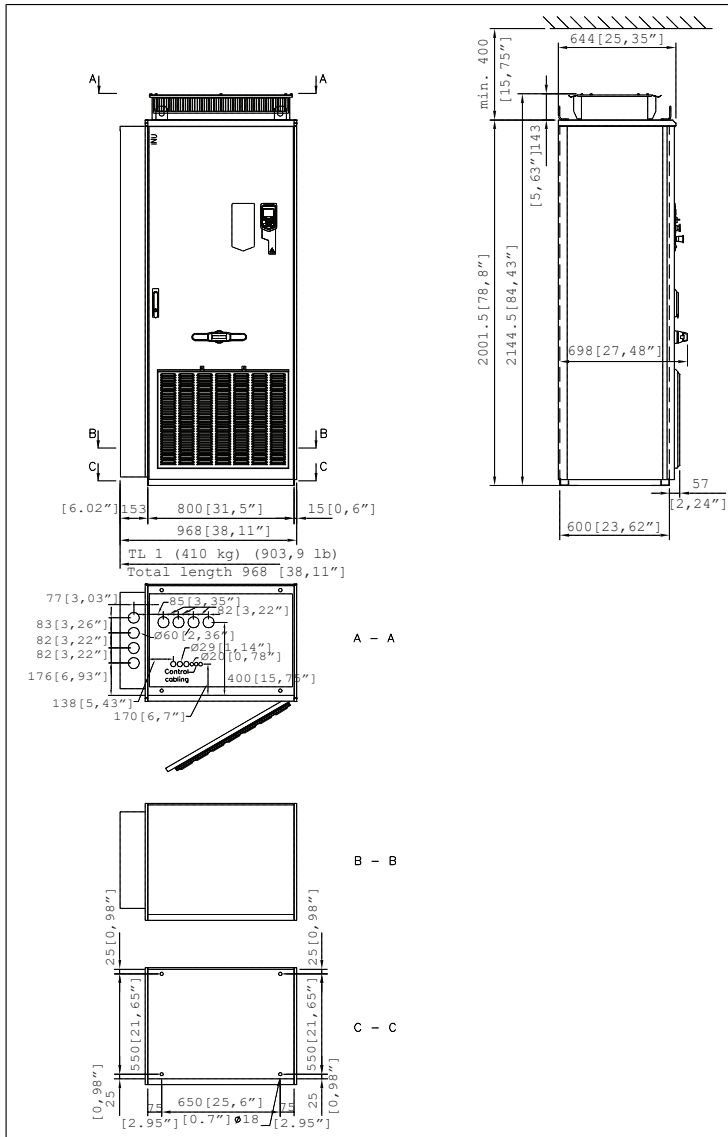



# 14

## The Safe torque off function

---

### Contents of this chapter

This chapter describes the Safe torque off (STO) function of the drive and gives instructions for its use.

### Description

The Safe torque off function can be used, for example, as the final actuator device of safety circuits that stop the drive in case of danger (such as an emergency stop circuit). Another typical application is a prevention of unexpected start-up function that enables short-time maintenance operations like cleaning or work on non-electrical parts of the machinery without switching off the power supply to the drive.

When activated, the Safe torque off function disables the control voltage of the power semiconductors of the drive output stage (A, see the diagrams below), thus preventing the drive from generating the torque required to rotate the motor. If the motor is running when Safe torque off is activated, it coasts to a stop.

The Safe torque off function has a redundant architecture, that is, both channels must be used in the safety function implementation. The safety data given in this manual is calculated for redundant use, and does not apply if both channels are not used.

The Safe torque off function complies with these standards:

Standard	Name
IEC 60204-1:2016 EN 60204-1:2018	<i>Safety of machinery – Electrical equipment of machines – Part 1: General requirements</i>

<b>Standard</b>	<b>Name</b>
IEC 61000-6-7:2014	<i>Electromagnetic compatibility (EMC) – Part 6-7: Generic standards – Immunity requirements for equipment intended to perform functions in a safety-related system (functional safety) in industrial locations</i>
IEC 61326-3-1:2017	<i>Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications</i>
IEC 61508-1:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 1: General requirements</i>
IEC 61508-2:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems</i>
IEC 61511-1:2016	<i>Functional safety – Safety instrumented systems for the process industry sector</i>
IEC 61800-5-2:2016 EN 61800-5-2:2007	<i>Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional</i>
IEC 62061:2005 + A1:2012 + A2:2015 EN 62061:2005 + AC:2010 + A1:2013 + A2:2015	<i>Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems</i>
EN ISO 13849-1:2015	<i>Safety of machinery – Safety-related parts of control systems – Part 1: General principles for design</i>
EN ISO 13849-2:2012	<i>Safety of machinery – Safety-related parts of control systems – Part 2: Validation</i>

The function also corresponds to Prevention of unexpected start-up as specified by EN ISO 14118:2018 (ISO 14118:2017), and Uncontrolled stop (stop category 0) as specified in EN/IEC 60204-1.

### ■ **Compliance with the European Machinery Directive**

See the technical data.


The Declaration of conformity is shown at the end of this chapter.

Wiring


For the electrical specifications of the STO connection, see the technical data of the control unit.

■ Connection principle

Single ACS580-07 drive, internal power supply

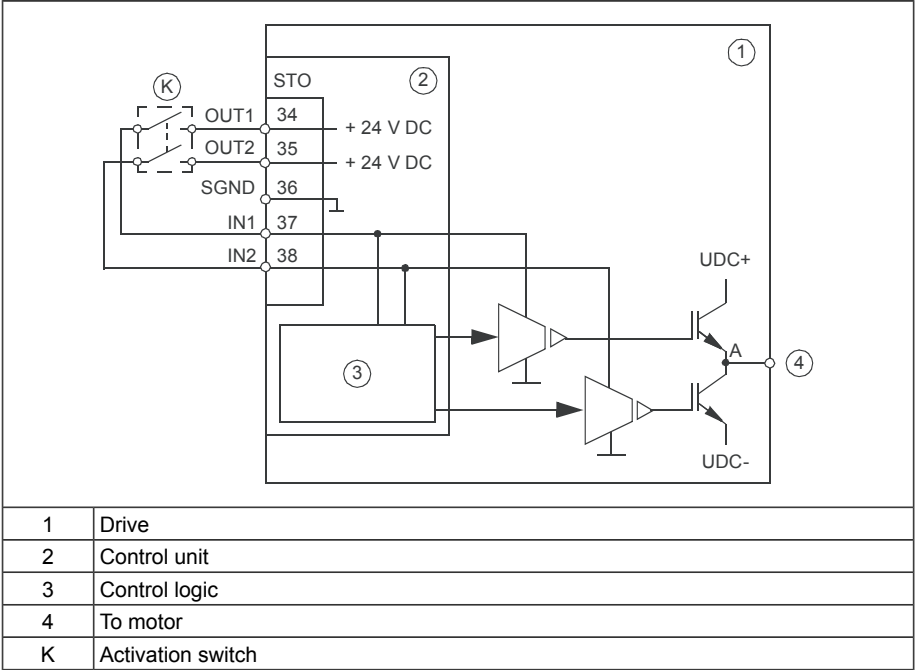


Single ACS580-07 drive, external power supply

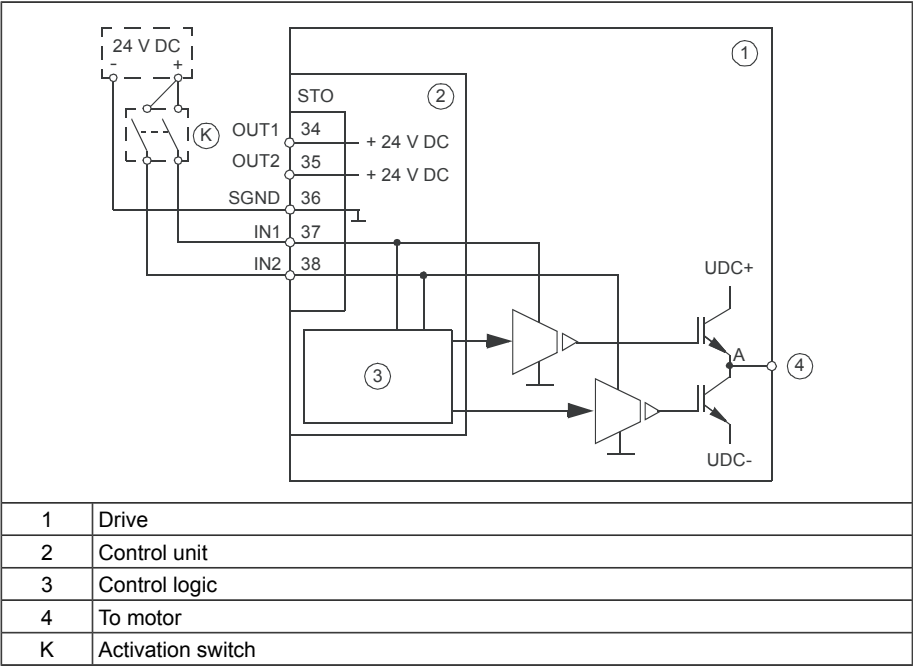

■ Wiring examples


Single ACS580-07 drive, internal power supply

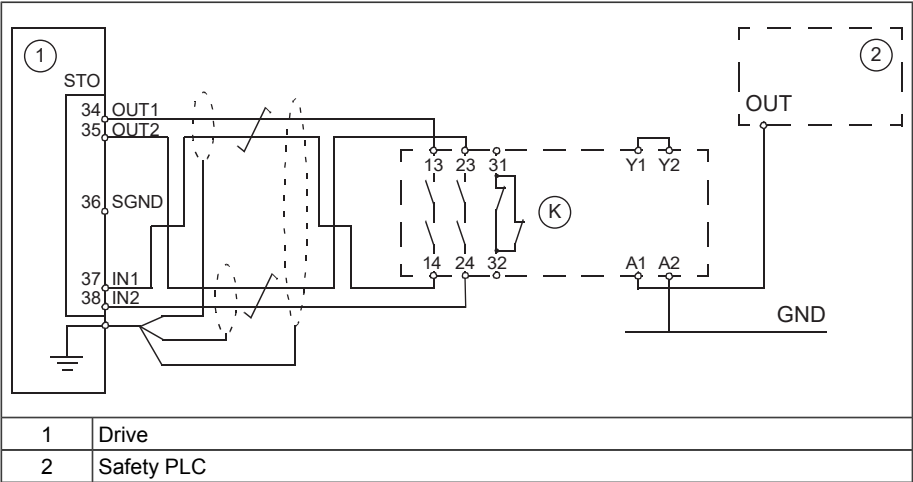






Multiple ACS580-07 drives, internal power supply

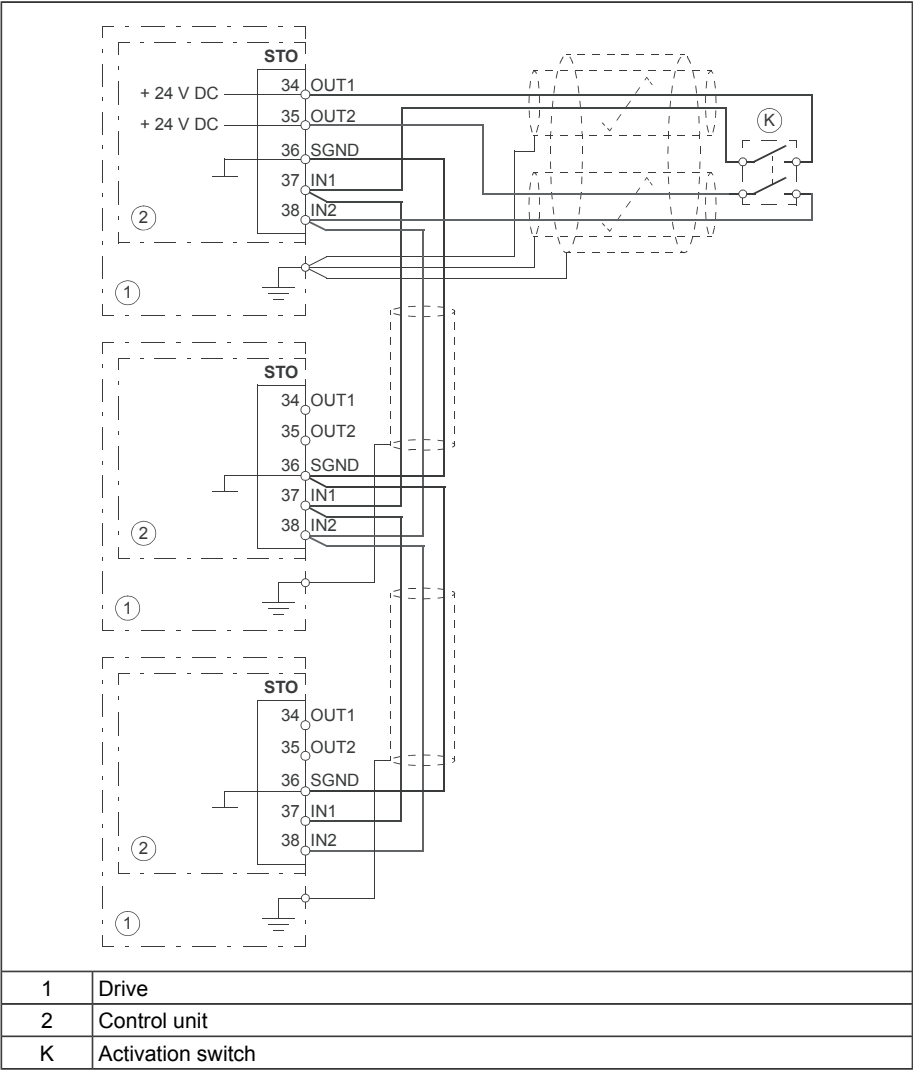

Multiple ACS580-07 drives, external power supply

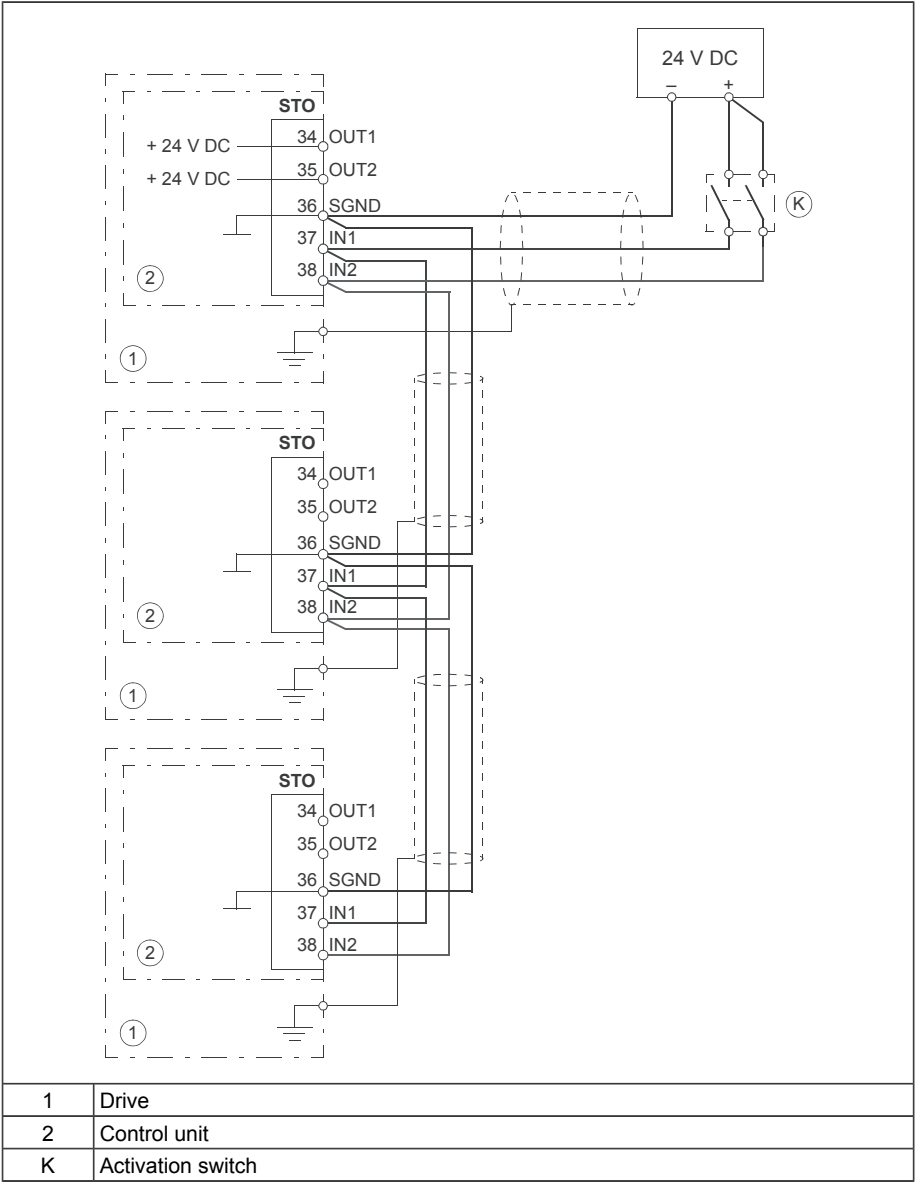

## ■ Activation switch

In the wiring diagrams, the activation switch has the designation [K]. This represents a component such as a manually operated switch, an emergency stop push button switch, or the contacts of a safety relay or safety PLC.

- In case a manually operated activation switch is used, the switch must be of a type that can be locked out to the open position.
- The contacts of the switch or relay must open/close within 200 ms of each other.
- A CPTC-02 thermistor protection module can also be used. For more information, see the module documentation.

## ■ Cable types and lengths

- Double-shielded twisted-pair cable is recommended.
- Maximum cable lengths:
  - 300 m (1000 ft) between activation switch [K] and drive control unit
  - 60 m (200 ft) between multiple drives
  - 60 m (200 ft) between external power supply and first control unit

**Note:** A short-circuit in the wiring between the switch and an STO terminal causes a dangerous fault. Therefore, it is recommended to use a safety relay (including wiring diagnostics) or a wiring method (shield grounding, channel separation) which reduces or eliminates the risk caused by the short-circuit.

**Note:** The voltage at the STO input terminals of the drive must be at least 13 V DC to be interpreted as “1”.

The pulse tolerance of the input channels is 1 ms.

## ■ Grounding of protective shields

- Ground the shield in the cabling between the activation switch and the control unit at the control unit only.
- Ground the shield in the cabling between two control units at one control unit only.

## Operation principle

1. The Safe torque off activates (the activation switch is opened, or safety relay contacts open).
2. The STO inputs of the drive control unit de-energize.
3. The control unit cuts off the control voltage from the output IGBTs.
4. The control program generates an indication as defined by parameter 31.22 (see the firmware manual of the drive).

The parameter selects which indications are given when one or both STO signals are switched off or lost. The indications also depend on whether the drive is running or stopped when this occurs.

**Note:** This parameter does not affect the operation of the STO function itself. The STO function will operate regardless of the setting of this parameter: a running drive will stop upon removal of one or both STO signals, and will not start until both STO signals are restored and all faults reset.

**Note:** The loss of only one STO signal always generates a fault as it is interpreted as a malfunction of STO hardware or wiring.

5. The motor coasts to a stop (if running). The drive cannot restart while the activation switch or safety relay contacts are open. After the contacts close, a reset may be needed (depending on the setting of parameter 31.22). A new start command is required to start the drive.

## Start-up including acceptance test

To ensure the safe operation of a safety function, validation is required. The final assembler of the machine must validate the function by performing an acceptance test. The acceptance test must be performed

- at initial start-up of the safety function
- after any changes related to the safety function (circuit boards, wiring, components, settings, etc.)
- after any maintenance work related to the safety function.

### ■ Competence

The acceptance test of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6. The test procedures and report must be documented and signed by this person.

### ■ Acceptance test reports


Signed acceptance test reports must be stored in the logbook of the machine. The report shall include documentation of start-up activities and test results, references to failure reports and resolution of failures. Any new acceptance tests performed due to changes or maintenance shall be logged into the logbook.

### ■ Acceptance test procedure

After wiring the Safe torque off function, validate its operation as follows.

**Note:** If the drive is equipped with safety option +Q951 or +Q953, do the procedure shown in the documentation of the option.

**Note:** If a CPTC-02 module is installed, refer to its documentation.

Action	<input checked="" type="checkbox"/>
 <b>WARNING!</b> Obey the safety instructions. If you ignore them, injury or death, or damage to the equipment can occur.	<input type="checkbox"/>
Make sure that the drive can be run and stopped freely during start-up.	<input type="checkbox"/>
Stop the drive (if running), switch the input power off and isolate the drive from the power line using a disconnecter.	<input type="checkbox"/>
Check the STO circuit connections against the wiring diagram.	<input type="checkbox"/>
Close the disconnecter and switch the power on.	<input type="checkbox"/>

Action	<input checked="" type="checkbox"/>
<p>Test the operation of the STO function when the motor is stopped.</p> <ul style="list-style-type: none"> <li>• Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill.</li> </ul> <p>Make sure that the drive operates as follows:</p> <ul style="list-style-type: none"> <li>• Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 (see the firmware manual).</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The drive generates a warning. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>
<p>Test the operation of the STO function when the motor is running.</p> <ul style="list-style-type: none"> <li>• Start the drive and make sure the motor is running.</li> <li>• Open the STO circuit. The motor should stop. The drive generates an indication if one is defined for the 'running' state in parameter 31.22 (see the firmware manual).</li> <li>• Reset any active faults and try to start the drive.</li> <li>• Make sure that the motor stays at a standstill and the drive operates as described above in testing the operation when the motor is stopped.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>
<p>Test the operation of the failure detection of the drive. The motor can be stopped or running.</p> <ul style="list-style-type: none"> <li>• Open the 1st channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates a <i>FA81 Safe Torque Off 1 loss</i> fault indication (see the firmware manual).</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> <li>• Open the 2nd channel of the STO circuit. If the motor was running, it should coast to a stop. The drive generates a <i>FA82 Safe Torque Off 2 loss</i> fault indication (see the firmware manual).</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>
<p>Document and sign the acceptance test report which verifies that the safety function is safe and accepted for operation.</p>	<input type="checkbox"/>

## Use

1. Open the activation switch, or activate the safety functionality that is wired to the STO connection.
2. The STO inputs on the drive control unit de-energize, and the control unit cuts off the control voltage from the output IGBTs.
3. The control program generates an indication as defined by parameter 31.22 (see the firmware manual of the drive).
4. The motor coasts to a stop (if running). The drive will not restart while the activation switch or safety relay contacts are open.
5. Deactivate the STO by closing the activation switch, or resetting the safety functionality that is wired to the STO connection.
6. Reset any faults before restarting.



### **WARNING!**

The Safe torque off function does not disconnect the voltage of the main and auxiliary circuits from the drive. Therefore maintenance work on electrical parts of the drive or the motor can only be carried out after isolating the drive from the supply and all other voltage sources.

---



### **WARNING!**

The drive cannot detect or memorize any changes in the STO circuitry when the drive control unit is not powered. If both STO circuits are closed and a level-type start signal is active when the power is restored, it is possible that the drive starts without a fresh start command. Take this into account in the risk assessment of the system.

This is also valid when the drive is only powered by a CMOD-xx multifunction extension module.

---



### **WARNING!**

(With permanent magnet or synchronous reluctance [SynRM] motors only)

In case of a multiple IGBT power semiconductor failure, the drive can produce an alignment torque which maximally rotates the motor shaft by  $180/p$  degrees (with permanent magnet motors) or  $180/2p$  degrees (with synchronous reluctance [SynRM] motors) regardless of the activation of the Safe torque off function.  $p$  denotes the number of pole pairs.

---

## Notes:

- If a running drive is stopped by using the Safe torque off function, the drive will cut off the motor supply voltage and the motor will coast to a stop. If this causes danger
-



or is not otherwise acceptable, stop the drive and machinery using the appropriate stop mode before activating the Safe torque off function.

- The Safe torque off function overrides all other functions of the drive.
- The Safe torque off function is ineffective against deliberate sabotage or misuse.
- The Safe torque off function has been designed to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. The assembler of the machine must inform the final user about the residual risks.

## Maintenance

After the operation of the circuit is validated at start-up, the STO function shall be maintained by periodic proof testing. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 5 or 2 years; see section [Safety data \(page 286\)](#). It is assumed that all dangerous failures of the STO circuit are detected by the proof test. To perform the proof test, do the [Acceptance test procedure \(page 280\)](#).

**Note:** See also the Recommendation of Use CNB/M/11.050 (published by the European co-ordination of Notified Bodies) concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be performed at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be performed at least every 12 months.

The STO function of the drive does not contain any electromechanical components.

In addition to proof testing, it is a good practice to check the operation of the function when other maintenance procedures are carried out on the machinery.

Include the Safe torque off operation test described above in the routine maintenance program of the machinery that the drive runs.

If any wiring or component change is needed after start up, or the parameters are restored, do the test given in section [Acceptance test procedure \(page 280\)](#).

Use only spare parts approved by ABB.

Record all maintenance and proof test activities in the machine logbook.

### ■ Competence

The maintenance and proof test activities of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6.

---

## **Fault tracing**

The indications given during the normal operation of the Safe torque off function are selected by drive control program parameter 31.22.

The diagnostics of the Safe torque off function cross-compare the status of the two STO channels. In case the channels are not in the same state, a fault reaction function is performed and the drive trips on an “STO hardware failure” fault. An attempt to use the STO in a non-redundant manner, for example activating only one channel, will trigger the same reaction.

See the firmware manual of the drive control program for the indications generated by the drive, and for details on directing fault and warning indications to an output on the control unit for external diagnostics.

Any failures of the Safe torque off function must be reported to ABB.

---

## Safety data

The safety data for the Safe torque off function is given below.

**Note:** The safety data is calculated for redundant use, and does not apply if both STO channels are not used.

Frame size	SIL/ SILCL	PL	SFF (%)	PFH (T <sub>1</sub> = 20 a) (1/h)	PFD <sub>avg</sub> (T <sub>1</sub> = 2 a)	PFD <sub>avg</sub> (T <sub>1</sub> = 5 a)	MTTF <sub>D</sub> (a)	DC (%)	Cat.	SC	HFT	OCF	T <sub>M</sub> (a)
R6 R7	3	e	>99	3.92E-09	3.44E-05	8.59E-05	9380	≥90	3	3	1	80	20
R8 R9	3	e	>99	4.22E-09	3.69E-05	9.24E-05	8792	≥90	3	3	1	80	20
R10 R11	3	e	99.55	4.18E-09	3.66E-05	9.14E-05	15080	≥90	3	3	1	80	20
3AXD10000015777 N, 3AXD10000410558 F													

- The following temperature profile is used in safety value calculations:
  - 670 on/off cycles per year with  $\Delta T = 71.66\text{ }^{\circ}\text{C}$
  - 1340 on/off cycles per year with  $\Delta T = 61.66\text{ }^{\circ}\text{C}$
  - 30 on/off cycles per year with  $\Delta T = 10.0\text{ }^{\circ}\text{C}$
  - 32 °C board temperature at 2.0% of time
  - 60 °C board temperature at 1.5% of time
  - 85 °C board temperature at 2.3% of time.
- Relevant failure modes:
  - The STO trips spuriously (safe failure)
  - The STO does not activate when requested
  - A fault exclusion on the failure mode “short circuit on printed circuit board” has been made (EN 13849-2, table D.5). The analysis is based on an assumption that one failure occurs at one time. No accumulated failures have been analyzed.
- STO response times:
  - STO reaction time (shortest detectable break): 1 ms
  - STO response time: 2 ms (typical), 5 ms (maximum)
  - Fault detection time: Channels in different states for longer than 200 ms
  - Fault reaction time: Fault detection time + 10 ms
- Indication delays:

- STO fault indication (parameter 31.22) delay: < 500 ms
- STO warning indication (parameter 31.22) delay: < 1000 ms

## ■ Abbreviations

Abbr.	Reference	Description
Cat.	EN ISO 13849-1	Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4.
CCF	EN ISO 13849-1	Common cause failure (%)
DC	EN ISO 13849-1	Diagnostic coverage
HFT	IEC 61508	Hardware fault tolerance
MTTF <sub>D</sub>	EN ISO 13849-1	Mean time to dangerous failure: (Total number of life units) / (Number of dangerous, undetected failures) during a particular measurement interval under stated conditions
PFD <sub>avg</sub>	IEC 61508	Average probability of dangerous failure on demand, that is, mean unavailability of a safety-related system to perform the specified safety function when a demand occurs
PFH	IEC 61508	Average frequency of dangerous failures per hour, that is, average frequency of a dangerous failure of a safety related system to perform the specified safety function over a given period of time
PL	EN ISO 13849-1	Performance level. Levels a...e correspond to SIL
SC	IEC 61508	Systematic capability
SFF	IEC 61508	Safe failure fraction (%)
SIL	IEC 61508	Safety integrity level (1...3)
SILCL	IEC/EN 62061	Maximum SIL (level 1...3) that can be claimed for a safety function or subsystem
STO	IEC/EN 61800-5-2	Safe torque off
T <sub>1</sub>	IEC 61508-6	Proof test interval. T <sub>1</sub> is a parameter used to define the probabilistic failure rate (PFH or PFD) for the safety function or subsystem. Performing a proof test at a maximum interval of T <sub>1</sub> is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid. See also section Maintenance.

Abbr.	Reference	Description
$T_M$	EN ISO 13849-1	Mission time: the period of time covering the intended use of the safety function/device. After the mission time elapses, the safety device must be replaced. Note that any $T_M$ values given cannot be regarded as a guarantee or warranty.

#### ■ TÜV certificate

The TÜV certificate is available on the Internet at [www.abb.com/drives/documents](http://www.abb.com/drives/documents).

## ■ Declaration of conformity



### EU Declaration of Conformity

Machinery Directive 2006/42/EC

We

Manufacturer:

ABB Oy

Address:

Hiomotie 13, 00380 Helsinki, Finland.

Phone:

+358 10 22 11

declare under our sole responsibility that the following product:

**Frequency converter(s)**

**ACS580-07**

with regard to the safety function(s)

- Safe Torque Off
- Emergency Stop (option codes +Q951, +Q963)
- Safe stop 1 (SS1-t, with FSPS-21 PROFIsafe module, +Q986)

is/are in conformity with all the relevant safety component requirements of EU Machinery Directive 2006/42/EC, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:

EN 61800-5-2:2007

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

EN 62061:2005

Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems

EN ISO 13849-1:2015

Safety of machinery – Safety-related parts of control systems, Part 1: General requirements

EN ISO 13849-2:2012

Safety of machinery – Safety-related parts of the control systems, Part 2: Validation

EN 60204-1:2018

Safety of machinery – Electrical equipment of machines – Part 1: General requirements

The following other standards have been applied:

IEC 61508:2010, parts 1-2

Functional safety of electrical / electronic / programmable electronic safety-related systems

IEC 61800-5-2:2016

Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

The product(s) referred in this Declaration of conformity fulfil(s) the relevant provisions of other European Union Directives which are notified in Single EU Declaration of conformity 3AXD10000497690.

Person authorized to compile the technical file:

Name and address: Jussi Vesti, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki, 14.09.2020

Signed for and on behalf of:

Tuomo Tarula  
Vice president, ABB Oy

Vesa Tuomainen  
Product Engineering manager, ABB Oy

Document number 3AXD10000675677





# 15

## CBAI-01 bipolar analog IO adapter module

---

### Contents of this chapter

This chapter describes the optional CBAI-01 bipolar analog IO adapter module.

### Product overview

The CBAI-01 includes two bipolar analog inputs, two unipolar analog outputs, and a switch which can be used to select scaling of the analog output level. The module converts the bipolar analog inputs ( $-10\dots+10$  V) to respective unipolar analog inputs  $0\dots+10$  V which can be connected to the drive control unit. It offers no additional inputs.



- a mounting screw.

2. Make sure that there are no signs of damage.

### ■ Installing the module

See section [Installing option modules \(page 136\)](#).

## Electrical installation



### WARNING!

Obey the instructions in chapter [Safety instructions \(page 17\)](#). If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrician, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**


### ■ Necessary tools

- Screwdriver and a set of suitable bits.

### ■ Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables and the pair cable shield to the SCR terminal of CBAI-01.

Connection diagram:

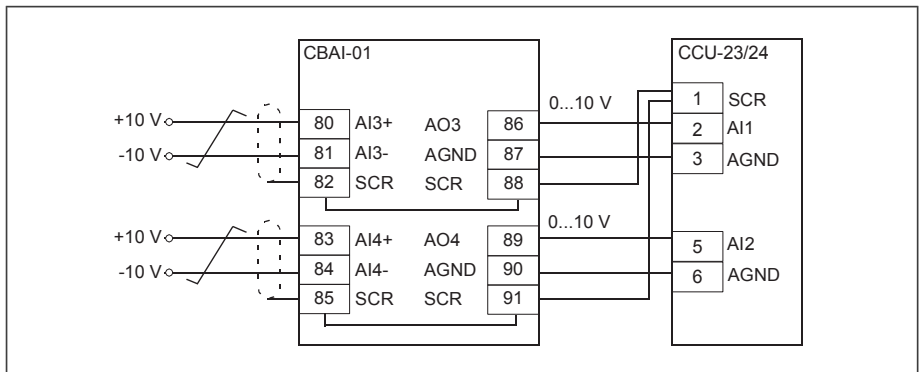

## Start-up

### ■ Setting the parameters

1. Power up the drive.
2. Verify that the diagnostic LED is on.

### Parameter setting example for AI1

This example shows how to set the control board parameters for a bipolar speed reference ranging from -50 Hz to 50 Hz, with detection of a wire break between the adapter module and the control unit of the drive.

Parameter	Setting	Default
12.17 AI1 min	0.5 V	4.000 mA or 0.000 V
12.18 AI1 max	9.5 V	20.000 mA or 10.000 V
12.19 AI1 scaled at AI1 min	-50	0.000
12.20 AI1 scaled at AI1 max	50	50
32.05 Supervision 1 function	Low	Disabled
32.06 Supervision 1 action	Fault	No action
32.07 Supervision 1 signal	AI1	Frequency
32.09 Supervision 1 low	0.4	0.00

## Diagnostics




### ■ LEDs

The adapter module has one diagnostic LED.

Color	Description
Green	The adapter module is powered up.


## Technical data

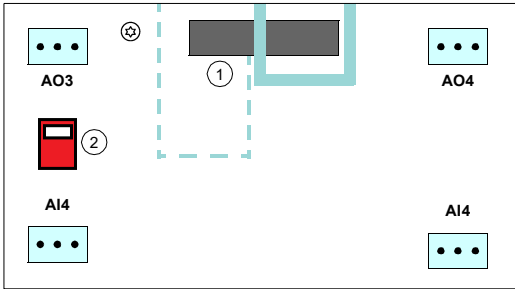Installation	Into SLOT 2 on the drive control unit
Degree of protection	IP20
Ambient conditions	See the drive technical data.
Package	Cardboard
<b>Analog inputs (80...82, 83...85)</b>	
Maximum wire size	1.5 mm <sup>2</sup>

Input voltage (AI+ and AI-)	-10 V ... +10 V
Input resistance	> 200 kohm
Optional cable shield connection	
<b>Analog outputs (86...88, 89...91)</b>	
Maximum wire size	1.5 mm <sup>2</sup>
Output voltage (AO+ and AGND)	0 V ... +10 V
Output resistance	< 20 ohm
Recommended load	> 10 kohm
Inaccuracy	typical ±1%, max. ±1.5% of full scale
Optional cable shield connection	
<b>Analog output scale switch</b>	
ON state	0.5 V ... 9.5 V range in use
OFF state	0 V ... 10 V range in use
<b>Isolation areas</b>	
	
1	Plugged to drive control unit <b>SLOT2</b>
2	Switch
	Reinforced insulation (IEC 61800-5-1:2007)
	Functional insulation (IEC 61800-5-1:2007)

# Dimension drawing

The dimensions are in millimeters and [inches].

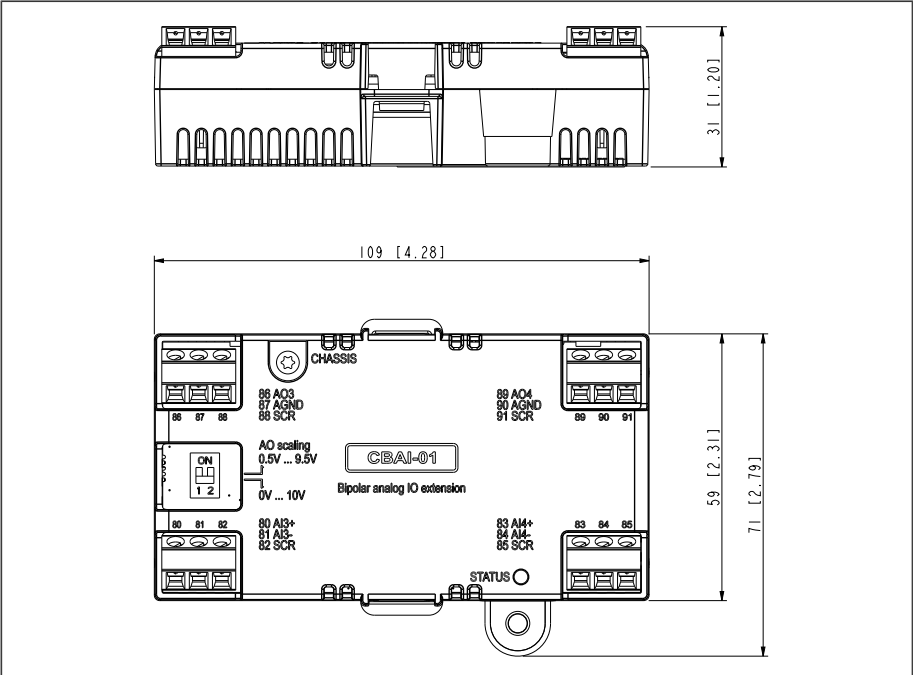

# 16

## CHDI-01 115/230 V digital input extension module

---

### Contents of this chapter

This chapter describes the optional CHDI-01 115/230 V digital input extension module.

### Product overview

The CHDI-01 115/230 V digital input extension module expands the inputs of the drive control unit. It has six high voltage inputs and two relay outputs.

4 3-pin terminal blocks for 115/230 V inputs		3 Relay outputs	
70	HDI7	50	RO4C
71	HDI8	51	RO4A
72	NEUTRAL	52	RO4B
73	HDI9	53	RO5C
74	HDI10	54	RO5A
75	NEUTRAL	55	RO5B
76	HDI11		
77	HDI12		
78	NEUTRAL		

1) Neutral points 72, 75 and 78 are connected.



## Mechanical installation

### ■ Necessary tools

- Screwdriver and a set of suitable bits.

### ■ Unpacking and examining the delivery

1. Open the option package. Make sure that the package contains:
  - the option module
  - a mounting screw.
2. Make sure that there are no signs of damage.

### ■ Installing the module

See section [Installing option modules \(page 136\)](#).

## Electrical installation



### **WARNING!**

Obey the instructions in chapter [Safety instructions \(page 17\)](#). If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrician, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

### ■ Necessary tools

- Screwdriver and a set of suitable bits.

### ■ Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

## Start-up

### ■ Setting the parameters

1. Power up the drive.
2. If no warning is shown,

- make sure that the value of both parameters *15.01 Extension module type* and *15.02 Detected extension module* is CHDI-01.

If warning *A7AB Extension I/O configuration failure* is shown,

- make sure that the value of parameter *15.02* is CHDI-01.
- set parameter *15.01* value to CHDI-01.

You can now see the parameters of the extension module in parameter group *15 I/O extension module*.

3. Set the parameters of the extension module to applicable values.

### Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.


Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

## Fault and warning messages

Warning *A7AB Extension I/O configuration failure*.


## Technical data

Installation	Into an option slot on the drive control unit
Degree of protection	IP20 / UL Type 1
Ambient conditions	See the drive technical data.
Package	Cardboard
<b>Relay outputs (50...52, 53...55)</b>	
Maximum wire size	1.5 mm <sup>2</sup>
Minimum contact rating	12 V / 10 mA
Maximum contact rating	250 V AC / 30 V DC / 2 A
Maximum breaking capacity	1500 VA
<b>115/230 V inputs (70...78)</b>	
Maximum wire size	1.5 mm <sup>2</sup>
Input voltage	115 to 230 V AC ±10%
Maximum current leakage in digital off state	2 mA
<b>Isolation areas</b>	

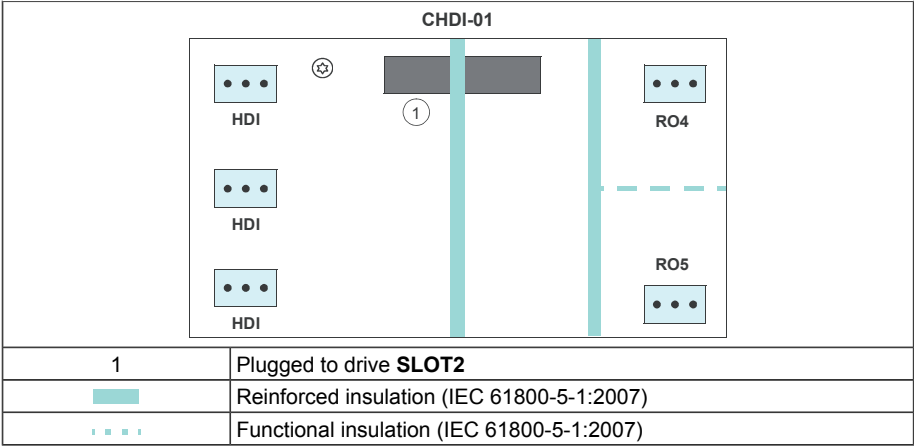

**Dimension drawing**

The dimensions are in millimeters and [inches].

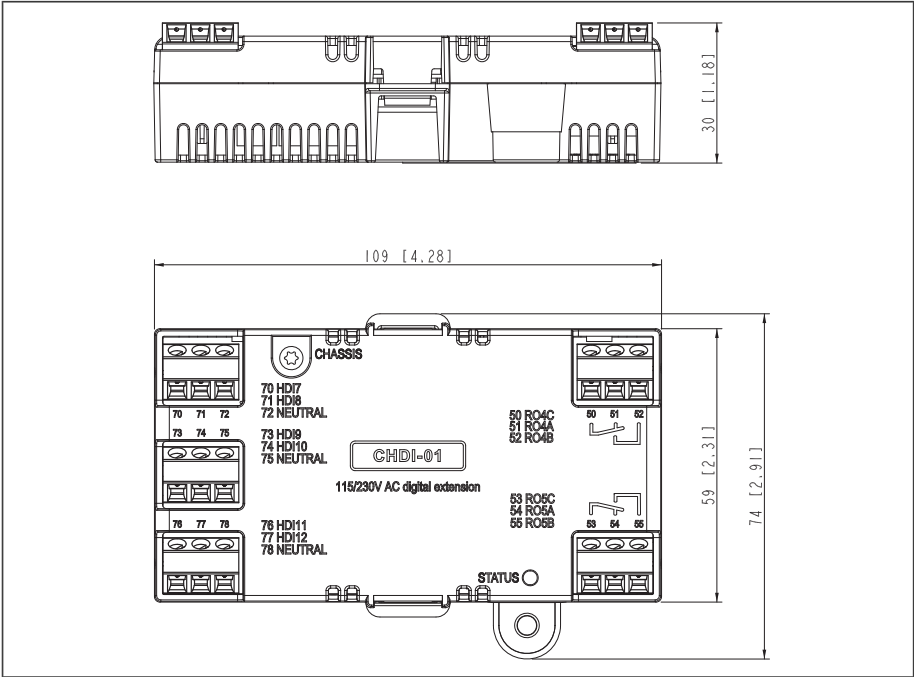



# 17

## CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O)

---

### Contents of this chapter

This chapter describes the optional CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O).

### Product overview


The CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O) expands the outputs of the drive control unit. It has two relay outputs and one transistor output, which can function as a digital or frequency output.

In addition, the extension module has an external power supply interface, which can be used to power up the drive control unit in case the drive power supply is not on. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control unit by default.

**Note:** With CCU-24 control unit, a CMOD-02 module is not necessary for external 24 V AC/DC supply connection. The external supply is connected directly to terminals 40 and 41 on the control unit.

---

Layout and example connections

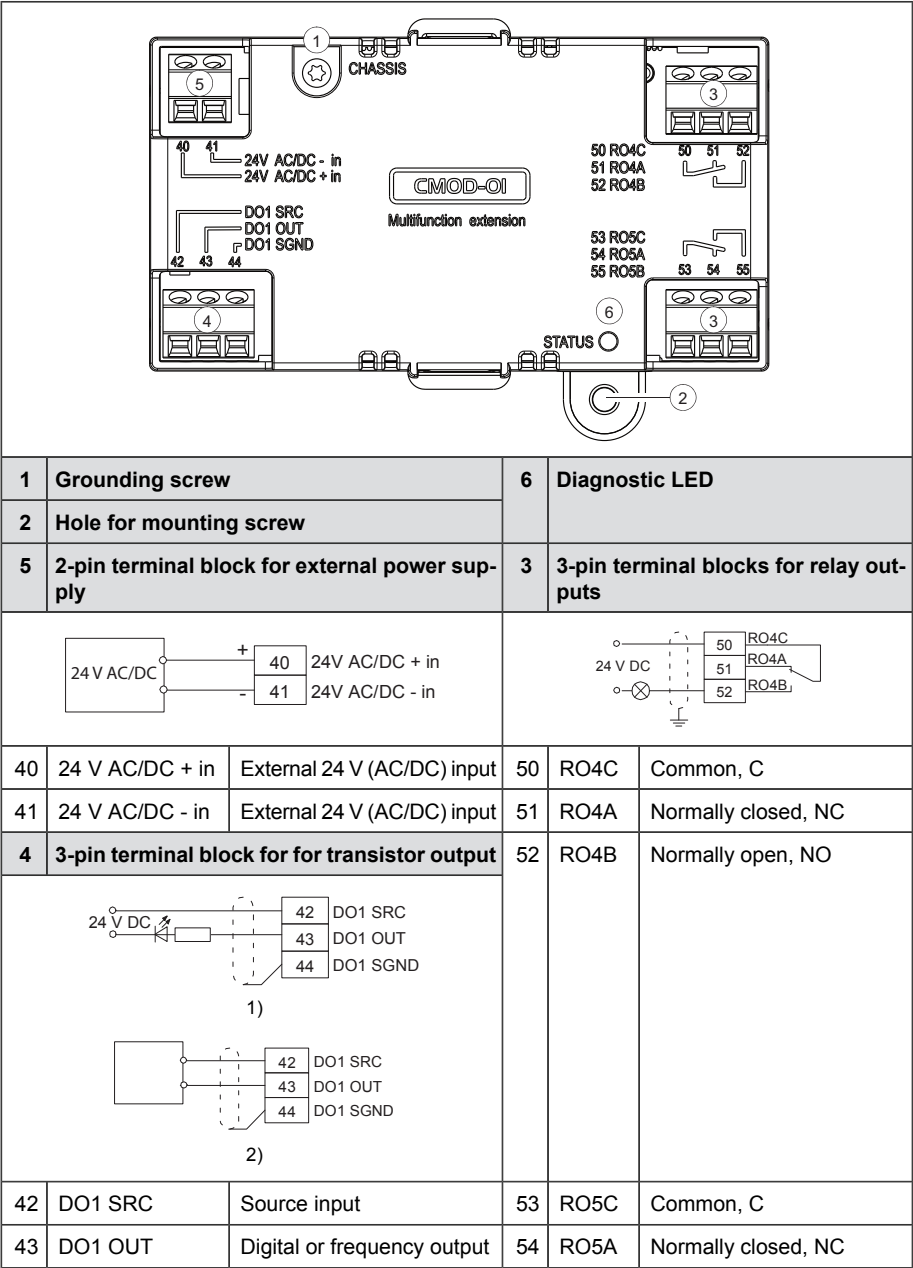

44	DO1 SGND	Ground (earth) potential	55	RO5B	Normally open, NO
----	----------	--------------------------	----	------	-------------------

1) Digital output connection example

2) An externally supplied frequency indicator which provides, for example:

- a 40 mA / 12 V DC power supply for the sensor circuit (CMOD frequency output)
- suitable voltage pulse input (10 Hz ... 16 kHz).

## Mechanical installation

### ■ Necessary tools

- Screwdriver and a set of suitable bits.

### ■ Unpacking and examining the delivery

1. Open the option package. Make sure that the package contains:
  - the option module
  - a mounting screw.

2. Make sure that there are no signs of damage.

### ■ Installing the module

See section [Installing option modules \(page 136\)](#).

## Electrical installation



### **WARNING!**

Obey the instructions in chapter [Safety instructions \(page 17\)](#). If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrician, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

### ■ Necessary tools

- Screwdriver and a set of suitable bits

### ■ Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

**WARNING!**

Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

## Start-up

### ■ Setting the parameters

1. Power up the drive.
2. If no warning is shown,
  - make sure that the value of both parameters *15.01 Extension module type* and *15.02 Detected extension module* is CMOD-01.

If warning *A7AB Extension I/O configuration failure* is shown,

- make sure that the value of parameter *15.02* is CMOD-01.
- set the parameter *15.01* value to CMOD-01.

You can now see the parameters of the extension module in parameter group *15 I/O extension module*.

3. Set the parameters of the extension module to applicable values.

Examples are given below.

#### Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

#### Parameter setting example for digital output

This example shows how to make digital output DO1 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.22 DO1 configuration	Digital output
15.23 DO1 source	Reverse
15.24 DO1 ON delay	1 s



Parameter	Setting
15.25 DO1 OFF delay	1 s

#### Parameter setting example for frequency output

This example shows how to make digital output DO1 of the extension module indicate the motor speed 0... 1500 rpm with a frequency range of 0...10000 Hz.

Parameter	Setting
15.22 DO1 configuration	Frequency output
15.33 Freq out 1 source	01.01 Motor speed used
15.34 Freq out 1 src min	0
15.35 Freq out 1 src max	1500.00
15.36 Freq out 1 at src min	1000 Hz
15.37 Freq out 1 at src max	10000 Hz

## ■ Diagnostics

### Faults and warning messages

Warning A7AB Extension I/O configuration failure.




### LEDs

The extension module has one diagnostic LED.

Color	Description
Green	The extension module is powered up.


## Technical data

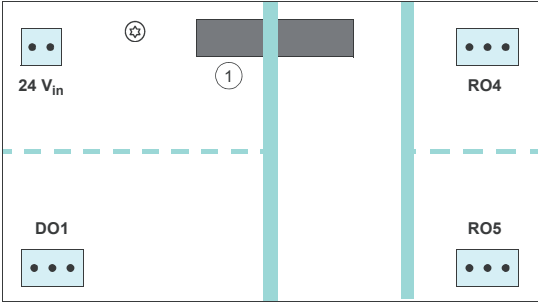Installation	Into an option slot on the drive control unit
Degree of protection	IP20 / UL Type 1
Ambient conditions	See the drive technical data.
Package	Cardboard
<b>Reley outputs (50...52, 53...55)</b>	
Maximum wire size	1.5 mm <sup>2</sup>
Minimum contact rating	12 V / 10 mA
Maximum contact rating	250 V AC / 30 V DC / 2 A
Maximum breaking capacity	1500 VA

Transistor output (42...44)	
Maximum wire size	1.5 mm <sup>2</sup>
Type	Transistor output PNP
Maximum load	4 kohm
Maximum switching voltage	30 V DC
Maximum switching current	100 mA / 30 V DC, short-circuit protected
Frequency	10 Hz ... 16 kHz
Resolution	1 Hz
Inaccuracy	0.2%
External power supply (40...41)	
Maximum wire size	1.5 mm <sup>2</sup>
Input voltage	24 V AC / V DC ±10% (GND, user potential)
Maximum power consumption	25 W, 1.04 A at 24 V DC
Isolation areas	
<div><p style="text-align: center;">CMOD-01</p></div>	
1	Plugged to drive <b>SLOT2</b>
	Reinforced insulation (IEC 61800-5-1:2007)
	Functional insulation (IEC 61800-5-1:2007)

## Dimension drawing

The dimensions are in millimeters and [inches].

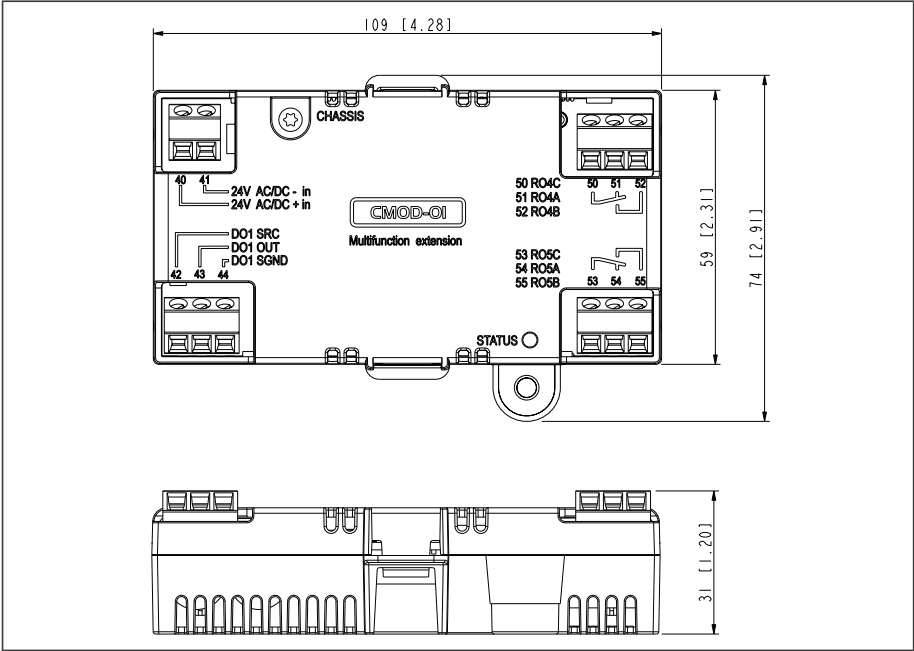



# 18

## CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)

---

### Contents of this chapter



This chapter describes the optional CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface).


### Product overview

The CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface) has a motor thermistor connection for supervising the motor temperature and one relay output, which indicates the thermistor status. In case the thermistor overheats, the drive trips on motor overtemperature. If Safe torque off tripping is required, the user must wire the overtemperature indication relay to the certified Safe torque off input of the drive.

In addition, the extension module has an external power supply interface, which can be used to power up the drive control unit in case the drive power supply is not on. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control unit by default.

---
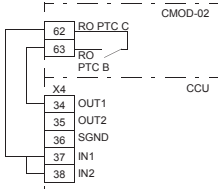
<b>3</b>	<b>2-pin terminal block for external power supply</b>	<b>4</b>	<b>2-pin terminal block for relay output</b>
			
<b>40</b>	<b>24 V AC/DC + in</b>	<b>62</b>	<b>RO PTC C</b>
<b>41</b>	<b>24 V AC/DC - in</b>	<b>63</b>	<b>RO PTC B</b>
External 24 V (AC/DC) input		Common, C	
External 24 V (AC/DC) input		Normally open, NO	

5	Motor thermistor connection		1	Grounding screw
<div></div> <p>One to six PTC thermistors connected in series.</p>				
60	PTC IN	PTC connection	2	Hole for mounting screw
61	PTC IN	Ground (earth) potential	6	Diagnostic LED

## Mechanical installation

### ■ Necessary tools

- Screwdriver and a set of suitable bits.

### ■ Unpacking and examining the delivery

1. Open the option package. Make sure that the package contains:

- the option module
- a mounting screw.

2. Make sure that there are no signs of damage.

### ■ Installing the module

See section [Installing option modules \(page 136\)](#).

## Electrical installation



### **WARNING!**

Obey the instructions in chapter [Safety instructions \(page 17\)](#). If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrician, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

### ■ Necessary tools and instructions

- Screwdriver and a set of suitable bits

■ **Wiring**

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.



**WARNING!** Do not connect the +24 V AC cable to the control unit ground when the control unit is powered using an external 24 V AC supply.

**Start-up**

■ **Setting the parameters**

1. Power up the drive.
2. If no warning is shown,
  - make sure that the values of both parameters *15.01 Extension module type* and *15.02 Detected extension module* are CMOD-02.

If warning *A7AB Extension I/O configuration failure* is shown,

- make sure that the value of parameter *15.02* is CMOD-02.
- set the parameter *15.01* value to CMOD-02.

You can now see the parameters of the extension module in parameter group *15 I/O extension module*.

**Diagnostics**

■ **Faults and warning messages**

Warning *A7AB Extension I/O configuration failure*.

■ **LEDs**

The extension module has one diagnostic LED.

Color	Description
Green	The extension module is powered up.


**Technical data**

Installation	Into option slot 2 on the drive control unit
Degree of protection	IP20 / UL Type 1
Ambient conditions	See the drive technical data.





316 CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)

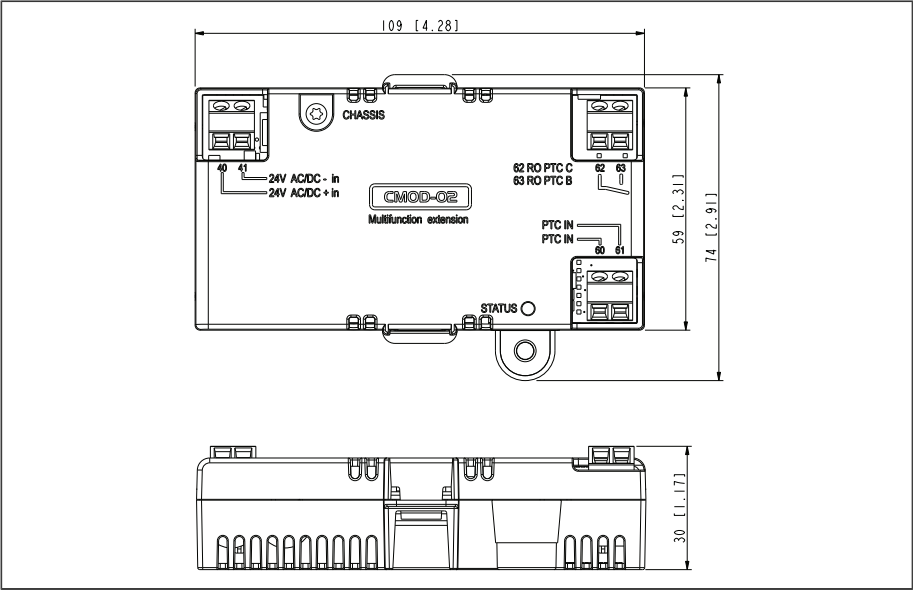

# 19





## Disconnecting EMC filter and ground-to-phase varistor

---

**When to disconnect the ground-to-phase varistor: TN-S, IT, corner-grounded delta and midpoint-grounded delta systems**

Frame size	Symmetrically grounded TN systems (TN-S systems), ie. center-grounded wye (A)	Corner-grounded (B1) and midpoint-grounded delta (B2) systems	IT systems (ungrounded or high-resistance grounded [ $>30$ ohms]) (C)
R6...R9	Do not disconnect EMC or VAR screws.	Do not disconnect EMC AC or VAR screws. Disconnect EMC DC screw.	Disconnect EMC screws (2 pcs) and VAR screw.
R10... R11	Do not disconnect VAR wire.	Do not disconnect VAR wire.	Disconnect VAR wire.

---

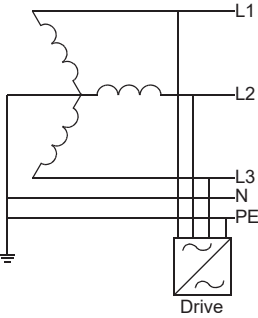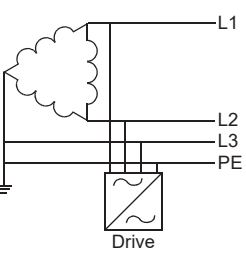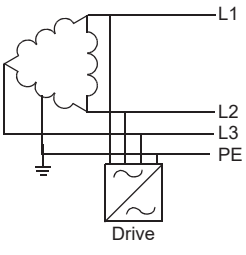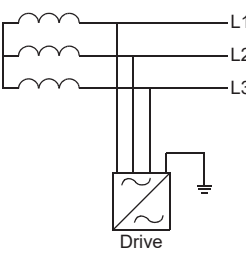Frame size	Symmetrically grounded TN systems (TN-S systems), ie. center-grounded wye (A)	Corner-grounded (B1) and midpoint-grounded delta (B2) systems	IT systems (ungrounded or high-resistance grounded [>30 ohms]) (C)
<div><div><p><b>A</b></p></div><div><p><b>B1</b></p><p><b>B2</b></p></div><div><p><b>C</b></p></div></div>			

These are the EMC filter and varistor screws in different drive frame sizes.

Frame size	EMC filter (+E200) screws	Ground-to-phase varistor screws
R6..R9	Two EMC screws	VAR

## Guidelines for installing the drive to a TT system

The drive can be connected to a TT system under these conditions:

1. Residual current device has been installed in the supply system.
2. This wire has been disconnected. Otherwise EMC filter and ground-to-phase varistor capacitor leakage current will cause the residual current device to trip.

Frame size	EMC filter screws	Ground-to-phase varistor screws
R6...R9	Two EMC screws	VAR
R10, R11	-	VAR

### Note:

- Because the varistor wire has been disconnected, ABB does not guarantee the EMC category.
- ABB does not guarantee the functioning of the ground leakage detector built inside the drive.
- In large systems the residual current device can trip without a real reason.

## Identifying the grounding system of the electrical power network



### WARNING!

Only a qualified electrical professional may do the work instructed in this section. Depending on the installation site, the work may even be categorized as live working. Continue only if you are an electrical professional certified for the work. Obey the local regulations. If you ignore them, injury or death can occur.

To identify the grounding system, examine the supply transformer connection. See the applicable electrical diagrams of the building. If that is not possible, measure these

voltages at the distribution board, and use the table to define the grounding system type.

1. input voltage line to line ( $U_{L-L}$ )
2. input voltage line 1 to ground ( $U_{L1-G}$ )
3. input voltage line 2 to ground ( $U_{L2-G}$ )
4. input voltage line 3 to ground ( $U_{L3-G}$ ).


The table below shows the line-to-ground voltages in relation to the line-to-line voltage for each grounding system.

$U_{L-L}$	$U_{L1-G}$	$U_{L2-G}$	$U_{L3-G}$	Electrical power system type
X	$0.58 \cdot X$	$0.58 \cdot X$	$0.58 \cdot X$	Symmetrically grounded TN system (TN-S system)
X	$1.0 \cdot X$	$1.0 \cdot X$	0	Corner-grounded delta system (nonsymmetrical)
X	$0.866 \cdot X$	$0.5 \cdot X$	$0.5 \cdot X$	Midpoint-grounded delta system (nonsymmetrical)
X	Varying level versus time	Varying level versus time	Varying level versus time	IT systems (ungrounded or high-resistance-grounded [ $>30$ ohms]) nonsymmetrical
X	Varying level versus time	Varying level versus time	Varying level versus time	TT system (the protective earth connection for the consumer is provided by a local earth electrode, and there is another independently installed at the generator)

## Disconnecting the EMC filter and ground-to-phase varistor (frames R6...R9)

To disconnect the internal EMC filter or ground-to-phase varistor, do as follows:


1. Switch off the power from the drive.
2. Open the cover, if not already opened.
3. To disconnect the internal EMC filter, remove the two EMC screws.
4. To disconnect the ground-to-phase varistor, remove the varistor screw.

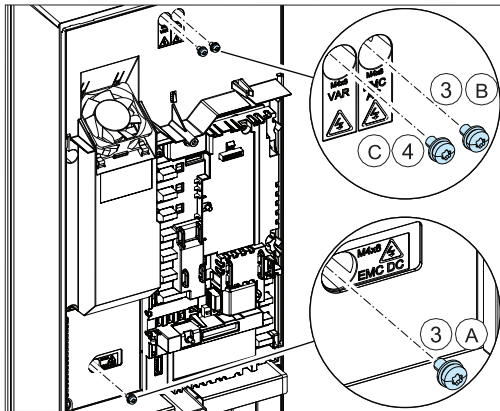

A	EMC (DC)
B	EMC (AC)
C	VAR

## Disconnecting the ground-to-phase varistor (frames R10 and R11)

Varistor (VAR) grounding wire is attached next to the control circuit compartment. Disconnect it. Insulate the end and attach it.

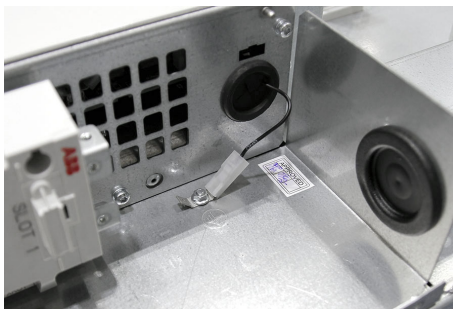







## Further information

### Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [www.abb.com/searchchannels](http://www.abb.com/searchchannels).

### Product training

For information on ABB product training, navigate to [new.abb.com/service/training](http://new.abb.com/service/training).

### Providing feedback on ABB manuals

Your comments on our manuals are welcome. Navigate to [new.abb.com/drives/manuals-feedback-form](http://new.abb.com/drives/manuals-feedback-form).

### Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at [www.abb.com/drives/documents](http://www.abb.com/drives/documents).



[www.abb.com/drives](http://www.abb.com/drives)



3AXD50000045815E